


CONTROLS AND DISPLAYS


Remote Control

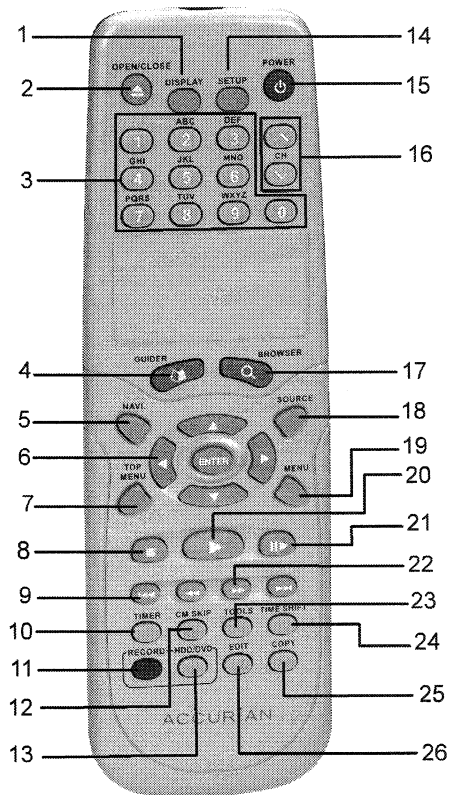

- 1) Display button (DISPLAY)
- 2) Open/Close button (▲ OPEN/CLOSE)
- 3) Number buttons (1~9,0)
- 4) Easy Guider Menu button (GUIDER)
- 5) Navigation button (NAVI)
- 6) Cursor (▲▼◀▶), Enter buttons (ENTER)
- 7) Top menu button (TOP MENU)
- 8) Stop button (■ STOP)
- 9) Skip buttons (◀◀ PREVIOUS/▶▶ NEXT)
- 10) Timer button (TIMER)
- 11) Record button (RECORD)
- 12) CM Skip button (CM SKIP)
- 13) HDD/DVD button (HDD/DVD)
- 14) Setup button (SETUP)
- 15) Power button (POWER)
- 16) CH ▲▼ buttons (CHANNEL)
- 17) Browser (BROWSER)
- 18) Source button (SOURCE)
- 19) Menu button (MENU)
- 20) Play button (▶ PLAY)
- 21) Pause/Step button (||▶ PAUSE/STEP)
- 22) REW./F.F. buttons (◀◀ REW./▶▶ F.F)
- 23) Disc Tools button (TOOLS)
- 24) Time Shift button (TIME SHIFT)
- 25) Copy button (COPY)
- 26) Edit button (EDIT)

To install batteries

 - Open the battery compartment and insert the batteries. Make sure the polarities (+ and -) match the marks indicated inside the remote control.
- Do not use rechargeable type batteries.



Remote sensor

The remote has a range of approximately 9 feet and works best when pointed directly at the unit horizontally at angles up to 30° from the front of the unit.

