



Remote Control Buttons

Plasma Display

Remote Control

Flip the cover open in the arrow direction.



1 Power button

Turns the PDP on and off.

2 Number buttons

3 Display button

Press to display information on the PDP screen.

4 Menu button

Displays the main on-screen menu.

5 CH (Channel) and VOL (Volume) buttons

Channel and Volume buttons are used for selecting menu items in the menu mode.

6 Mute button

Press to mute the PDP sound.

7 P.Mode button

Adjust the PDP picture by selecting one of the preset factory settings (or select your personal, customized picture settings.)

8 Aspect button

Press to change the screen size.

9 Mode button

Selects a target device to be controlled by the AKAI remote control (ie., VCR, Cable, or DVD players).

10 Clock Display button

Press to display clock on the PDP screen.

11 Source button

Press to display all of the available video sources (ie., Video, S-Video, Component1, Component2, PC(RGB)).

12 Joystick button

Use to highlight on-screen menu items and change menu values.

13 Still button

 
Press to pause the current screen.

14 PIP button

Activates picture in picture.

15 Source selection buttons

Press to directly select Video, S-Video, Component1, Component2 or PC(RGB).

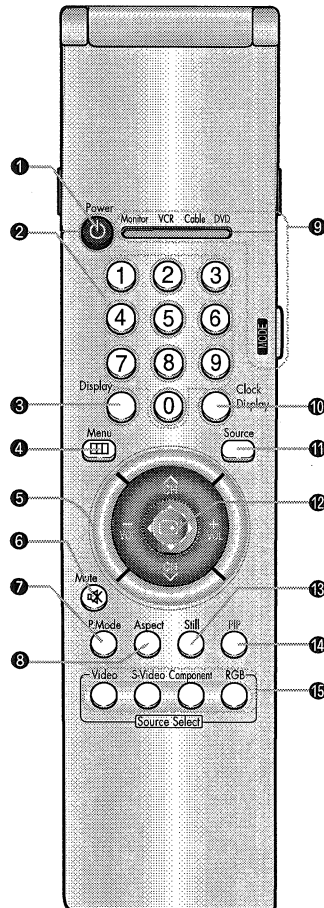

16 VCR control buttons

Controls VCR tape functions: Stop, Rewind, Play/Pause, Fast Forward.

17 SET button

Used during setup of this remote control, so that it will work compatibly with other devices (VCR, cable box, DVD, etc.)

18 Clock set button

Press to set clock.

19 PIP control buttons

Source : Press to select one of the available signal sources for the PIP window.

S.Sel : Press to select the Audio (PIP or Main).

Locate : Press to move the PIP window on the screen.

20 PC control buttons

 
Auto Adjust
Scaling
Zoom/Pan

21 S.Mode button

Adjust the PDP sound by selecting one of the preset factory settings (or select your personal, customized sound settings.)


22 Sleep button

Press to select a preset time interval for automatic shutdown.

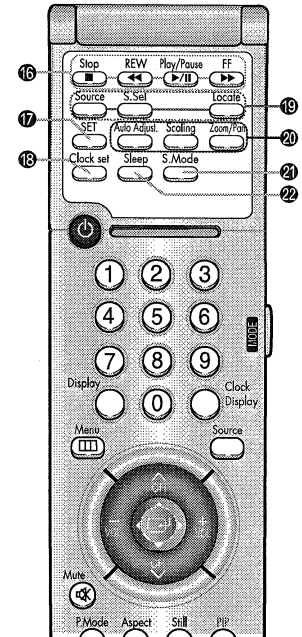


Installing the Batteries in Your Remote Control

 
1 Slide the back cover to open the battery compartment of the remote control

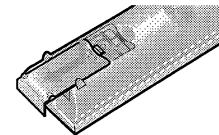

 2 Install two AAA size batteries. Make sure to match the "+" and "-" ends of the batteries with the diagram inside the compartment.

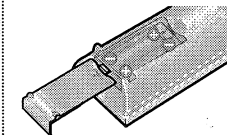

3 Slide the cover back into place.

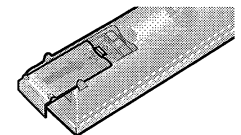 


Remote Control Operation Range.

You can use your remote control within a distance of 23 feet and an angle of 30 degrees from the left and right sides of the remote control receiver of the monitor.


+α Using the Key Lock

When Key Lock is set to ON, the buttons (SOURCE, MENU, VOLUME, SELECT, MUTE, POWER) on the front of the PDP will not operate. However, these buttons will operate when setting Key Lock OFF.

 - 1 Press the Menu button. Move the joystick up or down to select "SETUP", then press the joystick to enter.

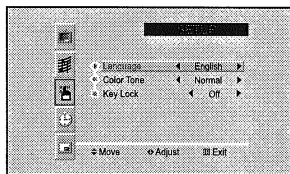

 - 2 Move the joystick up or down to select "Key Lock", then move the joystick left or right to select "On" or "Off".

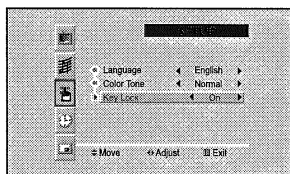

- 3 Press the Menu button to exit.

Plasma Display

 
+α Setting up Your Remote Control

This PDP's remote control can operate almost any VCR, cable box, or DVD. After it has been set up properly, your remote control can operate in four different modes: Monitor, VCR, Cable, or DVD. Pressing the corresponding button on the remote control allows you to switch between these modes, and control whichever piece of equipment you choose.

Note: The remote control may not be compatible with all DVD Players, VCRs, and Cable boxes.

Setting Up the Remote to Operate Your VCR, Cable box, or DVD player


- 1 Turn off your VCR. (or Cable box, DVD player.)




- 2 Press the MODE button and make sure that the VCR (or Cable box, DVD) LED is illuminated.



 
- 3 Press the Set button on your PDP's remote control.



 - 4 Using the number buttons on your remote control, enter three digits of the VCR (or Cable box, DVD) code listed on page 64 of this manual for your brand of VCR (or Cable box, DVD player). Make sure you enter three digits of the code, even if the first digit is a "0". (If more than one code is listed, try the first one.)

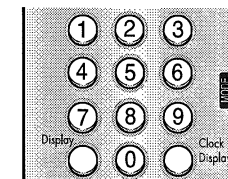

- 5 Press the Power button on the remote control. Your VCR (or Cable box, DVD player) should turn on if your remote is set up correctly. If your VCR (or Cable box, DVD player) does not turn on after set up, repeat steps 2, 3, and 4, but try one of the other codes listed for your brand of VCR (or Cable box, DVD player). If no other codes are listed, try each code, 000 through 089 (or Cable box: 0000 through 077, DVD player: 000 through 008).

 

Notes

- When your remote control is in "VCR" mode, the VCR control buttons (Stop, REW, Play/Pause, FF) still operate your VCR.
- When your remote control is in "Cable box" or "DVD" mode, the VCR control buttons (Stop, REW, Play/Pause, FF) still operate your VCR.

Remote Control Codes

VCR Codes

Admiral	006, 079	KLH	073	RCA	000, 005, 007, 008, 028,
Aiwa	015	LG	009, 014, 046, 060		035, 037, 054, 069
Akai	017, 022, 023, 027, 030	Lloyd	015	Samsung	007, 013, 022, 032, 042, 077
Audio Dynamics	014, 016	Logik	031	Sansui	016
Bell & Howell	002	LXI	015	Sanyo	002, 012
Broksonic	010	Magnavox	008, 029, 053, 056		013, 041, 049, 068
Candle	007, 009, 013, 045, 046, 052	Marantz	002, 008, 014, 016,	Scott	002, 005, 009, 012, 018,
Cannon	008, 053		029, 030, 046, 061		019, 035, 043, 048
Citizen	007, 009, 013, 045, 046, 052	Marta	009	Sharp	006, 027, 039, 045
Colortyme	014	MEI	008	Shintom	017, 026, 031, 055
Craig	007, 012	Memorex	008, 009, 012, 015	Signature	015
Curtis-Mathes	000, 007, 008, 014,	MGA	027	Sony	017, 026, 038
	015, 046, 053, 064, 067	Midland	032	Sylvania	008, 015, 029, 053, 056
Daewoo	013, 045, 076	Minota	005, 035	Symphonic	015
DBX	014, 016	Mitsubishi	005, 027, 035, 040	Tandy	002, 015
Dimensia	000	Montgomery ward	006	Tashiko	009
Dynatech	015	MTC	007, 015	Tatung	030
Electrohome	027	Multitech	007, 015, 031, 032	Teac	015, 030, 069
Emerson	008, 009, 010, 013, 015, 020, 023, 027,	NEC	002, 014, 016, 030, 046, 061, 064	Technics	008
034, 041, 042, 047, 049, 057, 062, 065, 067, 068, 070		Optimus	006	Termika	008, 009, 015, 021
Fisher	002, 012, 018, 019, 043, 048, 058	Panasonic	008, 053, 075, 077	TMK	067
Funai	015	Pentax	005, 035	Toshiba	005, 013, 019, 048, 049
GE	000, 007, 008, 032, 053	Pentax Reserch+	046	Totevision	007, 009
Go Video	007	Philco	008, 029, 053, 056	Unitech	007
Harman Kardon	014	Philips	008, 029	Vector Research	014, 016
Hitachi	005, 015, 035, 036	Pioneer	005, 016, 033, 050	Victor	016
Instant Replay	008	Portland	044, 045, 052	Video Concepts	014, 016
JC Penney	002, 005, 007, 008, 014,	ProScan	000	Videosonic	007
	016, 030, 035, 051, 053	Quartz	002	Wards	005, 006, 007, 008, 009,
JCL	008, 002, 014, 016, 030, 046	Quasar	008, 053		012, 013, 015, 027, 031, 035
JVC	002, 014, 088, 089	Radio Shack/Realist	002, 006, 008,	Yamaha	002, 014, 016, 030, 046
Kenwood	002, 014, 016, 030, 046		009, 012, 015, 019, 027, 045, 053	Zenith	011, 017, 026, 079

Cable Box Codes

Anvision	007, 008	NSC	009	Signature	046
Cablestar	007, 008	Oak	016, 038	Sprucer	027
Eagle	007, 008	Osk Sigma	016	Starcom	046
Eastern Int.	002	Panasonic	003, 027, 039, 061,	Stargate 2000	058
General Instrument	046		073, 074	Sylvania	011, 059
GI	004, 005, 015, 023, 024,	Philips	007, 008, 019, 021, 026,	Texscan	011, 059
025, 030, 036, 067, 068, 069			028, 029, 032, 033, 040, 041	Tocom	017, 021, 049, 050, 055, 073
Hamlin	003, 012, 013, 034, 048	Pioneer	018, 020, 044, 074, 077	Unika	031, 032, 041
Hitachi	037, 043, 046	Randtek	007, 008	Universal	051, 052
Jerrold	004, 005, 015, 023, 024,	RCA	000, 027, 066	Viewster	007, 008, 019, 021, 026,
025, 030, 036, 046, 062, 065		Regal	003, 012, 013		028, 029, 032, 033, 040, 041
Macom	037, 043	Regency	002, 033	Warner Amex	044
Magnavox	007, 008, 019, 021,	SA	070, 071, 072	Zenith	014, 042, 057, 061,
026, 028, 029, 032, 033, 040, 041		Samsung	044, 003, 022, 063, 064		075, 076

DVD Codes

Philips	001
Proscan	002
RCA	002
Toshiba	003
Panasonic	004
Sony	008
Samsung	000

P L A S M A D I S P L A Y P A N E L

Appendix



Troubleshooting.....	68
Care and Maintenance	69
Specifications	70