 


## YOUR NEW 3WAY COMBINATION UNIT

### Remote Control (TV Function Buttons)

You can use the remote control up to about 23 feet from the TV.  
When using the remote, always point it directly at the TV.

- 1 POWER**  
Turns the 3way Combination Unit on and off.
- 2 +100**  
Press to select channels over 100. For example, to select channel 121, press "+100," then press "2" and "1."
- 3 VOL +, VOL -**  
Press increase or decrease the volume.
- 4 MUTE**  
Press to temporarily cut off the sound.
- 5 S.STD**  
Adjust the TV sound by selecting one of the preset factory settings (or select your personal, customized sound settings).
- 6 P.STD**  
Adjust the TV picture by selecting one of the preset factory settings (or select your personal, customized picture settings).
- 7 MENU**  
Displays the main on-screen menu.
- 8 Control the cursor in the menu**  
Allows move to items.

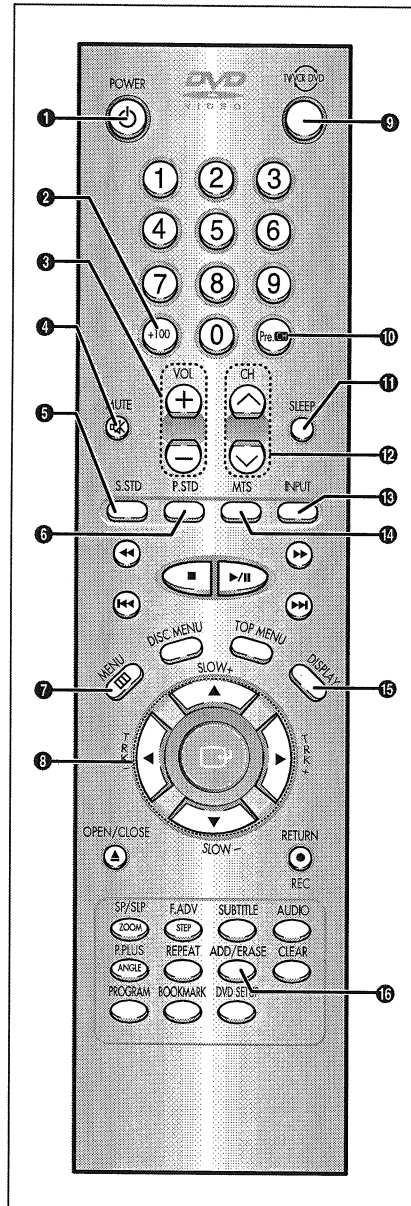 


- 9 TV/VCR ↔ DVD selection**  
Press to switch between TV/VCR, and DVD mode.
- 10 PRE-CH**  
Tunes to the previous channel.
- 11 SLEEP**  
Press to select a preset time interval for automatic shutoff.
- 12 CH ∨ and CH ^ (Channel Down/Up)**  
Press CH ∨ or CH ^ to change channels.
- 13 INPUT**  
Press to watch the TV picture or a picture from a connected component (VCR, camcorder etc...)
- 14 MTS (Multichannel Television Stereo)**  
Press to choose stereo, mono or Separate Audio Program (SAP broadcast).
- 15 DISPLAY**  
Press to see the channel, time, current disc mode, audio/video settings etc., on-screen.
- 16 ADD/ERASE**  
Press to add or erase channels in the TV's memory.

## YOUR NEW 3WAY COMBINATION UNIT

### Remote Control (DVD Function Buttons)

- 1 Search**  
Press to search forward/backward through a disc.
- 2 Stop**  
Press to stop a disc.
- 3 DISC MENU**  
Press to display the disc menu.
- 4 ENTER**  
Confirms a selection.
- 5 OPEN/CLOSE**  
Press to open or close the disc tray.
- 6 STEP**  
Press to advance play one frame at a time.
- 7 ZOOM**  
Press to zoom-in during playback, slow motion or pause mode on the selected area of a scene.
- 8 ANGLE**  
Press to access various camera angles on a DVD.
- 9 PROGRAM**  
For random and program play.
- 10 BOOKMARK**  
Press to memorize scenes for replay.

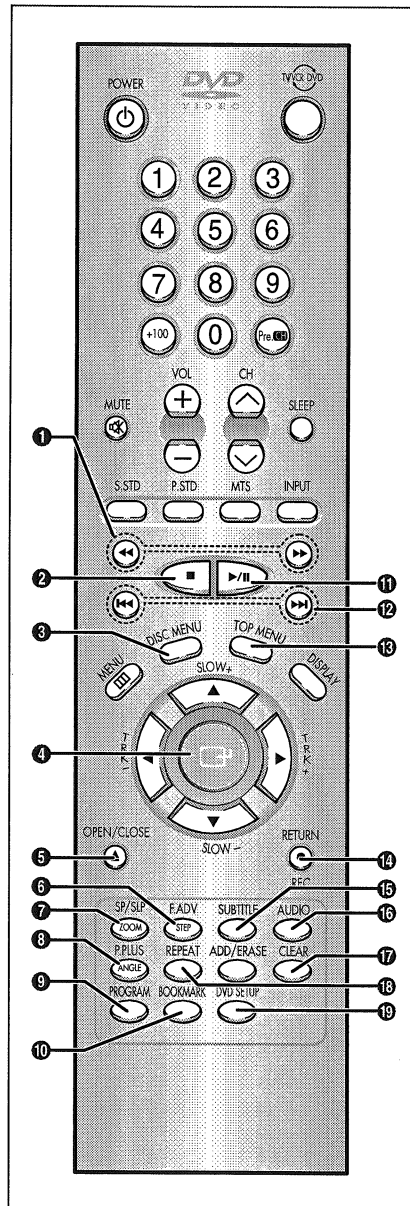


- 11 Play/pause**  
Press to play or pause disc play.
- 12 Skip**  
Press to skip the title, chapter, or track.
- 13 TOP MENU**  
Press to display the top menu on a DVD or CD/VCD disc.
- 14 RETURN**  
Press to return to a previous menu or exit.
- 15 SUBTITLE**  
Press to display the subtitle language name abbreviation on-screen.
- 16 AUDIO**  
Press to access various audio functions on a disc.
- 17 CLEAR**  
Press to clear on-screen displays.
- 18 REPEAT**  
Press to repeat play a title, chapter, track, or disc.
- 19 DVD SETUP**  
Displays the DVD play's Setup menu.

# YOUR NEW 3WAY COMBINATION UNIT
 
## Remote Control (VCR Function Buttons)

- 1 REW/F.F**  
Press to rewind/fast forward a video tape.
- 2 Stop**  
Press to stop a video tape.
- 3 TRK+, - (tracking)**  
Press to adjust tape tracking.
- 4 OPEN/CLOSE**  
Press to eject a tape.
- 5 SP/SLP**  
Press to select the tape recording speed.
- 6 P.PLUS**  
Press to compensate for a poor rental tape.

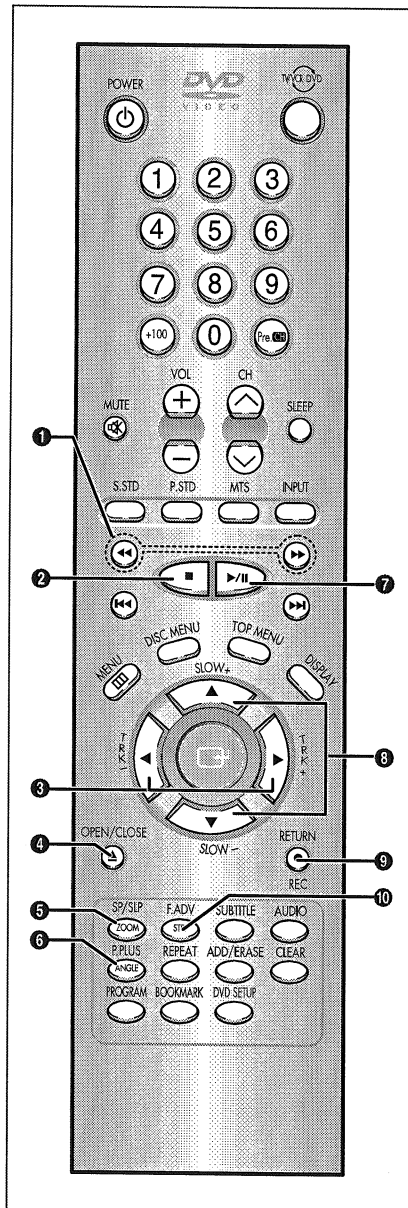


- 7 Play/pause**  
Press to play or pause a tape.
- 8 SLOW+, -**  
Press to watch a tape in slow motion.
- 9 REC**  
Press to begin recording.
- 10 F.ADV (frame advance)**  
Press to advance a tape frame-by-frame.

## INSTALLATION
 
### Installing Batteries in the Remote Control


**1**

Slide the cover out completely.

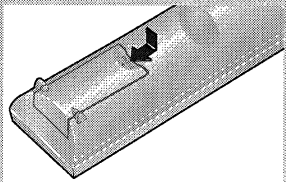

**2**

 
Install two AA size batteries.

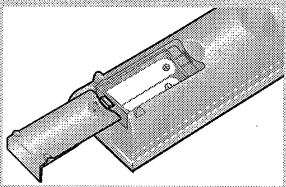

◀ Make sure to match the “+” and “-” ends of the batteries with the diagram inside the compartment.

**3**

 Replace the cover.

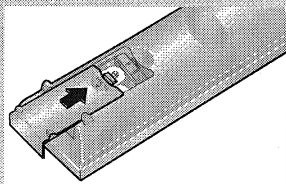

◀ Remove the batteries and store them in a cool, dry place if you won't be using the remote control for a long time.

The remote control can be used up to about 23 feet from the TV.

(Assuming typical TV usage, the batteries last for about one year.)