

## YOUR NEW TV

### Learning about your new TV, continued

#### Remote control

You can use the remote control up to a distance of about 23 feet from the TV. When using the remote, always point it directly at the TV.

##### ❶ POWER

Press to turn the TV on and off.

##### ❷ Number buttons

Press to directly select channels on the TV.

##### ❸ +100

Press to directly select channels over 100. For example, to select channel 121, press +100, then press 2 and 1.

##### ❹ MUTE

Press to mute (silence) the volume.

##### ❺ CH ▲ and CH ▼ (Channel)

Press CH ▲ or CH ▼ to change channels. Also use with the on-screen menu system.

##### ❻ TV/VIDEO

Press to watch TV picture and a picture from a connected component (VCR, LDP etc.).

##### ❼ SURF

Press when viewing a channel to automatically return to that channel after an amount of time that you set.

##### ❽ SLEEP

Press for the TV to automatically turn off after an amount of time that you set.

##### ❾ MTS

Press to select stereo, mono, or secondary audio program (SAP).

##### ❿ PRE-CH (Previous Channel)

Press to see the last channel you were watching.

##### ⓫ DISPLAY

 
Press to see the time, channel, etc., on-screen. Also press to exit (quit) the menu system.

##### ⓬ VOL - and VOL + (Volume)

Press VOL - to lower the volume; press VOL + to raise the volume. Also use with the menu system.

##### ⓭ MENU

Press this button to see the easy-to-use menu system.

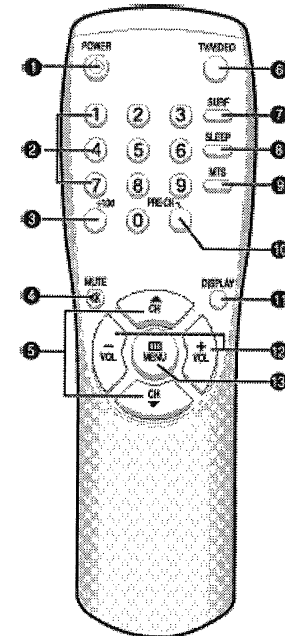

## INSTALLATION

### Connecting a camcorder

 
You can connect a camcorder to your TV, which enables you to view camcorder tapes without a VCR.

✓ The audio and video cables mentioned in the steps below are usually included with a camcorder. You can also purchase them at your local electronics store.


- 1 Locate the camcorder's A/V output jacks on the camcorder.
- 2 Connect an audio cable to the camcorder's AUDIO OUT terminal.




- 3 Connect the other end of the cable to the TV's AUDIO IN terminal.



 - 4 Connect a video cable to the camcorder's VIDEO OUT terminal.




 - 5 Connect the other end of the cable to the TV's VIDEO IN terminal.




### Installing batteries in the remote control

 
- 1 Pull the cover to the full to take it out

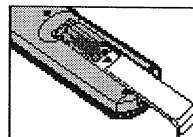

 - 2 Install two AA size batteries. Make sure to match the + and - ends of the batteries with the diagram inside the compartment.

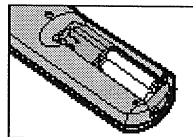

- 3 Replace the lid.

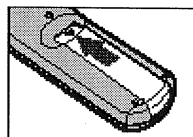 

- ✓ Remove the batteries and store them in a cool, dry place if you won't be using the remote control for a long time.
- ✓ The remote control can be used up to about 23 feet from the TV.
- ✓ Batteries last for about one year.