

YOUR NEW TV

Learning about your new TV, continued

 
Remote control

You can use the remote control up to a distance of about 23 feet from the TV. When using the remote, always point it directly at the TV.

- 1 POWER**
Press to turn the TV on and off.
- 2 Number buttons**
Press to directly select channels on the TV.
- 3 +100**
Press to directly select channels over 100. For example, to select channel 121, press +100, then press 2 and 1.
- 4 MUTE**
Press to mute (silence) the volume.
- 5 CH ▲ and CH ▼ (Channel)**
Press CH ▲ or CH ▼ to change channels. Also use with the on-screen menu system.

- 6 TV/VIDEO**
Press to watch TV picture and a picture from a connected component (VCR, LDP etc.).
- 7 SURF**
Press when viewing a channel to automatically return to that channel after an amount of time that you set.
- 8 SLEEP**
Press for the TV to automatically turn off after an amount of time that you set.
- 9 MTS**
Press to select stereo, mono, or secondary audio program (SAP).
- 10 PRE-CH (Previous Channel)**
Press to see the last channel you were watching.

- 11 DISPLAY**
Press to see the time, channel, etc., on-screen. Also press to exit (quit) the menu system.
- 12 VOL – and VOL + (Volume)**
Press VOL – to lower the volume; press VOL + to raise the volume. Also use with the menu system.
- 13 MENU**
Press this button to see the easy-to-use menu system.

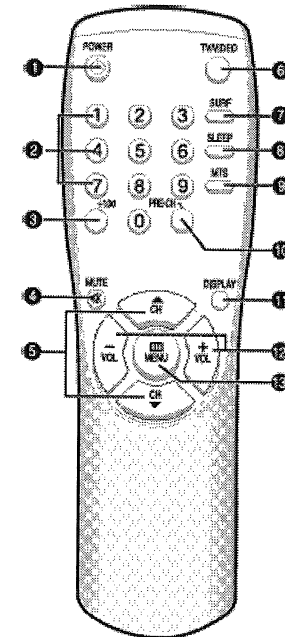

INSTALLATION

Connecting a camcorder

You can connect a camcorder to your TV, which enables you to view camcorder tapes without a VCR.

✓ The audio and video cables mentioned in the steps below are usually included with a camcorder. You can also purchase them at your local electronics store.

 
- 1 Locate the camcorder's A/V output jacks on the camcorder.
- 2 Connect an audio cable to the camcorder's AUDIO OUT terminal.




- 3 Connect the other end of the cable to the TV's AUDIO IN terminal.



- 4 Connect a video cable to the camcorder's VIDEO OUT terminal.




 - 5 Connect the other end of the cable to the TV's VIDEO IN terminal.




Installing batteries in the remote control

 
- 1 Pull the cover to the full to take it out

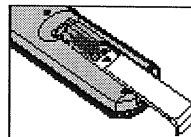

 - 2 Install two AA size batteries. Make sure to match the + and - ends of the batteries with the diagram inside the compartment.

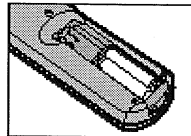

- 3 Replace the lid.

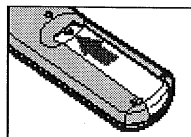 

- ✓ Remove the batteries and store them in a cool, dry place if you won't be using the remote control for a long time.
- ✓ The remote control can be used up to about 23 feet from the TV.
- ✓ Batteries last for about one year.