 


YOUR NEW 3WAY COMBINATION UNIT

Remote Control (TV Function Buttons)

You can use the remote control up to about 23 feet from the TV.
When using the remote, always point it directly at the TV.

- 1 POWER**
Turns the 3way Combination Unit on and off.
- 2 +100**
Press to select channels over 100. For example, to select channel 121, press "+100," then press "2" and "1."
- 3 VOL +, VOL -**
Press increase or decrease the volume.
- 4 MUTE**
Press to temporarily cut off the sound.
- 5 S.STD**
Adjust the TV sound by selecting one of the preset factory settings (or select your personal, customized sound settings).
- 6 P.STD**
Adjust the TV picture by selecting one of the preset factory settings (or select your personal, customized picture settings).
- 7 MENU**
Displays the main on-screen menu.
- 8 Control the cursor in the menu**
Allows move to items.

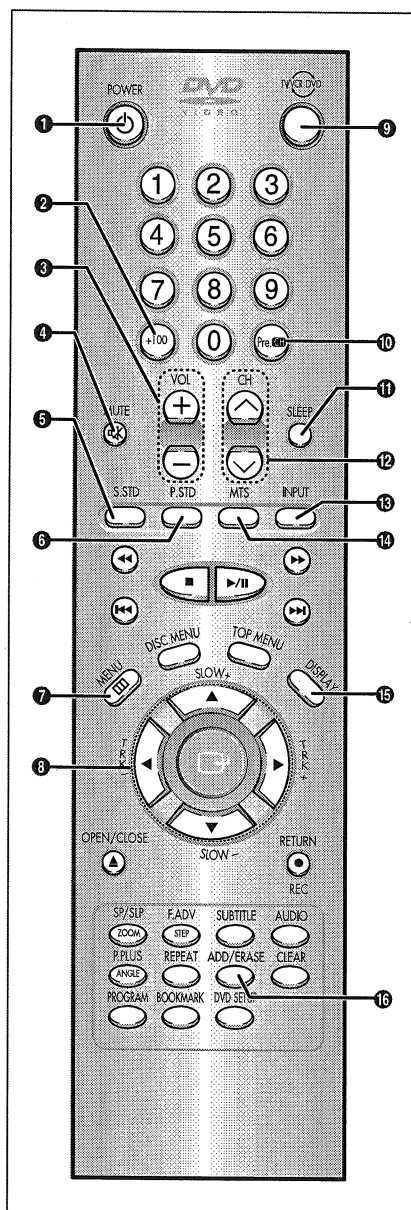 


- 9 TV/VCR ↔ DVD selection**
Press to switch between TV/VCR, and DVD mode.
- 10 PRE-CH**
Tunes to the previous channel.
- 11 SLEEP**
Press to select a preset time interval for automatic shutoff.
- 12 CH ∨ and CH ∧ (Channel Down/Up)**
Press CH ∨ or CH ∧ to change channels.
- 13 INPUT**
Press to watch the TV picture or a picture from a connected component (VCR, camcorder etc...)
- 14 MTS (Multichannel Television Stereo)**
Press to choose stereo, mono or Separate Audio Program (SAP broadcast).
- 15 DISPLAY**
Press to see the channel, time, current disc mode, audio/video settings etc., on-screen.
- 16 ADD/ERASE**
Press to add or erase channels in the TV's memory.

YOUR NEW 3WAY COMBINATION UNIT

Remote Control (DVD Function Buttons)

- 1 Search**
Press to search forward/backward through a disc.
- 2 Stop**
Press to stop a disc.
- 3 DISC MENU**
Press to display the disc menu.
- 4 ENTER**
Confirms a selection.
- 5 OPEN/CLOSE**
Press to open or close the disc tray.
- 6 STEP**
Press to advance play one frame at a time.
- 7 ZOOM**
Press to zoom-in during playback, slow motion or pause mode on the selected area of a scene.
- 8 ANGLE**
Press to access various camera angles on a DVD.
- 9 PROGRAM**
For random and program play.
- 10 BOOKMARK**
Press to memorize scenes for replay.

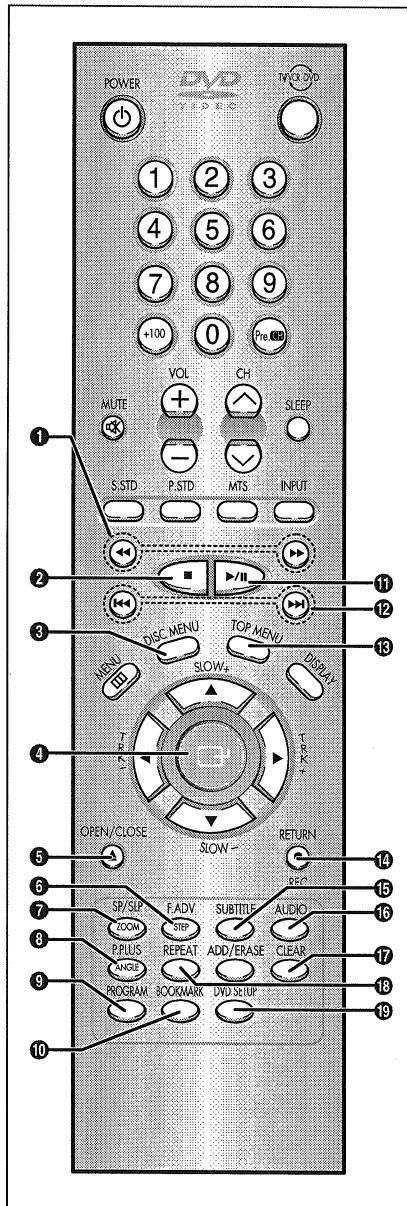


- 11 Play/pause**
Press to play or pause disc play.
- 12 Skip**
Press to skip the title, chapter, or track.
- 13 TOP MENU**
Press to display the top menu on a DVD or CD/VCD disc.
- 14 RETURN**
Press to return to a previous menu or exit.
- 15 SUBTITLE**
Press to display the subtitle language name abbreviation on-screen.
- 16 AUDIO**
Press to access various audio functions on a disc.
- 17 CLEAR**
Press to clear on-screen displays.
- 18 REPEAT**
Press to repeat play a title, chapter, track, or disc.
- 19 DVD SETUP**
Displays the DVD play's Setup menu.

YOUR NEW 3WAY COMBINATION UNIT

Remote Control (VCR Function Buttons)

 - 1 **REW/F.F**
Press to rewind/fast forward a video tape.
- 2 **Stop**
Press to stop a video tape.
- 3 **TRK+, - (tracking)**
Press to adjust tape tracking.
- 4 **OPEN/CLOSE**
Press to eject a tape.
- 5 **SP/SLP**
Press to select the tape recording speed.
- 6 **P.PLUS**
Press to compensate for a poor rental tape.

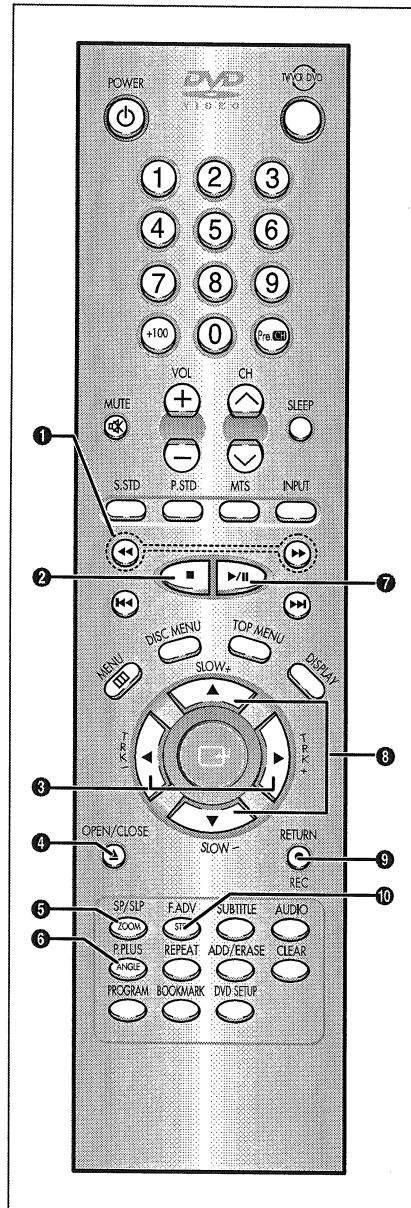


- 7 **Play/pause**
Press to play or pause a tape.
- 8 **SLOW+, -**
Press to watch a tape in slow motion.
- 9 **REC**
Press to begin recording.
- 10 **F.ADV (frame advance)**
Press to advance a tape frame-by-frame.

INSTALLATION

Installing Batteries in the Remote Control


1

 Slide the cover out completely.

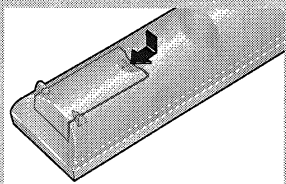

2

 
Install two AA size batteries.

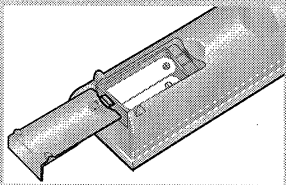

◀ Make sure to match the “+” and “-” ends of the batteries with the diagram inside the compartment.

3

 Replace the cover.

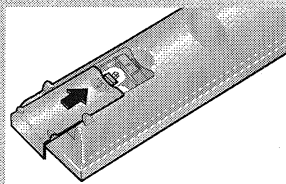

◀ Remove the batteries and store them in a cool, dry place if you won't be using the remote control for a long time.

The remote control can be used up to about 23 feet from the TV.

(Assuming typical TV usage, the batteries last for about one year.)