

## OPERATING INSTRUCTIONS

### 4.4 Remote Control

- ① **Standby**(⏻): Press this button to turn off to standby and turn on from standby.
- ② **Mute**(⏸): Press this button to quiet the sound system. Press again to reactivate the sound system.
- ③ **Number buttons**: Use these buttons to enter the password.
- ④ **Source**: Press this button and use ▲ / ▼ button to select the signal sources. VIDEO, S-VIDEO, YPbPr 1, YPbPr 2, VGA or HDMI.
- ⑤ **Sleep**: Press this button to select the sleep time, such as "15 Min, 30 Min, 45Min, 60 Min, 90 Min, 120 Min or Off".
- ⑥ **VOL +/-**: Press these buttons to increase or decrease the volume.
- ⑦ **P. Mode**: Press the button to select different picture effect, such as "Nature, Bright, User or Soft".
- ⑧ **System**: Press this button to select the color system, such as "PAL, NTSC or AUTO". (Only for VIDEO and S-VIDEO)
- ⑨ **Enter**: Press to enter or confirm.  
◀ / ▶ : They are used as ◀ / ▶ buttons in the OSD Menu screen. ▶ also has enter function.  
▲ / ▼ : They are used as ▲ / ▼ buttons in the OSD Menu screen.
- ⑩ **Exit**: Press this button to exit the OSD Menu.
- ⑪ **Menu**: Press this button to pop up the OSD Menu and press it again to exit the OSD Menu.
- ⑫ **V-Chip**: Press this button to enter the V-Chip Function. (Only for VIDEO and S-VIDEO)
- ⑬ **Freeze**: Press this button to hold on the screen. Press again to normal.
- ⑭ **C/C**: Press this button to change the CC mode. (Only for VIDEO and S-VIDEO)
- ⑮ **Display**: Press the button to display the source information.
- ⑯ **S. Mode**: Press the button to select different sound effect, such as "Normal, News, Music or User".
- ⑰ **P. Size**: Press this button, the picture will change according to Full, Zoom, Letter Box or 4:3. (Inactive for VGA)

