

4.4 Remote Control

- ① **Power** (⏻): Press to turn on and off.
- ② **Mute** (⏸): Press to mute the sound. Press again or press VOL+/- to restore the sound.
- ③ **0~9 Number Buttons**: In TV mode, press 0~9 to select a channel; the channel changes after 2 seconds.
- ④ **EPG**: Press to display EPG(Electronic Program Guide) menu.
- ⑤ **Source** (↔): Press to select the signal sources.
- ⑥ **DTV**: Press to select Digital TV mode.
- ⑦ **Dot**: Press number buttons with it to select the channels directly in DTV.
- ⑧ **VOL +/-**: Press to adjust the volume.
- ⑨ **CH +/-**: Press to changes channels.
- ⑩ **MTS**: Press to repeatedly to cycle through the Multi-channel TV sound (MTS) options. Such as Stereo, Mono, or Separate Audio Program (SAP broadcast).
- ⑪ **◀, ▶, ▲, ▼, Enter**: Press ◀, ▶, ▲, ▼ to move the on-screen cursor. To select an item, press Enter to confirm.
- ⑫ **Exit**: Press to return or exit the OSD menu.
- ⑬ **Menu**: Press to display the OSD menu.
- ⑭ **V-Chip**: Press to select the child protect mode.
- ⑮ **CCD**: Press to select the Closed Caption mode.
- ⑯ **Freeze**: Press to freeze the picture, press again to restore the picture. (This button is not available for VGA mode.)
- ⑰ **Display**: Press to display the channel information and it disappear after 3 seconds.
- ⑱ **Favorite**: Press repeatedly to cycle through the favorite channel list.
- ⑲ **Add/Erase**: Press to add or delete favorite channel.
- ⑳ **S.Mode**: Adjust the TV sound by selecting one of the preset factory settings, such as Normal, News, Cinema, Concert, or User.
- ㉑ **PIC.Size**: Press to change the screen size, such as Full, 4:3, Panoramic. (Note: In VGA mode, it can select picture size is Full. While in DTV mode, it can select picture size is: Full and 4:3.)
- ㉒ **Recall**: Press to return to previous channel.
- ㉓ **Sleep**: Press to sleep a time for the TV to turn off automatically, such as 15Min, 30Min, 60Min, 90Min, 120Min and, OFF. To cancel sleep time, press Sleep repeatedly until sleep OFF appears.
- ㉔ **P.Mode**: Adjust the TV picture by selecting one of the preset factory settings, such as Hi-Bright, User, Cinema, Normal and Vivid.
- ㉕ **System**: Press repeatedly to cycle through the system options: AUTO, NTSC3.58 and PAL. (This button is activate for AV, S-Video input source.)
- ㉖ **Color Buttons**:
 - Red**: Press this button to access the red item or page.
 - Blue**: Press this button to access the blue item or page.
 - Green**: Press this button to access the green item or page.
 - Yellow**: Press this button to access the yellow item or page.

