


OPERATING INSTRUCTIONS


4.4 Remote Control

- 1 **Standby** (⏻): Press to turn on and off.
- 2 **Mute** (🔇): Press to mute the sound. Press again to restore the sound.
- 3 **0~9 Number Buttons**: Press 0~9 to select a channel, and used to input the password; the channel changes after 2 seconds.
- 4 **EPG**: Press to display EPG mode. Press it again to exit EPG mode.
- 5 **Input**: Press to select the signal source, such as DTV, TV, AV, S-Video, Component 1, Component 2, VGA, or DVI.
- 6 **DTV**: Press to choose DTV directly.
- 7 **Dot**: Press number buttons with it to select the channels directly in DTV.
- 8 **VOL +/-**: Press to adjust the volume.
- 9 **CH +/-**: Press to select the channel forward or backward.
- 10 **MTS**: Press repeatedly to cycle through the Multi-channel TV sound (MTS) options: Mono, Stereo and SAP (Second Audio Program).
- 11 **◀, ▶, ▲, ▼, Enter**: Press **◀, ▶, ▲, ▼** to move the on-screen cursor. To select an item, press **Enter** to confirm.
- 12 **Exit**: Press this button to exit.
- 13 **Menu**: Press to enter into the on-screen setup menu, press again to exit.
- 14 **V-Chip**: Press to select the child protect mode.
- 15 **CCD**: Press to select the Closed Caption mode.
- 16 **Freeze**: Press to freeze the picture, press again to restore the picture.
- 17 **Display**: Press to display the channel information and it disappear after 3 seconds.
- 18 **Favorite**: Press repeatedly to cycle through the favorite channel list.
- 19 **Add/Erase**: Press to add or delete favorite or dislike channels.
- 20 **S.Mode**: Press repeatedly to cycle through the sound mode: Normal, News, Cinema, Flat and User.
- 21 **PIC Size**: Press repeatedly to cycle through the picture size that best corresponds your viewing requirements: Normal, Full, Wide1, Wide2, Wide3, 4:3, No Scale and Panoramic.

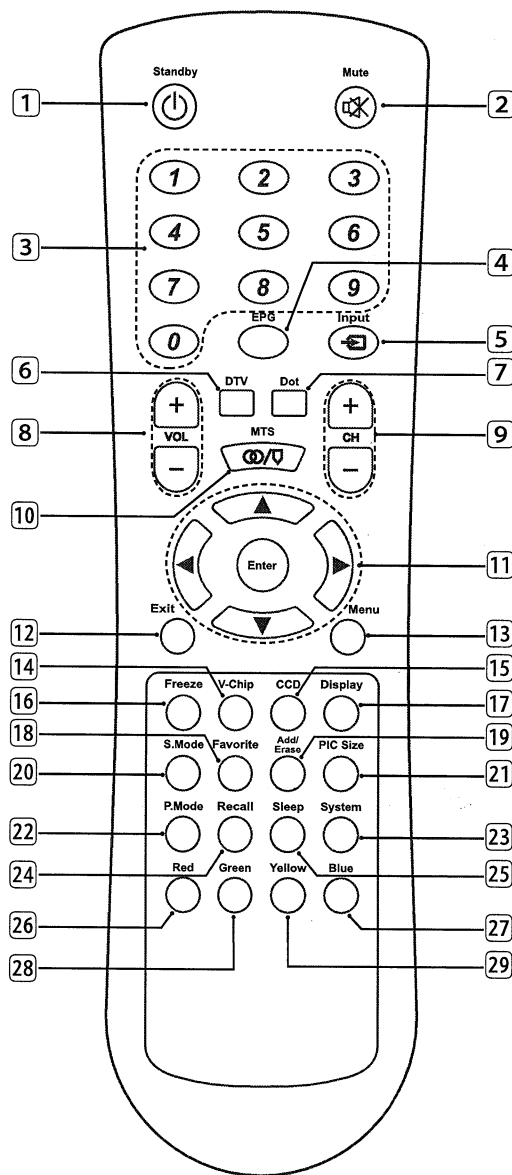

(Continued on next page)

- 22 **P.Mode:** Press repeatedly to cycle through the picture mode: Normal, Vivid, Hi-Bright, User and Dark.
- 23 **System:** Press repeatedly to cycle through the system options: AUTO, NTSC 3.58 and PAL. (Only for AV or S-Video)
- 24 **Recall:** Press to return to previous channel.
- 25 **Sleep:** Press repeatedly until it displays the time in minutes (5 Min, 10 Min, 15 Min, 30 Min, 60 Min, 90 Min, 120 Min and, OFF) that you want the TV to remain on before shutting off. To cancel sleep time, press SLEEP repeatedly until sleep OFF appears.
- 26 **Red:** Press this button to access the red item or page.
- 27 **Blue:** Press this button to access the blue item or page.
- 28 **Green:** Press this button to access the green item or page.
- 29 **Yellow:** Press this button to access the yellow item or page.

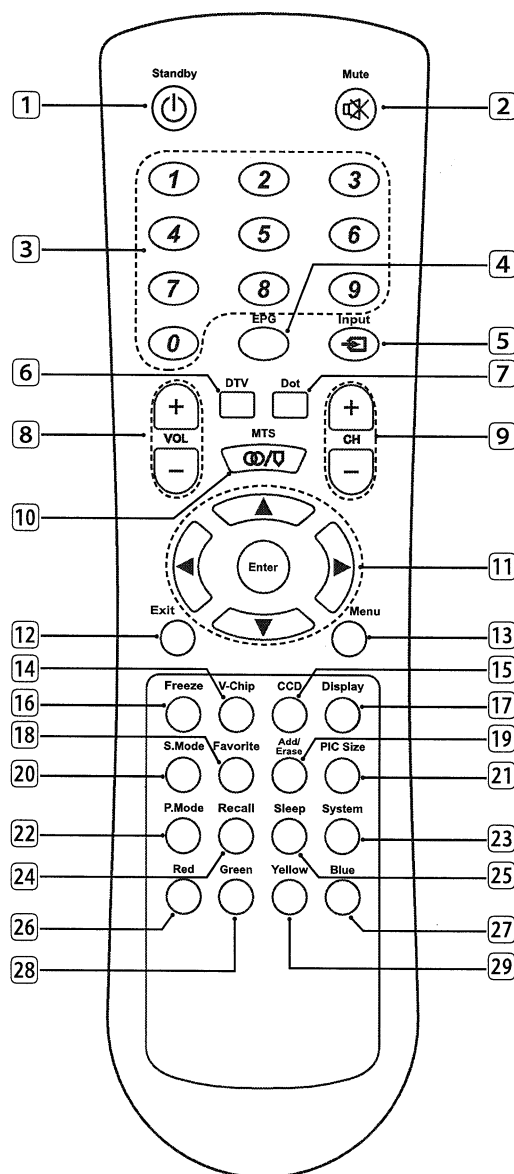

- Note:**
- 1 Press **CH +/-** button on the remote control can turn on TV set from standby mode.
 - 2 If the volume is too loud from the other external devices (such as, DVD, VCR, etc.), we suggest that you press **VOL +/-** button to adjust the volume into appropriate. If all the volume are too loud, the audio quality will be influenced.

Insertion of Batteries:

- Turn the remote control upside down, press and slide off the battery cover.
- Insert two 1.5V (AAA) batteries into the compartment, take care to observe the \oplus and \ominus markings indicated inside.
- Replace the cover and slide in reverse until the lock snaps.