


INTRODUCTION (continued)

Inserting Batteries into the Remote Control

Insert two LR03WCH batteries by matching the \oplus and \ominus on the batteries to the diagram inside the battery compartment.

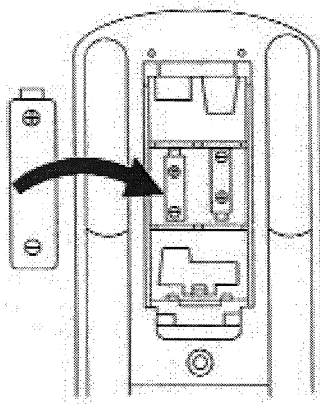

- * Remove the batteries to avoid damage from possible battery leakage whenever you anticipate that the remote control will not be used for an extended period.
- * Handle the remote control with care. Avoid dropping it, getting it wet, or placing it in direct sunlight, near a heater, or where the humidity is high.
- * Your remote control can be programmed to operate most video equipment (See "Programming the Remote Control" on page 36).


Carrying the Projection TV

Carrying the projection TV requires two or more people. The projection TV has been equipped with casters for easy movement on a hard surface. Please move your projection TV using the casters.

Using the Features

Using the Remot control

Remote Control

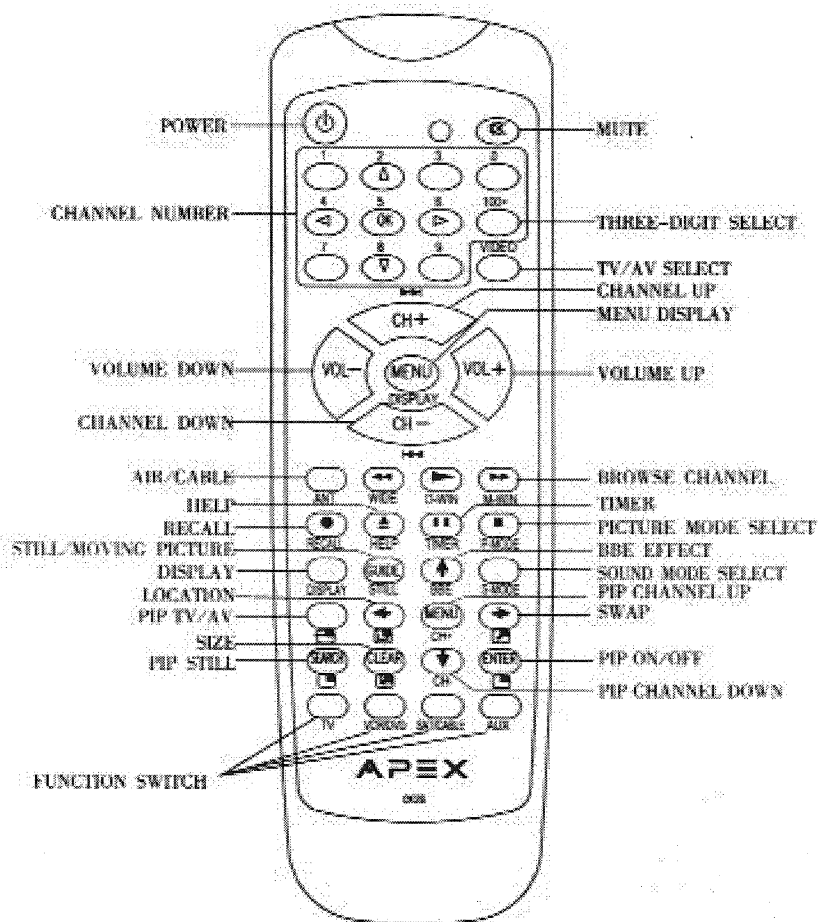

- * Instructions in this manual are written for the remote control. Similar controls are also found on the projection TV console.
- * The button design and specifications of the remote control are subject to change without notice.
- * Many TV features can be accessed directly through the remote control. **Press "TV" (function button) on the remote control first to enter TV mode before operating the remote control.**

Other Information

Programming the Remote Control

Remote-control switchover

Press VCR/DVD, SAT/CABLE or AUX to select the device you want to control.

To program the remote control

Press and hold VCR/DVD, SAT/CABLE or AUX for over 2 seconds until the LED on the remote control turns off. Release the button the LED will light again (the remote control enters the PROGRAMMING mode).

Enter three-digit code number for your equipment. If the correct code number is entered, the LED blinks three times. If you enter a code not listed below, or you press any other buttons than SEARCH and 100+, the LED turns off.

To search codes

Press and hold VCR/DVD, SAT/CABLE or AUX for over 2 seconds until the LED turns off. Release the button (the LED will light again) and the remote control enters the PROGRAMMING mode.

Press SEARCH.

Press CH+/- to search codes downwards or upwards. Each time you press CH+/-, the code number decreases or increases by 1 while the remote control sends the code number for POWER button on your device.

If the desired code number is found, press 100+ to program the code for your device until the LED blinks three times. Then the remote control exits from the PROGRAMMING mode and returns to normal operation.

Or press any other button to exit from the PROGRAMMING mode after the LED blinks rapidly eight times, and the operation is not active.

To check the current code number

Press and hold VCR/DVD, SAT/CABLE or AUX for over 2 seconds until the LED turns off. Release the button (the LED will light again) and the remote control enters the PROGRAMMING mode.

Press 100+.

You may read the code number according to the LED display status as follows.

Code Number			LED Display Status (2 sec. time interval between every two digits.)		
First - digit	Second - digit	Third - digit	First - digit	Second - digit	Third - digit
0	0	0	Blinks rapidly once	Blinks rapidly once	Blinks rapidly once
1	0	6	Blinks once	Blinks rapidly once	Blinks six times
0	4	3	Blinks rapidly once	Blinks four times	Blinks three times
1	5	0	Blinks once	Blinks five times	Blinks rapidly once

* If there is no operation within 20 seconds during the steps mentioned above, the remote control will automatically exit from the appropriate operation.

INFORMATION (continued)**DVD CODES**

Brand	Code Number
APEX	300,395
ChangHong	300,301,302,303
Aiwa	312
Hitachi	313
JVC	309,314
Magnavox	308
Mitsubishi	307
Panasonic	315,386
Philips	308,316,317,318
Pioneer	306,311
Proscan	310
RCA	310
Sanyo	319
Sony	305,320,321
Toshiba	304

LD CODES

Brand	Code Number
Magnavox	322
Panasonic	326,327
Pioneer	328
Sony	323,324,325

VCR CODES

Brand	Code Number	Brand	Code Number
Admiral	373	Craig	331,337,376
Aiwa	340,387,388	Curtis Mathes	332,336,361,372
Akai	350,379	Daewoo	349,363,377,379,380
Amstrad	340	Daytron	349
ASA	357	DBX	334,374
Audio Dynamics	334,374	Dimensia	384
Audiovox	376	Dynatech	340
Broksonic	375,377	Electrohome	330,376,381
Bush	339	Electrophonic	376
Calix	376	Emerson	330,338,340,345,375,376,377,381
Candle	336,376	Fisher	329,331,340,341,351
Canon	361,362	Funai	377
Capeheart	349	GE	32,337,361,372
Carver	343	Go Video	359,360,389
CCE	379	Goldstar	336,376,379
Citizen	336,337,376,379	Goodmans	339

INFORMATION (continued)

Brand	Code Number	Brand	Code Number
Gradiente	378	Proscan	332,372
Grundig	357	Quasar	354,355,361
Harley Davidson	378	Radio Shack	329,330,331,341,346,373,376,378,381
Harman Kardon	364	Radix	376
Hinari	339	Randex	376
Hitachi	340,342,347,350	RCA	332,337,342,347,365,372
Instant Replay	385	Realistic	340,341,346,361,373,376,378,381
JC Penney	333,334,337,347,350,361,364,374,376	Ricoh	369
Jensen	342,350	Salora	356
JVC	333,334,336,350,352,358,374	Samsung	337,363
Kenwood	333,334,336,350,352,358,374	Sanky	373
Kodak	376	Sansui	334,350,352,353
Lloyk	340,378	Sanyo	331
Logik	339	SBR	357
LXI	376,390,391,392,393,394	Schneider	339
Magnavox	343,344,357,361	Scott	338,345,375,377
Marantz	333,334,336,343,357,361,374	Sears	329,331,341,342,347,351,376
Marta	376	Sharp	330,346,381
MEI	361	Shintom	339
Memorex	331,340,361,373,376,378	Sony	367,368,369,370,371
MGA	330,345,356,381	STS	347
Minolta	342,347	Sylvania	340,343,344,345,356,361,378
Mitsubishi	330,342,345,352,356,358,381	Symphonic	340,378
Motorola	373	Tandy	340
MTC	340,378	Tashiko	340,376
Mutitech	337,339,340,378	Tatung	333,350,353
NEC	333,334,336,350,352,358,364,374	Teac	333,340,350,378
Nikko	376	Techoics	348,361
Olympus	383	Teknika	340,361,376,378
Optimus	373,376	Toshiba	338,341,342,345,356,363
Optonica	346	Totevision	337,376
Panasonic	335,348,361,365,366	Vector Teseach	334,364
Pentax	336,342,347	Victor	334,358
Perdio	340	Videosonic	337
Philco	343,344,361	Video Concepts	334
Philips	343,346,357,631	Wards	330,331,337,338,339,340,342,346,347,361,373,376,378,381
Pilot	376	XR-1000	378
Pioneer	334,342,352,358,374	Yamaha	333,334,336,350,364
Portland	349	Zenith	370,371

INFORMATION (continued)**CABLE CODES**

Brand	Code Number
ChangHong	500
ABC	508,509,510,511
General Instrument	525
Hamiln	541,542,545,546,547
Hytex	508
Jerrold	506,510,511,512,513,520,525,548,549,550
Movie Time	515
NSC	515
Oak	501,508,516
Panasonic	502,507,544
Philips	514
Pioneer	503,504,517
RCA	524
Scientific Atlantic	504,505,518,519
StarCom	511
Tocom	509,512
TV86	515
United Artists	508
Viewstar	514,515
Zenith	504,521,522,523









CABLE CODES

Brand	Code Number
GE	528,531,532
General Electric	526
Hitachi	534,535
Hughes	537,538
JVC	533
Magnavox	536
Panasonic	543
Philips	536
Proscan	528,531,532
RCA	528,531,532,540
Sony	529,539
Toshiba	527,530

CABLE CODES









Brand	Code Number
ChangHong	700,701
Aiwa	702
Carver	709
Fisher	709
JVC	706,712
Magnavox	708
Memorex	704
Panasonic	710
Pioneer	703,704
Proton	708
Quasar	710
RCA	707,713
Sony	702,705
Techniques	710
Toshiba	711
Victor	706

INFORMATION (continued)**Operating Other Components with Your Projeciton TV Remote Control****Operating a VCR**






Press	To
	Power on the VCR
	Select channels directly
	Change channels
	Play video tape
	Stop
	Search forward or backward
	Pause
	Record

at the same time

Operating a DVD player

Press	To
	Power on the DVD player
	Select chapters directly
	Search chapters forward or backward
	Play DVD
	Stop
	Pause
	Move the cursor in the menu
	Display the DVD menu

Operating a laser disc player

Press	To
	Power on the laser disc player
	Search chapters forward or backward
	Play disc
	Stop
	Pause

* When operating your non - TV AV equipment with the remote control, refer to operation instructions of your original remote.