

Using your Model 3•2•1 system



Press the **On/Off** button on the remote to turn the media center on. There is a similar **Power** button located on the top of the media center.

Note: To turn on components connected to the media center, use the remote for that specific component or its power switch. Neither the Model 3•2•1 remote nor the media center can turn components, such as the TV or a VCR, on or off. However, you do have the option of using a universal remote (new enough to include codes for the Bose Model 3•2•1 system) or a programmable "learning" remote to control this system.







The remote control

 
Buttons on the remote control are grouped according to function. Other buttons on the media center provide some of the same controls as described below.

 
POWER and MUTE controls

-  Turns the system on and off.
-  Mutes/unmutes the system volume.


SOURCE controls

-  Selects the built-in CD/DVD player and turns the system on. Unmutes the system volume.
-  Selects AUX as the sound source and turns the system on. Unmutes the system volume.
-  Selects Video 1 as the sound source and turns the system on. Unmutes the system volume.
-  Selects Video 2 as the sound source and turns the system on. Unmutes the system volume.
-  Selects the built-in tuner and turns the system on to the previously-selected AM station. Unmutes the system volume.
-  Selects the built-in tuner and turns the system on to the previously-selected FM station. Unmutes the system volume.

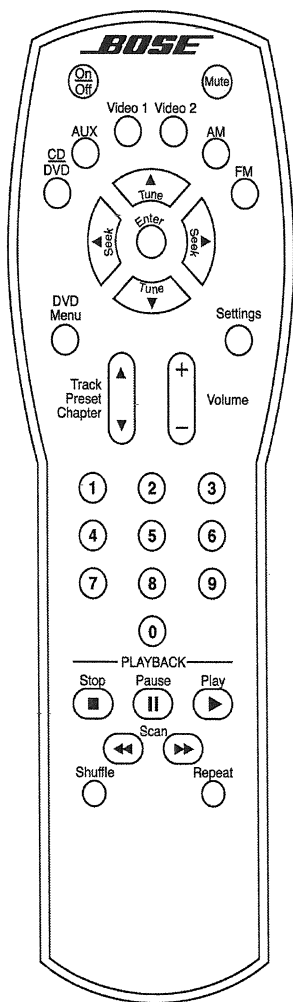

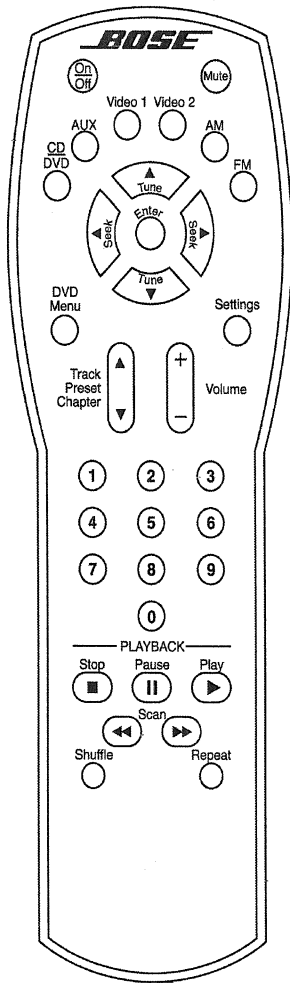


SOURCE and MENU controls

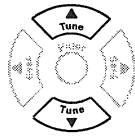 


Tunes the AM/FM radio up/down to the next higher/lower frequency.

 In an on-screen menu, selects the next item, up or down.

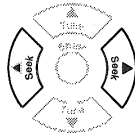

Seeks forward/backward to the next strongest radio station.

 In an on-screen menu, changes the setting of a selected menu item.

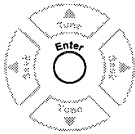

Enters submenus. Also submits custom settings, choices, or entries in conjunction with other buttons.



Displays or exits the menu of the DVD disc currently loaded in the tray, as the particular DVD allows.



Displays or exits the Bose 3•2•1 system on-screen menus.



 
Skips to the next/previous DVD chapter, radio station preset, or CD track.



Raises or lowers the system volume.

+ Unmutes the system volume. Raises the volume.

- Lowers the system volume while it is muted.

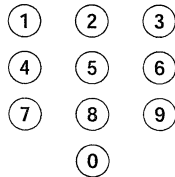

Each button gives you access to a similarly numbered DVD chapter, CD track, or radio station preset.

When selecting numbers 1 through 9, entering a zero before the number ensures the fastest response.

PLAYBACK controls



Stops the disc player and, *for DVDs only*, temporarily holds the place where the disc stopped. Press Stop again and the player moves to the beginning of the disc.



Pauses the disc player in place. After 20 minutes, switches to Stop.



Starts the disc player.



Scans back or forward for DVD chapters, CD tracks, or the next strongest radio station.



Plays audio CD tracks (not DVD chapters) in varied order. Press again to cancel this mode.



Repeats a CD, CD track, DVD chapter, or DVD title until the button is pressed again.