


## The Basics



## The Basics

### remote

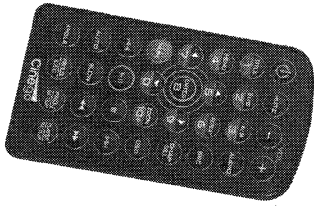

button	name	function
	Power	Turns the projector on and off.
	MUTE	Turns off the audio.
	Vol - Vol +	Vol - decreases volume. Vol + increases volume.
	Info	Displays title information.
	SUB	Turns subtitle function on or off.
	A/B	Defines a period of time to repeat play.
	AUDIO	Selects the audio language.
	MENU	Accesses main menu on DVD.
	Up/5	Moves cursor up.
	REPEAT	Repeats track, chapter, title or disc.


button	name	function
	SOURCE	Toggles source.
	Left/7	Moves cursor to the left.
	ENTER	Makes selection.
	Right/8	Moves cursor to the right.
	NUM	Press for secondary button functions.
	Down/9	Moves cursor down.
	ZOOM 10 + 10 -	ZOOM: Enlarges or reduces Video Image. 10+: ex. 11=NUM+10+1
	OSI	Displays chapter/title information.
	Skip back	Skips to previous track or chapter.
	Play/ Pause	Press to play or pause.

button	name	function
	Stop	Press once to hold at present playing point. Press twice to stop playing.
	Skip forward	Skips to next track or chapter.
	AUTO	Automatically adjusts projector settings.
	SLOW forward	Slow forward.
	Fast forward	Scans track or chapter, going forward.
	Fast backward	Scans track or chapter, going backward.
	ANGLE	Selects DVD camera angle.
	FREEZE	Pauses screen image or quits the OSD menu.
	PLAYER SETUP	Press to enter the DVD Player's setup menu.
	PROJECTOR SETUP	Press to enter the projector's setup menu.



5. Pull out the lamp module. Replace it with the new one. Make sure the new module snaps in place and fully seats inside compartment.
6. Reverse above steps to replace all of the components you just removed.
7. Connect power and turn the projector back on.
8. Press **OK** and then **ESC** to access the MANAGEMENT menu.
9. Use **UP** and **DOWN** to select LAMP RESET.
10. Press **OK** twice to exit.

**NOTE** The lamp inside this product contains mercury. Recycle or dispose of it according to local, state, or federal laws.

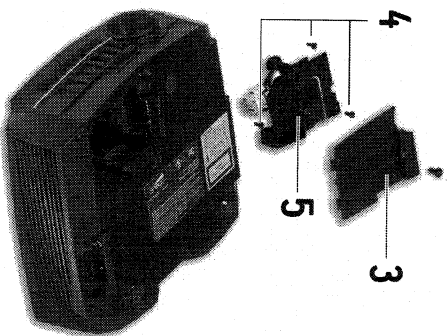

## changing the remote battery

Your projector requires one CR2025 button-cell battery (supplied).

1. Remove the battery compartment. Replace when finished. Remove the battery insulation strip.
2. Place the battery in the compartment its positive (+) end facing up.

- When the remote stops operating properly, replace the battery.
- Dispose of old batteries promptly and properly. Do not burn or bury them.
- Use only fresh batteries of the required size and recommended type.
- Do not use batteries of different types, capacities, or chemistries.
- If you do not use your remote for a month or longer, remove the batteries. Batteries can leak chemicals that may destroy electronic parts. Keep batteries out of reach of children. Can be fatal if swallowed.

