


Remote control unit

For buttons not explained here, see the page indicated in parentheses ().

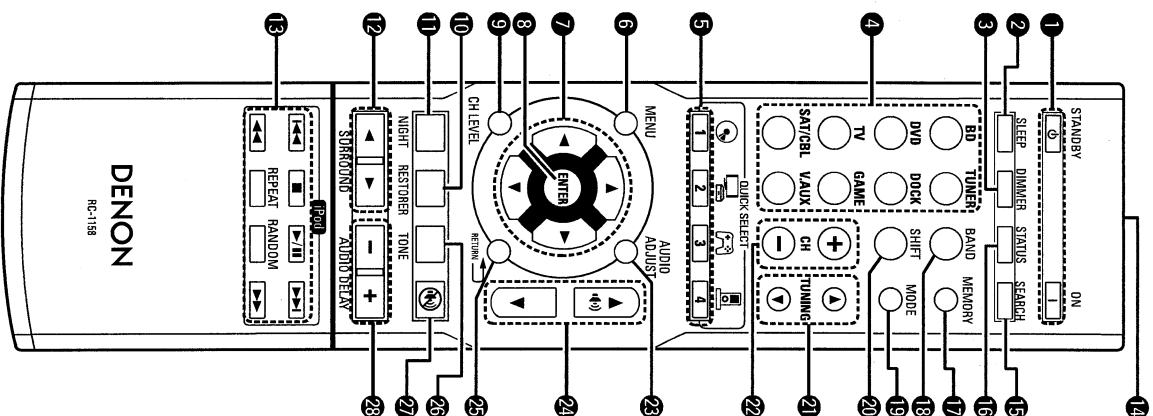


- 1 Power buttons (ON, STANDBY)..... (4, 8)
- 2 Sleep timer button (SLEEP)..... (27)
- 3 DIMMER button..... (35)
- 4 Input source select buttons..... (11)
- 5 QUICK SELECT buttons..... (27)
- 6 MENU button..... (29, 30)
- 7 Cursor buttons (Δ▽◀▷)..... (29, 30)
- 8 ENTER button..... (29, 30)
- 9 Channel level button (CH LEVEL)..... (26)
- 10 RESTORER button..... (39)
- 11 NIGHT button..... (38)
- 12 SURROUND buttons (◀▶)..... (19, 20, 21)
- 13 iPod system buttons..... (16)
 - Skip buttons (◀◀, ▶▶)
 - Stop button (■)
 - Play/Pause button (▶/||)
 - Search buttons (◀◀, ▶▶)
 - Repeat playback button (REPEAT)
 - Random playback button (RANDOM)
- 14 Remote control signal transmitter..... (46)
- 15 SEARCH button..... (13, 14)
- 16 STATUS button..... (13)
- 17 MEMORY button..... (17)
- 18 BAND button..... (17)
- 19 MODE button..... (17)
- 20 SHIFT button..... (17, 18)
- 21 TUNING buttons (Δ▽)..... (17)
- 22 Channel buttons (CH +, -)..... (17, 18)
- 23 AUDIO ADJUST button..... (20, 36)
- 24 Master volume control buttons (◀) ▲ ▼ (▶)..... (11)
- 25 RETURN button (↵)..... (29, 30)
- 26 TONE button..... (38)
- 27 Muting button (M)..... (11)
- 28 AUDIO DELAY button (+, -)..... (39)

See overleaf

Inserting the batteries

- ① Remove the rear lid in the direction of the arrow and remove it.
- ② Load the two batteries properly as indicated by the marks in the battery compartment.

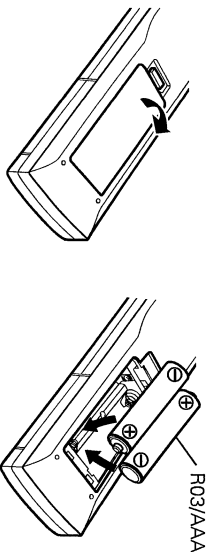


- ③ Put the rear cover back on.

NOTE

- Insert the specified batteries in the remote control unit.
- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit. (The supplied batteries are only for verifying operation.)
- When inserting the batteries, be sure to do so in the proper direction, following the ⊕ and ⊖ marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not attempt to charge dry batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- Do not keep the battery in a place exposed to direct sunlight or in places with extremely high temperatures, such as near a heater.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- Used batteries should be disposed of in accordance with the local regulations regarding battery disposal.
- The remote control unit may function improperly if rechargeable batteries are used.

Operating range of the remote control unit

Point the remote control unit at the remote sensor when operating it.

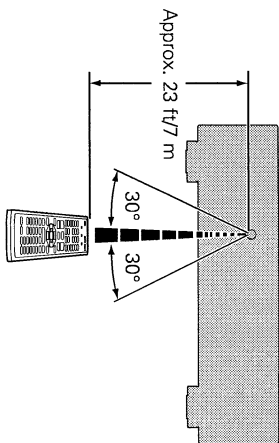

NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.