


6 REMOTE CONTROL UNIT

Following the procedure outlined below, insert the batteries before using the remote control unit.

Range of operation of the remote control unit

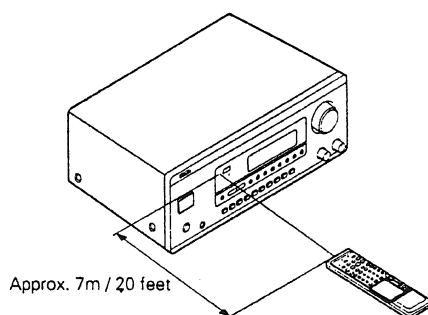




Point the remote control unit at the remote control sensor as shown on the diagram at the left.

NOTES:

- The remote control unit can be used from a straight distance of approximately 7 meters/20 feet, but this distance will shorten or operation will become difficult if there are obstacles between the remote control unit and the remote control sensor, if the remote control sensor is exposed to direct sunlight or other strong light, or if operated from an angle.
- Neon signs or other devices emitting pulse-type noise nearby may result in malfunction, so keep the set as far away from such devices as possible.

Inserting the batteries


- Press as shown by the arrow and slide off.
- Insert the SUM3 batteries properly, as shown on the diagram.
- Close the lid.

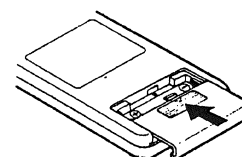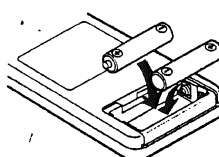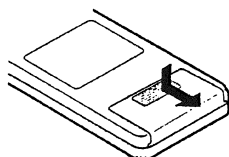

NOTES:

- Use only AA, R6P, UM-3 batteries for replacement.
- Be sure the polarities are correct. (See the illustration inside the battery compartment.)
- Remove the batteries if the remote control transmitter will not be used for an extended period of time.
- If batteries leak, dispose of them immediately. Avoid touching the leaked material or letting it come in contact with clothing, etc. Clean the battery compartment thoroughly before installing new batteries.
- Have replacement batteries on hand so that the old batteries can be replaced as quickly as possible when the time comes.
- The codes that have been learned may be lost if removed batteries are not replaced within about 5 minutes.

System code buttons

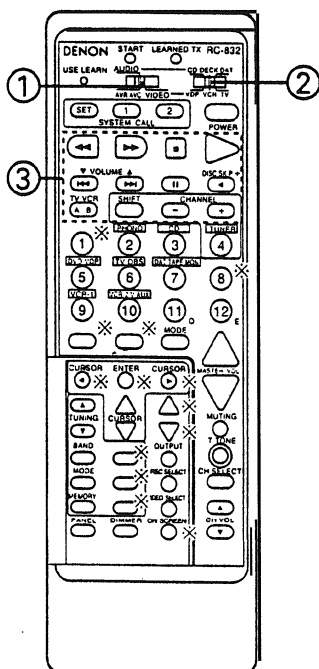


DENON remote-controllable audio components can be controlled using this unit's remote control unit. Note that some components, however, cannot be operated with this remote control unit.

- Set to slide switch to "AUDIO" ("AVR/AVC").




 - Set the slide switch to the position, for the component to be operated (CD, DECK or DAT).




- Use the buttons shown below to operate the audio component. For details, refer to the respective component's manual.

a. For CD players and DATs

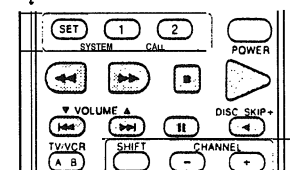

- Manual search (reverse and forward)
- stop
- Play
- Auto search
- Pause
- DISC selection
- DISC SKIP+ : (CD changer only)


b. For tape decks (DECK)

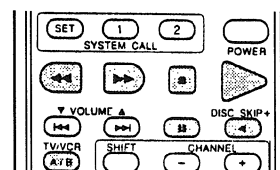


- : Reverse
- : Forward
- : stop
- : Forward play
- : Pause
- A/B : A/B deck selection
- : Reverse play

※ These buttons does not function.
(Some buttons can be used by using the pre-set memory or the learning function.)


DENON and other makes of components can be operated by setting the preset memory for your make of video component. **Operation is not possible for some models, however. In this case use the learning function (see page 11) to store the remote control signals.** For instructions on clearing the presettings stored in the preset memory, see page 12.

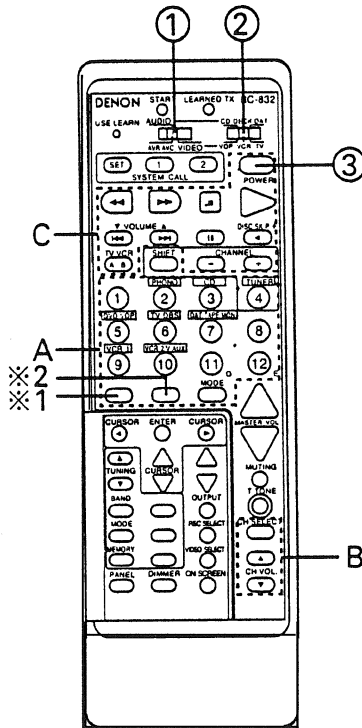


Operation after components are registered

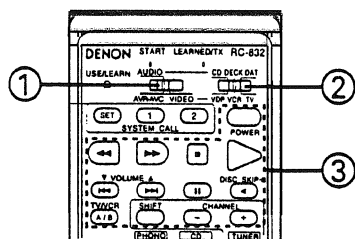

1 Set the slide switch to "VIDEO".

 


 2 Set the slide switch to the component to be registered (VDP, VCR or TV).




3 Use the buttons shown below to operate the video component. (Some models cannot be used.)
For details, refer to the respective component's manual.

a. VDP

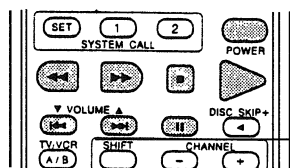


POWER : Power on/off
 ◀ ▶ : Manual search (reverse and forward)
 ■ : stop
 ▶ : Play
 ◀ ▶ : Auto search
 II : Pause

b. VCR

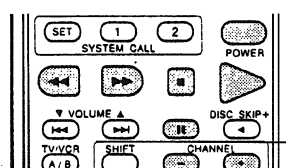

POWER : Power on/off
 ◀ ▶ : Manual search (reverse and forward)
 ■ : stop
 ▶ : Play
 II : Pause
 CHANNEL : Channel selection
 +, -

c. TV

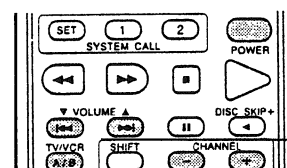


POWER : Power on/off
 VOLUME : Volume up/down
 ▲ ▼ : Volume up/down
 TV/VCR : TV/video selection
 CHANNEL : Channel selection
 +, -


Remote control unit learning function

If your AV components are not DENON products or if operation is not possible with the preset memory settings, the components' remote control signals can be "learned" to enable remote control operation.
The buttons that can be "learned" are the CD, DAT and DECK system buttons (see page 9) and the VDP, VCR and TV system buttons (see page 11).
(For the TV only, the A block buttons can also be "learned".)



1 Press the USE/LEARN selector button with the tip of a pen etc., to set the learn mode. Both the START and LEARNED/TX indicators flash.

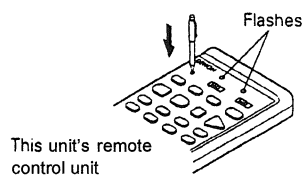

 
2 Set the program switch to the side to be "learned".
Set to the AUDIO side for the CD, tape deck or DAT position, to the VIDEO side for the VDP, VCR or TV position.



 3 Set the program switch to the position to be "learned".

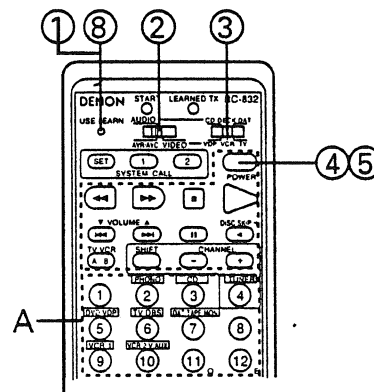

4 Set the remote control units so they are facing each other, then press the button to be "learned" on this unit's remote control unit.

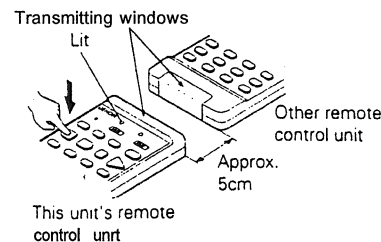


The indicator stops flashing and the START LED lights.


The learnable buttons are the buttons which can be operated with the DENON system codes for the CD player, DAT and tape deck, the buttons which can be operated with the preset memory for the VCR, VDP and TV. For the TV only, however, the buttons in the section indicated "A" on the diagram above can also be "learned". Use these to "learn" TV channels.

NOTE: Use button ⑪ / 0 as the 0 number button, button ⑫ / E as the enter button.

- 5** Check that the START LED is lit, then press the button to be "learned" on the other remote control unit.

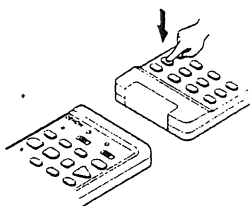


- 6** Once the START LED turns off and the LEARNED/TX LED lights, release the button on the other remote control unit.

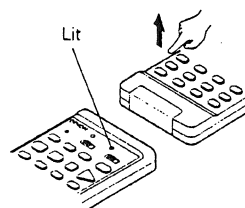

The two LEDs start flashing again

- 7** To "learn" other buttons, repeat steps 2 to 6.

- 8** Once the learning operation is completed, press the USE/LEARN selector button again. The two LEDs stop flashing and the learning mode is cancelled.

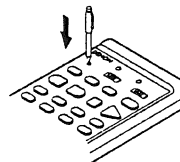


Check that the stored codes work properly.

NOTES:


- Up to 26 codes can be "learned", but this number may be lower if the codes are long.
 - If a non-learnable button is pressed or two or more buttons are pressed at once, the two LEDs will once again light when the button(s) is released.
 - If the codes could not be stored, the LEARNED/TX LED does not light after the START LED turns off. For limited number of models, codes cannot be stored in RC-832.
 - If the two LEDs start flashing rapidly after the START LED lights, this means that the memory is already full, and the code you have just attempted to store was not stored.
- To "learn" that code, first perform the resetting operation.

Clearing "learned" remote control signals and the preset memory settings



- 1** Press the USE/LEARN selector button with the tip of a pen, etc., to set the learn mode.

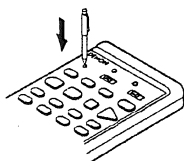

 - 2** To clear "learned" remote control signals, set the slide switch to the position at which the signals were "learned". To clear the preset memory settings, set the slide switch to "VIDEO".



 - 3** Set the slide switch to the position at which the signals were "learned" or at which the preset memory settings were set.

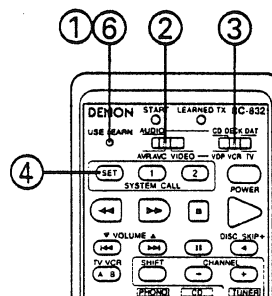

- 4** Press the SYSTEM CALL SET button, and hold it in for at least four seconds.



- 5** When both the START and LEARNED /TX LEDs light simultaneously, all the stored codes are cleared.



- 6** Press the USE/LEARN selector button.