

Cautions on Handling

• Before turning the power switch on

Check once again that all connections are correct and that there are no problems with the connection cables.

- Power is supplied to some of the circuitry even when the unit is set to the standby mode. When traveling or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.

• About condensation

If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.

If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.

• Cautions on using mobile phones

Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when it is in use.

• Moving the unit

Turn off the power and unplug the power cord from the power outlet.

 
Next, disconnect the connection cables to other system units before moving the unit.

- Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.

Cautions on Installation

Note:

For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.

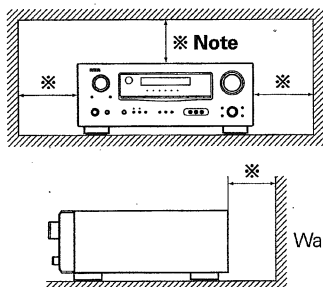



About the Remote Control Unit

In addition to the AVR-1508, the included remote control unit (RC-1075) can also be used to operate the equipment listed below.

- ① DENON system components
- ② Non-DENON system components
 - By setting the preset memory (see page 39 ~ 41)

Inserting the Batteries

  - ① Lift the clasp and remove the rear lid.
- ② Load the two batteries properly as indicated by the marks in the battery compartment.

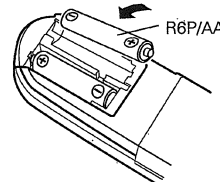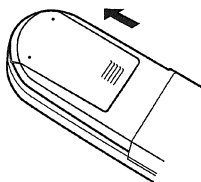


- ③ Put the rear cover back on.

NOTE

- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit.
- The supplied batteries are only for verifying operation.
- When inserting the batteries, be sure to do so in the proper direction, following the "⊕" and "⊖" marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not attempt to charge dry batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.

Operating Range of the Remote Control Unit

 Point the remote control unit at the remote sensor when operating it.

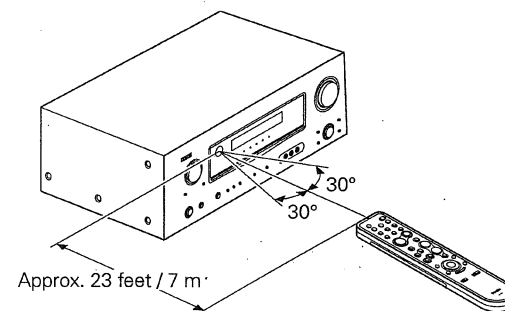


NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.


Remote Control Unit

 [Front]

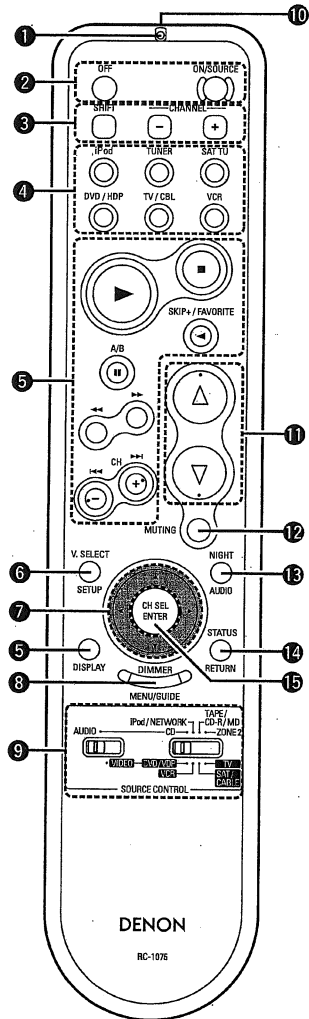

- 1 Indicator (39)
- 2 Power buttons (31)
- 3 Tuner system buttons (33, 40)
- 4 Source select buttons (31, 44)
- 5 System buttons (36, 40)
- 6 Video select button (V. SELECT) (32)
- 7 Cursor buttons (Δ ▽ ◀ ▶) (19, 40)
- 8 DIMMER button (32)
- 9 Mode selector switches (40, 44)
- 10 Remote control signal transmitter
- 11 Master volume control buttons (31, 44)
- 12 MUTING button (32, 44)
- 13 NIGHT button (29)
- 14 STATUS button (32)
- 15 Channel select (CH SEL) / ENTER button (19, 40)

 [Rear]

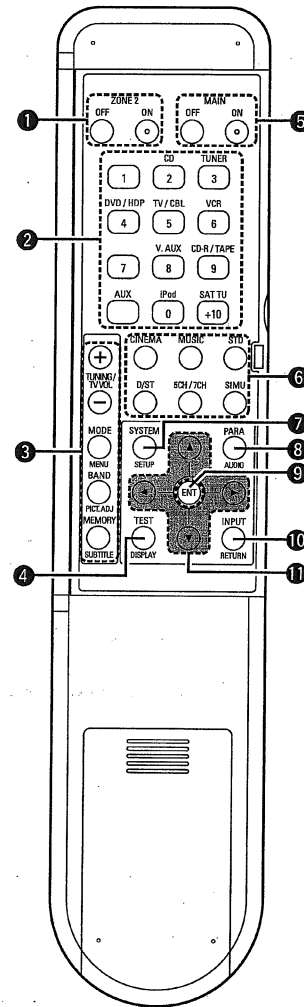


- 1 ZONE2 power buttons (44)
- 2 Source select buttons (31, 44)
- 3 Tuner system buttons (32, 33)
- 4 Test tone button (TEST) (21, 22)
- 5 Main zone power buttons (MAIN) (39)
- 6 Surround mode buttons (25, 26)
- 7 System Setup button (SYSTEM) (19)
- 8 Surround parameter button (PARA) (27)
- 9 Enter button (ENT) (19, 40)
- 10 Input mode button (INPUT) (31)
- 11 Cursor buttons (Δ ▽ ◀ ▶) (19, 40)

NOTE


If buttons on the front or rear are pressed strongly, the button on the opposite side will be activated too.

Remote Control Unit Operations

 [Front]

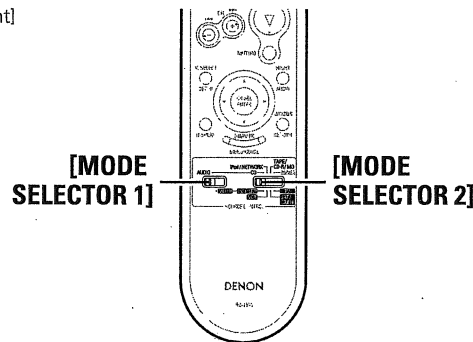

[Rear]

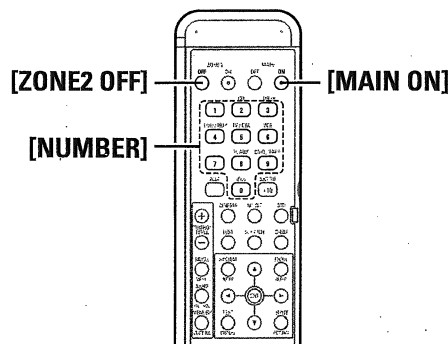 

Depending on the model and year of manufacture of your equipment, some buttons may not operate.

Operating DENON Audio Components

- 1 Set **[MODE SELECTOR 1]** to "AUDIO".
 - 2 Set **[MODE SELECTOR 2]** to the position for the component to be operated (CD, iPod/NETWORK or TAPE/CD-R/MD).
 - 3 Operate the audio component.
- ※ For details, refer to the component's operating instructions.
 ※ While this remote control is compatible with a wide range of infrared controlled components, it may be the case that some component models cannot be operated with this remote control.

Presetting

- DENON and other makes of components can be operated by setting the preset memory.
- This remote control unit can be used to operate components of other manufacturers without using the learning function by registering the manufacturer of the component as shown in the list of preset codes (End of this manual).
- Operation is not possible for some models.

- 1 Set **[MODE SELECTOR 1]** to "AUDIO" or "VIDEO".
 ※ Set to the AUDIO side for the CD, iPod/NETWORK or TAPE/CD-R/MD position, and to the VIDEO side for the DVD/VDR VCR, SAT/CABLE or TV position.
- 2 Set **[MODE SELECTOR 2]** to the component to be registered.
- 3 Press **[ZONE2 OFF]** and **[MAIN ON]** at the same time.
 The indicator starts flashing.
- 4 Referring to the included list of preset codes, press **[NUMBER]** to input the preset code (a 3-digit number) for the manufacturer of the component whose signals you want to store in the memory.
- 5 To store the codes of another component in the memory, repeat steps 1 to 4.



 
- The signals for the pressed buttons are emitted while setting the preset memory. To avoid accidental operation, cover the remote control unit's transmitting window while setting the preset memory.
- Depending on the model and year of manufacture, this function cannot be used for some models, even if they are of makes listed in the list of preset codes.
- Some manufacturers use more than one type of remote control code. Refer to the included list of preset codes to change the number and verify correct operation.
- The preset memory can be set for one component only among the following: TAPE/CD-R/MD, DVD/VDR and SAT/CABLE.

Operating Preset Components

- 1 Set **[MODE SELECTOR 1]** to "AUDIO" or "VIDEO".
 ※ Set to the AUDIO side for the CD, iPod/NETWORK or TAPE/CD-R/MD position, and to the VIDEO side for the DVD/VDR VCR, SAT/CABLE or TV position.
- 2 Set **[MODE SELECTOR 2]** to the component you want to operate.
- 3 Operate the component.
 ※ For details, refer to the component's operating instructions.
 ※ Some models cannot be operated with this remote control unit.

Functions of Buttons by Component

□ Front

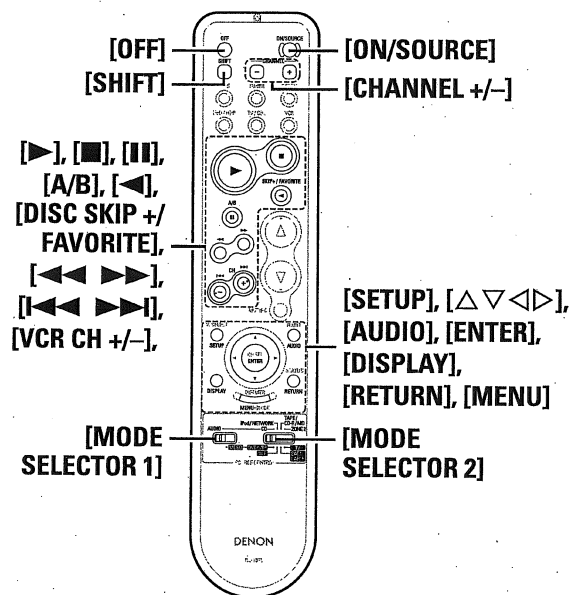

Device operated	CD Player	iPod	CD Recorder	MD Recorder	Tape Deck	DVD Player	Video disc player	Video Deck	Satellite Receiver	Cable TV	TV (Monitor)
MODE SELECTOR 1	AUDIO					VIDEO					
MODE SELECTOR 2	CD	iPod/ NETWORK	TAPE / CD-R / MD			DVD / VDP		VCR	SAT / CABLE		TV
OFF	—	—	—	—	—	Power off	—	—	—	—	—
ON/SOURCE	—	—	—	—	—	Power on	Power on / Standby	Power on / Standby	Power on / Standby	Power on / Standby	Power on / Standby
SHIFT	Preset channel selection	Preset channel selection	Preset channel selection	Preset channel selection	Preset channel selection	—	—	—	—	—	—
CHANNEL +	Preset channel selection	1-track/ album shuffle play	Preset channel selection	Preset channel selection	Preset channel selection	Switch Channels (+)	Switch Channels (+)	Switch Channels (+)	Switch Channels (+)	Switch Channels (+)	Switch Channels (+)
CHANNEL -	Preset channel selection	1-track/All-track repeat play	Preset channel selection	Preset channel selection	Preset channel selection	Switch Channels (-)	Switch Channels (-)	Switch Channels (-)	Switch Channels (-)	Switch Channels (-)	Switch Channels (-)
▶	Play	Play / Pause	Play	Play	Play	Play	Play	Play	Punch through	Punch through	Punch through
■	Stop	Stop	Stop	Stop	Stop	Stop	Stop	Stop			
II, A/B	Pause	—	Pause	Pause	A/B switching	Pause	Pause	Pause			
DISC SKIP +	Disc skip +	—	—	—	Reverse play	Disc skip	—	—			
◀▶▶▶	Manual Search (fast-reverse / fast-forward)	Manual Search (fast-reverse / fast-forward)	Manual Search (fast-reverse / fast-forward)	Manual Search (fast-reverse / fast-forward)	Rewind Fast forward	Manual Search (fast-reverse / fast-forward)	Manual Search (fast-reverse / fast-forward)	Manual Search (fast-reverse / fast-forward)	Punch through	Punch through	Punch through
▶▶▶▶	Auto search (cue)	Auto search (cue)	Auto search (cue)	Auto search (cue)	—	Auto search (cue)	Auto search (cue)	Switch Channels (-, +)			
SETUP	—	—	—	—	—	Setup	—	—	—	—	—
Δ▽◀▶	—	Cursor	—	—	—	Cursor operation	—	—	Cursor operation	Cursor operation	Cursor operation
AUDIO	—	—	—	—	—	Switching the audio signal	—	—	—	—	—
ENTER	—	Enter	—	—	—	Enter setting	—	—	Enter setting	Enter setting	Enter setting
DISPLAY	—	—	—	—	—	Switching the display	—	—	Switching the display	Switching the display	Switching the display
RETURN	—	—	—	—	—	Return	—	—	Return	Return	Return
MENU	—	—	—	—	—	Calling out the menus	—	—	Calling out the menus	Calling out the menus	Calling out the menus

Getting Started

Connections

Setup

Playback

 
Remote Control

Multi-Zone

Information

Troubleshooting

□ Rear

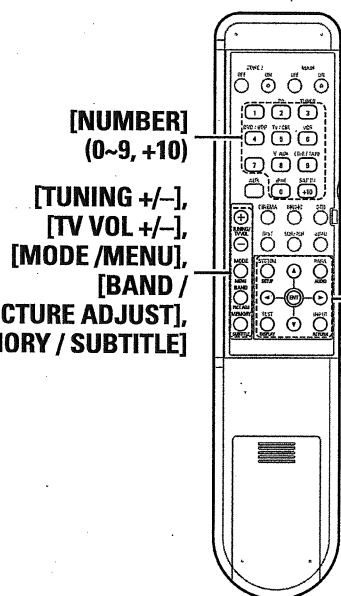

[SETUP],
[△▽◀▶],
[AUDIO],
[ENTER],
[DISPLAY],
[RETURN]

Device operated	CD Player	iPod	CD Recorder	MD Recorder	Tape Deck	DVD Player	Video disc player	Video Deck	Satellite Receiver	Cable TV	TV (Monitor)
MODE	AUDIO					VIDEO					
SELECTOR 1											
MODE											
SELECTOR 2	CD	iPod/ NETWORK	TAPE / CD-R / MD			DVD / VDP		VCR	SAT / CABLE		TV
NUMBER (0~9, +10)	—	—	—	—	—	Number input / Track selection	Number input / Track selection	—	Channels	Channels	Channels
TUNING (+, -) / TV VOL (+, -)	Tuning (+, -)	Tuning (+, -)	Tuning (+, -)	Tuning (+, -)	Tuning (+, -)	Volume control (+, -)	Volume control (+, -)	Volume control (+, -)	Volume control (+, -)	Volume control (+, -)	Volume control (+, -)
MODE / MENU	Switch search modes	Switch search modes / Browse/Remote mode switching (Press and hold)	Switch search modes	Switch search modes	Switch search modes	Calling out the menus	—	—	Calling out the menus	Calling out the menus	Calling out the menus
SETUP	—	—	—	—	—	Setup	—	—	—	—	—
△▽◀▶	—	—	—	—	—	Cursor operation	—	—	Cursor operation	Cursor operation	Cursor operation
AUDIO	—	—	—	—	—	Audio	—	—	—	—	—
BAND / PICTURE ADJUST	AM / FM / XM switching	AM / FM / XM switching	AM / FM / XM switching	AM / FM / XM switching	AM / FM / XM switching	Picture adjust	—	—	—	—	—
ENTER	—	—	—	—	—	Enter setting	—	—	Enter setting	Enter setting	Enter setting
MEMORY / SUBTITLE	Preset memory	Preset memory	Preset memory	Preset memory	Preset memory	Subtitle	—	—	—	—	—
DISPLAY	—	—	—	—	—	Switching the display	—	—	Switching the display	Switching the display	Switching the display
RETURN	—	—	—	—	—	Return	—	—	Return	Return	Return
Default setting (Preset code)	DENON (111)	—	DENON (151)	—	—	DENON (111)	—	HITACHI (108)	—	ABC (007)	HITACHI (134)
Special Remarks	①	—	①			①, ②		①	①, ③		①, ③

Special Remarks

- ① Only one device can be set in the preset memory for each mode. Also, when a new code is preset, the previous code is automatically deleted.
- ② For some brands, the DVD remote control buttons may have different function names. Check beforehand.
- ③ One of the following buttons can be assigned to the TV and satellite tuner or cable TV: CD, iPod/NETWORK, TAPE/CD-R/MD, DVD/VDP, VCR (see page 42 "Punch Through Function").

The diagram shows the Denon remote control with various buttons labeled. Two callouts are present:

- [MODE SELECTOR 1]**: Points to the **MODE SELECTOR** button, which is a large circular button with a right-pointing triangle.
- [MODE SELECTOR 2]**: Points to the **MODE SELECTOR** button, which is a large circular button with a right-pointing triangle.

A detailed diagram of a remote control keypad. The keypad is rectangular with rounded ends. At the top, there are four small circular buttons labeled "POWER", "PAUSE", "STOP", and "EJECT". Below these are four larger circular buttons labeled "1", "2", "3", and "4". In the center, there is a numeric keypad with buttons for "0", "1", "2", "3", "4", "5", "6", "7", "8", and "9". To the left of the numeric keypad are two buttons labeled "CALLBACK" and "RECALL". To the right are two buttons labeled "VIEW" and "VIEW". Below the numeric keypad are two buttons labeled "BACK" and "FWD". At the bottom of the keypad are three buttons labeled "MEMORY", "RETURN", and "STOP". A line points from the label "[NUMBER]" to the numeric keypad. Another line points from the label "[MEMORY]" to the "MEMORY" button. A third line points from the label "[RETURN]" to the "RETURN" button.

"Punch Through" is a function allowing you to operate ►, ■, II, ◀, ◀◀, ▶▶, I◀◀ and ▶▶▶ on CD, iPod/NETWORK, TAPE/CD-R/MD, DVD/VDP or VCR components when in the SAT/CABLE or TV mode. By default, nothing is set.

- 1** Set **[MODE SELECTOR 1]** to "VIDEO".
- 2** Set **[MODE SELECTOR 2]** to the component to be registered (SAT/CABLE or TV).
- 3** Press **[MEMORY]** and **[RETURN]** at the same time.
The indicator starts flashing.
- 4** Input the number of the component you want to set.

CD	1
Pod/NETWORK	2
TAPE/CD-R/MD	3
DVD/VDP	4
VCR	5
No setting	0

List of preset codes / Liste de codes pré-réglés

DVD Player

A	Aiwa	009
D	Denon	028, 029, 112
H	Hitachi	010
J	JVC	004, 005, 006, 007, 008, 009, 010, 011, 012, 013, 014, 015, 016, 017, 018, 019, 020, 021, 022, 023, 024, 025, 026, 027, 028, 029, 030, 031, 032, 033, 034, 035, 036, 037, 038, 039, 040, 041, 042, 043, 044, 045, 046, 047, 048, 049, 050, 051, 052, 053, 054, 055, 056, 057, 058, 059, 060, 061, 062, 063, 064, 065, 066, 067, 068, 069, 070, 071, 072, 073, 074, 075, 076, 077, 078, 079, 080, 081, 082, 083, 084, 085, 086, 087, 088, 089, 090, 091, 092, 093, 094, 095, 096, 097, 098, 099, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 795, 796, 797, 798, 799, 800, 801, 802, 803, 804, 805, 806, 807, 808, 809, 810, 811, 812, 813, 814, 815, 816, 817, 818, 819, 820, 821, 822, 823, 824, 825, 826, 827, 828, 829, 830, 831, 832, 833, 834, 835, 836, 837, 838, 839, 840, 841, 842, 843, 844, 845, 846, 847, 848, 849, 850, 851, 852, 853, 854, 855, 856, 857, 858, 859, 860, 861, 862, 863, 864, 865, 866, 867, 868, 869, 870, 871, 872, 873, 874, 875, 876, 877, 878, 879, 880, 881, 882, 883, 884, 885, 886, 887, 888, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 905, 906, 907, 908, 909, 910, 911, 912, 913, 914, 915, 916, 917, 918, 919, 920, 921, 922, 923, 924, 925, 926, 927, 928, 929, 930, 931, 932, 933, 934, 935, 936, 937, 938, 939, 940, 941, 942, 943, 944, 945, 946, 947, 948, 949, 950, 951, 952, 953, 954, 955, 956, 957, 958, 959, 960, 961, 962, 963, 964, 965, 966, 967, 968, 969, 970, 971, 972, 973, 974, 975, 976, 977, 978, 979, 980, 981, 982, 983, 984, 985, 986, 987, 988, 989, 990, 991, 992, 993, 994, 995, 996, 997, 998, 999, 1000
K	Konka	012, 013
M	Mitsubishi	004
P	Philips	005, 015, 016, 017
S	Sanyo	018
T	Toshiba	001, 021, 022
Z	Zenith	060, 078, 079

VDP

D	Denon	028, 029, 112
M	Mitsubishi	028
P	Philips	026
R	RCA	032
S	Sony	004, 005, 006, 007, 008, 009, 010, 011, 012, 013, 014, 015, 016, 017, 018, 019, 020, 021, 022, 023, 024, 025, 026, 027, 028, 029, 030, 031, 032, 033, 034, 035, 036, 037, 038, 039, 040, 041, 042, 043, 044, 045, 046, 047, 048, 049, 050, 051, 052, 053, 054, 055, 056, 057, 058, 059, 060, 061, 062, 063, 064, 065, 066, 067, 068, 069, 070, 071, 072, 073, 074, 075, 076, 077, 078, 079, 080, 081, 082, 083, 084, 085, 086, 087, 088, 089, 090, 091, 092, 093, 094, 095, 096, 097, 098, 099, 100, 101, 102, 103, 104, 105, 106, 107, 108, 109, 110, 111, 112, 113, 114, 115, 116, 117, 118, 119, 120, 121, 122, 123, 124, 125, 126, 127, 128, 129, 130, 131, 132, 133, 134, 135, 136, 137, 138, 139, 140, 141, 142, 143, 144, 145, 146, 147, 148, 149, 150, 151, 152, 153, 154, 155, 156, 157, 158, 159, 160, 161, 162, 163, 164, 165, 166, 167, 168, 169, 170, 171, 172, 173, 174, 175, 176, 177, 178, 179, 180, 181, 182, 183, 184, 185, 186, 187, 188, 189, 190, 191, 192, 193, 194, 195, 196, 197, 198, 199, 200, 201, 202, 203, 204, 205, 206, 207, 208, 209, 210, 211, 212, 213, 214, 215, 216, 217, 218, 219, 220, 221, 222, 223, 224, 225, 226, 227, 228, 229, 230, 231, 232, 233, 234, 235, 236, 237, 238, 239, 240, 241, 242, 243, 244, 245, 246, 247, 248, 249, 250, 251, 252, 253, 254, 255, 256, 257, 258, 259, 260, 261, 262, 263, 264, 265, 266, 267, 268, 269, 270, 271, 272, 273, 274, 275, 276, 277, 278, 279, 280, 281, 282, 283, 284, 285, 286, 287, 288, 289, 290, 291, 292, 293, 294, 295, 296, 297, 298, 299, 300, 301, 302, 303, 304, 305, 306, 307, 308, 309, 310, 311, 312, 313, 314, 315, 316, 317, 318, 319, 320, 321, 322, 323, 324, 325, 326, 327, 328, 329, 330, 331, 332, 333, 334, 335, 336, 337, 338, 339, 340, 341, 342, 343, 344, 345, 346, 347, 348, 349, 350, 351, 352, 353, 354, 355, 356, 357, 358, 359, 360, 361, 362, 363, 364, 365, 366, 367, 368, 369, 370, 371, 372, 373, 374, 375, 376, 377, 378, 379, 380, 381, 382, 383, 384, 385, 386, 387, 388, 389, 390, 391, 392, 393, 394, 395, 396, 397, 398, 399, 400, 401, 402, 403, 404, 405, 406, 407, 408, 409, 410, 411, 412, 413, 414, 415, 416, 417, 418, 419, 420, 421, 422, 423, 424, 425, 426, 427, 428, 429, 430, 431, 432, 433, 434, 435, 436, 437, 438, 439, 440, 441, 442, 443, 444, 445, 446, 447, 448, 449, 450, 451, 452, 453, 454, 455, 456, 457, 458, 459, 460, 461, 462, 463, 464, 465, 466, 467, 468, 469, 470, 471, 472, 473, 474, 475, 476, 477, 478, 479, 480, 481, 482, 483, 484, 485, 486, 487, 488, 489, 490, 491, 492, 493, 494, 495, 496, 497, 498, 499, 500, 501, 502, 503, 504, 505, 506, 507, 508, 509, 510, 511, 512, 513, 514, 515, 516, 517, 518, 519, 520, 521, 522, 523, 524, 525, 526, 527, 528, 529, 530, 531, 532, 533, 534, 535, 536, 537, 538, 539, 540, 541, 542, 543, 544, 545, 546, 547, 548, 549, 550, 551, 552, 553, 554, 555, 556, 557, 558, 559, 560, 561, 562, 563, 564, 565, 566, 567, 568, 569, 570, 571, 572, 573, 574, 575, 576, 577, 578, 579, 580, 581, 582, 583, 584, 585, 586, 587, 588, 589, 590, 591, 592, 593, 594, 595, 596, 597, 598, 599, 600, 601, 602, 603, 604, 605, 606, 607, 608, 609, 610, 611, 612, 613, 614, 615, 616, 617, 618, 619, 620, 621, 622, 623, 624, 625, 626, 627, 628, 629, 630, 631, 632, 633, 634, 635, 636, 637, 638, 639, 640, 641, 642, 643, 644, 645, 646, 647, 648, 649, 650, 651, 652, 653, 654, 655, 656, 657, 658, 659, 660, 661, 662, 663, 664, 665, 666, 667, 668, 669, 670, 671, 672, 673, 674, 675, 676, 677, 678, 679, 680, 681, 682, 683, 684, 685, 686, 687, 688, 689, 690, 691, 692, 693, 694, 695, 696, 697, 698, 699, 700, 701, 702, 703, 704, 705, 706, 707, 708, 709, 710, 711, 712, 713, 714, 715, 716, 717, 718, 719, 720, 721, 722, 723, 724, 725, 726, 727, 728, 729, 730, 731, 732, 733, 734, 735, 736, 737, 738, 739, 740, 741, 742, 743, 744, 745, 746, 747, 748, 749, 750, 751, 752, 753, 754, 755, 756, 757, 758, 759, 760, 761, 762, 763, 764, 765, 766, 767, 768, 769, 770, 771, 772, 773, 774, 775, 776, 777, 778, 779, 780, 781, 782, 783, 784, 785, 786, 787, 788, 789, 790, 791, 792, 793, 794, 795, 796, 797, 798, 799, 800, 801, 802, 803, 804, 805, 806, 807, 808, 809, 810, 811, 812, 813, 814, 815, 816, 817, 818, 819, 820, 821, 822, 823, 824, 825, 826, 827, 828, 829, 830, 831, 832, 833, 834, 835, 836, 837, 838, 839, 840, 841, 842, 843, 844, 845, 846, 847, 848, 849, 850, 851, 852, 853, 854, 855, 856, 857, 858, 859, 860, 861, 862, 863, 864, 865, 866, 867, 868, 869, 870, 871, 872, 873, 874, 875, 876, 877, 878, 879, 880, 881, 882, 883, 884, 885, 886, 887, 888, 889, 890, 891, 892, 893, 894, 895, 896, 897, 898, 899, 900, 901, 902, 903, 904, 905, 906, 907, 908, 909, 910, 911, 912, 913, 914, 915, 916, 917, 918, 919, 920, 921, 922, 923, 924, 925, 926, 927, 928, 929, 930, 931, 932, 933, 934, 935, 936, 937, 938, 939, 940, 941, 942, 943, 944, 945, 946, 947, 948, 949, 950, 951, 952, 953, 954, 955, 956, 957, 958, 959, 960, 961, 962, 963, 964, 965, 966, 967, 968, 969, 970, 971, 972, 973, 974, 975, 976, 977, 978, 979, 980, 981, 982, 983, 984, 985, 986, 987, 988, 989, 990, 991, 992, 993, 994, 995, 996, 997, 998, 999, 1000

VCR

A	Admiral	081
Aiwa	Aiwa	009
Alba	Alba	055
ASA	ASA	042
Audio Dynamic	Audio Dynamic	005, 085
Beaumarck	Beaumarck	087
Calix	Calix	088
Canon	Canon	049, 057
Carver	Carver	015
Citizen	Citizen	006, 007, 087, 088, 089, 090, 095
Curtis Mathes	Curtis Mathes	006, 049, 073, 080, 087, 090, 092
Daewoo	Daewoo	025, 055, 059, 074, 089, 093, 095, 096
DBX	DBX	005, 085
Dynatech	Dynatech	009
Electrohome	Electrohome	029, 056, 057, 058, 147
Fisher	Fisher	009, 028, 031, 053, 054, 091, 099, 115
Go Video	Go Video	047, 048
Gradiente	Gradiente	094
Harley Davidson	Harley Davidson	094
Hi-Q	Hi-Q	091
JC Penny	JC Penny	004, 005, 007, 023, 028, 049, 062, 085, 087, 088
JVC	JVC	004, 005, 006, 026, 029, 043, 044, 045, 046, 085
Kodak	Kodak	088
LXI	LXI	088
Magnin	Magnin	087
Marta	Marta	088
Memorex	Memorex	009, 033, 049, 053, 060, 081, 087, 088, 091, 094, 115
MGA	MGA	001, 017, 027, 041, 097
Midland	Midland	011
Mitsubishi	Mitsubishi	001, 003, 008, 013, 014, 017, 027, 029, 039, 040, 041, 045, 097
Montgomery Ward	Montgomery Ward	001, 002, 007, 009, 049, 063, 081, 115, 117
Multitech	Multitech	007, 009, 011, 087, 090, 094
NEC	NEC	004, 005, 006, 018, 026, 029, 045, 061, 062, 085
Noblex	Noblex	087
Optonica	Optonica	021
Perdio	Perdio	009
Philco	Philco	015, 016, 049

MCA	000, 009, 027, 066, 059, 089, 095, 046, 033
Midland	125
Minut	086
Mitsubishi	001, 018, 039, 048, 056, 057, 058, 065, 081, 082, 083, 105
Motomagnavox	000, 004, 027, 035, 046
Motorola	121, 147
NAD	008, 075, 076, 128
National Quenties	002
Nikko	054
Optimus	128
Orion	004, 139
Philco	005, 010, 030, 050, 051, 056, 079, 085, 127, 131, 132, 145, 147
Pioneer	124, 128, 142
Price Club	095
Proton	035, 051, 092, 129
Quasar	036, 037, 074, 141
RCA	040, 044, 125, 130, 137, 151, 152
Saisho	027
Sansui	139
SBR	015
Scott	062
Sharp	011, 012, 013, 026, 093, 099, 100, 104, 121
Signature	045, 144
Sony	043, 046, 138, 146, 150
Spectricon	007, 033

Supravox	004
Supre-Macy	032, 122
Supreme	046
Sylvania	005, 010, 017, 030, 078, 079, 085, 089, 101, 127, 131, 132, 145, 155
Tandy	012, 121
Technics	037
Tera	035, 129
Toshiba	008, 014, 034, 063, 075, 076, 095, 097, 136, 158, 159
Victor	019, 073, 126
Viking	032, 122
Zenith	042, 114, 115, 140, 144, 149

Cable

A ABC	006, [007]*, 008, 009
C Century	011
E Eastern	015
G Gemini	030, 033, 034
H Hytex	006
J Jerrold	009, 016, 017, 026, 032
M Magnavox	013
N National	002
O Oak	000, 006, 020
P Philips	011, 012, 013, 018, 021
R RCA	029
S Samsung	014, 023
Signal	014
Starcom	009

Televue	014
TV86	019
United Artists	006
Viewstar	018, 019
Zenith	022, 027

Satellite Receiver

A Alphastar	054
D Dishnet	053
E Echostar Dish	062, 066
G General Instruments	039, 040, 041
H Hitachi	058, 059
J JVC	057
M Magnavox	060
N Philips	060
P Proscan	048, 055, 056
R Realistic	042
S Sierra I	035
Sierra II	036
Sierra III	036
Sony	049, 067
STS2	044
SRS4	046
T Technisat	077, 078, 079, 080, 082
Toshiba	047, 050
Unican	061

CD Player

A Aiwa	001, 035, 043
B Bionista	002
C Carvery	003, 035
D Denon	[111]*, 044
E Emerson	004, 005, 006, 007
F Fisher	004, 008, 009, 044
J JVC	018, 019

M Magnavox	006, 015, 035
MCS	016, 024
O Optimus	017, 020, 021, 022, 023
P Pioneer	006, 022, 030
Sony	023, 031
Technics	016, 029, 036
Yamaha	038, 039, 040, 041

CD Recorder

D Denon	151, 112
---------	----------

MD Recorder

A Kenwood	053, 054
C Sharp	055
D Philips	056
E Sony	056

Tape Deck

A Aiwa	001, 002
C Carver	[111]*
D Denon	[111]*
H JVC	004, 005
K Magnavox	002
M Onkyo	016, 018
P Panasonic	012
Pioneer	007, 008, 009
T Technics	012
V Vot	007
Wards	007
Yamaha	001, 003

DVD preset codes / Codes préréglés DVD		
111 (default / défaut) 012		
DENON Model No. / Modèle numéro	DVD-555	DVD-2910
	DVD-755	DVD-2930CI
	DVD-900	DVD-3800
	DVD-910	DVD-3910
	DVD-955	DVD-3930CI
	DVD-1000	DVD-5900
	DVD-1200	DVD-5910
	DVD-1500	DVD-9000
	DVD-1710	DVM-715
	DVD-1910	DVM-1800
	DVD-1930CI	DVM-1805
	DVD-2200	DVM-1815
	DVD-2800	DVM-2815
	DVD-2800II	DVM-4800
	DVD-2900	

*[1] : Preset codes set upon shipment from the factory.
: Les codes préréglés diffèrent en fonction des livraisons de l'usine.