 


Getting Started

Rear panel

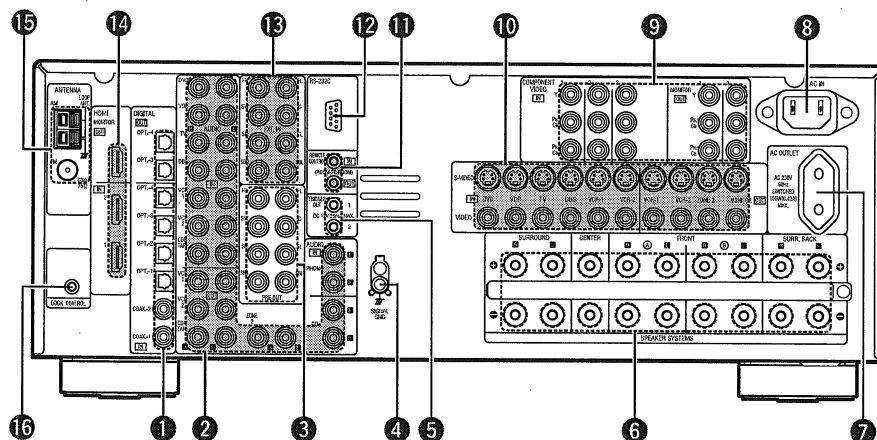


- | | | | |
|--|------|-----------------------------------|------|
| 1 DIGITAL terminals
(Optical/Coaxial) | (8) | 9 COMPONENT VIDEO terminals | (8) |
| 2 AUDIO terminals | (8) | 10 VIDEO/S-VIDEO terminals | (8) |
| 3 PRE OUT terminals | (22) | 11 REMOTE CONTROL jacks | (21) |
| 4 SIGNAL GND terminal | (17) | 12 RS-232C terminal | (20) |
| 5 TRIGGER OUT jacks | (21) | 13 EXT. IN terminals | (17) |
| 6 Speaker terminals | (7) | 14 HDMI MONITOR terminals | (19) |
| 7 AC outlet | (22) | 15 ANTENNA terminals | (20) |
| 8 AC inlet | (22) | 16 DOCK CONTROL jack | (20) |


Getting Started

Remote control unit

 To operate the AVR-2807, use the mode selector buttons to select "TAPE" "CDR/MD" or "CD", mode.

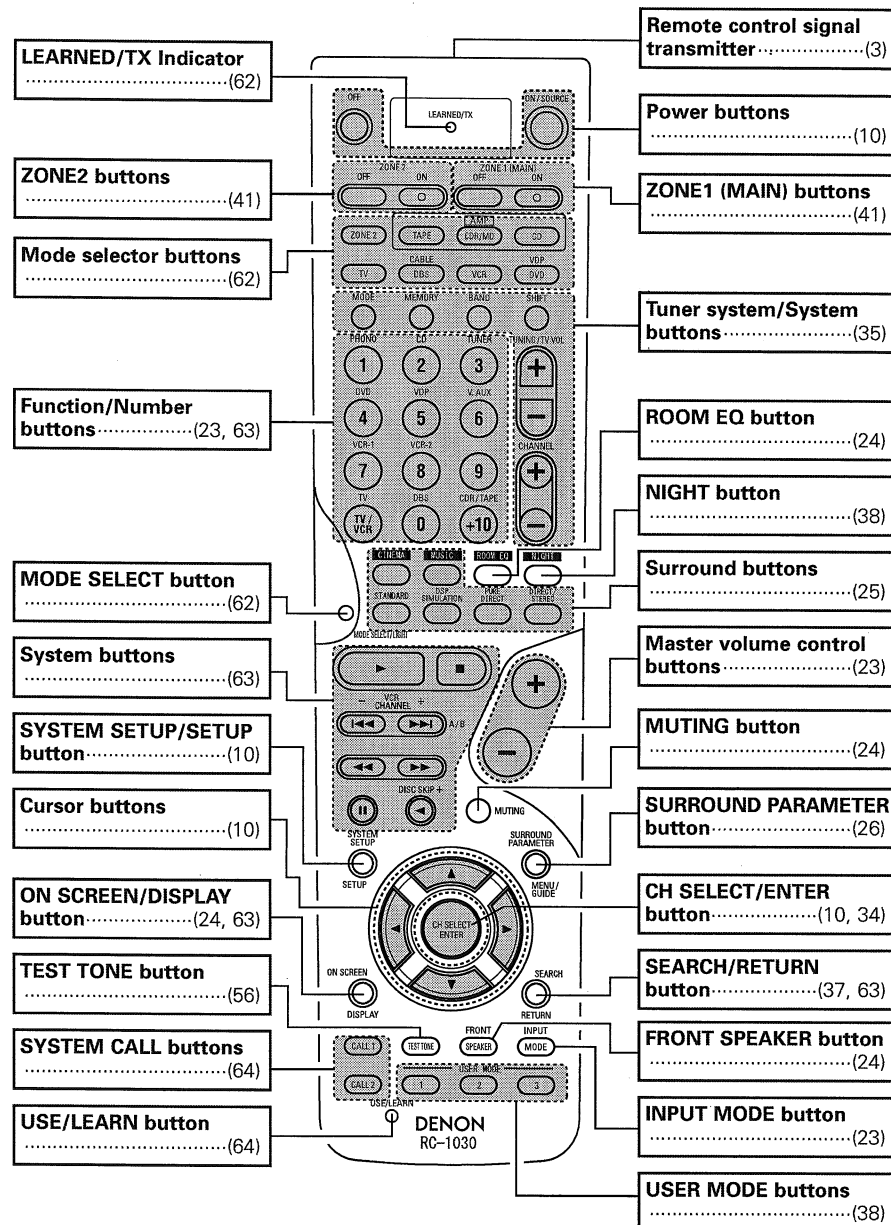

Operating the remote control unit

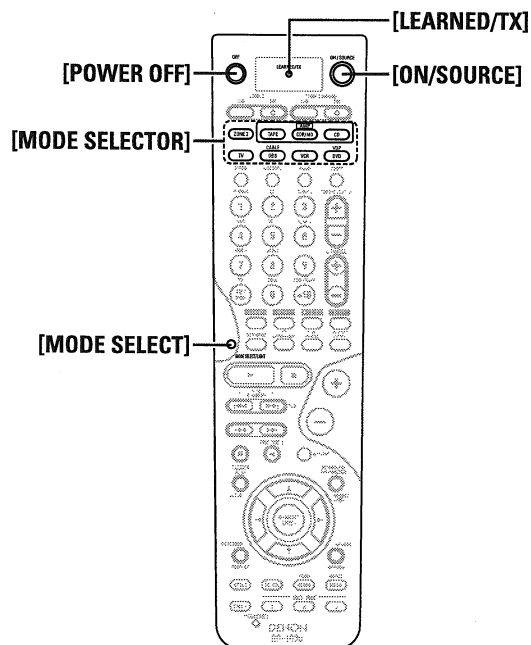 


- It may not be possible to use some of the buttons, depending on the model and age of your equipment.

Operating DENON audio components

1 Press **[MODE SELECTOR]** or **[MODE SELECT]** for the device to be operated.

- The button for the selected mode lights.

 ※ The mode switches as shown below each time **[MODE SELECT]** is pressed:



2 Operate the component.

※ For details, refer to the component's operating instructions.

Setting the preset memory function

The various devices can be operated by setting the preset memory on the included remote control unit.

For some models the remote control unit or the device may not operate properly. In this case, use the learning function (page 64) to store your device's remote control signals in the included remote control unit.

1 Press **[ON/SOURCE]** and **[POWER OFF]** at the same time.

- The "LEARNED/TX" indicator blinks.

2 Press **[MODE SELECTOR]** for the device to be set in the preset memory.

- **[MODE SELECTOR]** and the "LEARNED/TX" indicator blinks.

3 Input the (4-digit) number for the brand of the device to be set in the preset memory, as shown on the list of preset codes (End of this manual).

- When stored correctly, **[MODE SELECTOR]** and the "LEARNED/TX" indicator lights.



- There may be several preset codes for some brands. If the remote control unit does not work properly with one code, try inputting another code.
- Buttons that have been learned have priority over the signals set with the preset memory function. If a learned button setting is not needed, please erase it (page 65).

NOTE:

- The preset memory can be set for one component only among the following: CDR/MD, DVD/VPD and DBS/CABLE.

 
Operating the remote control unit

Operating a component stored in the preset memory

1 Press **[MODE SELECTOR]** for the device to be operated.

2 Operate the component.

※ For details, refer to the component's operating instructions.

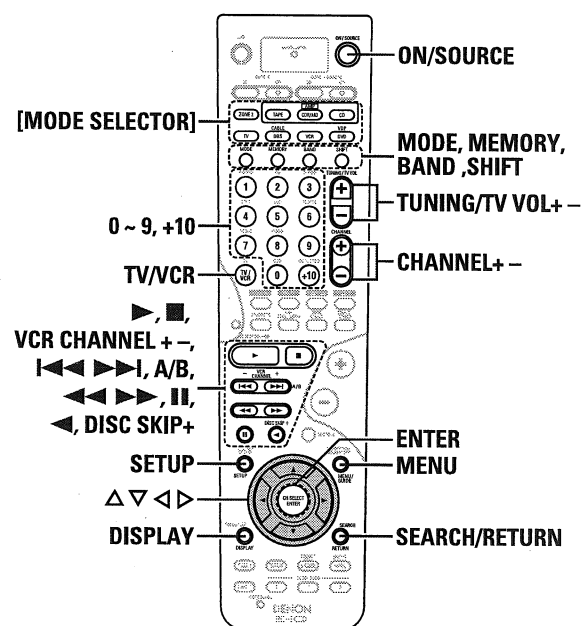

Special remarks:


- ① It is only possible to set the preset memory for one device per mode. When a new code is preset, the previous code is automatically deleted.
- ② Note that the function names of the DVD buttons on the remote control unit may differ for some brands. Check beforehand.
- ③ The CD, VCR or DVD buttons can be assigned to a TV or satellite tuner (or cable TV) (see page 65).

Operating the remote control unit

Functions of buttons for the different devices

Device operated	CD player	CD recorder or MD recorder	Tape deck	Tuner	DVD player or Video disc player	Video deck	Satellite tuner or Cable TV	TV (Monitor)
MODE SELECTOR	CD	CDR / MD	TAPE	AMP (CD, CDR/MD or TAPE)	DVD / VDP	VCR	DBS / CABLE	TV
ON / SOURCE	—	—	—	—	Power on/Standby	Power on/Standby	Power on/Standby	Power on/Standby
MODE	—	—	—	Auto/Manual switching	—	—	—	—
MEMORY	—	—	—	Preset memory	—	—	—	—
BAND	—	—	—	AM/FM switching	—	—	—	—
SHIFT	—	—	—	Preset channel selection	—	—	—	—
0 ~ 9, +10	—	—	—	—	Number input/Track selection	—	Channels	Channels
TUNING / TV VOL + -	—	—	—	Tuning	—	—	Volume control	Volume control
CHANNEL + -	—	—	—	Preset channel selection	—	Station selection	Channel selection	Channel selection
▶	Play	Play	Play	—	Play	Play	—	—
■	Stop	Stop	Stop	—	Stop	Stop	—	—
VCR CHANNEL + - / ◀ ▶	Auto search (to beginning of track)	Auto search (to beginning of track)	—	—	Auto search (to beginning of track)	Channel selection	—	—
A / B	—	—	A/B switching	—	—	—	—	—
◀ ▶	Manual search (forward/reverse)	Manual search (forward/reverse)	Fast forward/Reverse	—	Manual search (forward/reverse)	Manual search (forward/reverse)	—	—
⏸	Pause	Pause	Pause	—	Pause	Pause	—	—
◀	—	—	Reverse play	—	—	—	—	—
DISC SKIP +	Disc skip (for CD changer only)	—	—	—	Disc skip (for DVD changer only)	—	—	—
SETUP	—	—	—	—	Setup	—	—	—
MENU	—	—	—	—	Menu	—	Menu	Menu
DISPLAY	—	—	—	—	Display selection	—	Display selection	Display selection
RETURN / SEARCH	—	—	—	RDS search	Return	—	Return	Return
△ ▽ ◀ ▶	—	—	—	—	Cursor operation	—	Cursor operation	Cursor operation
ENTER	—	—	—	—	Enter	—	Enter	Enter
TV / VCR	—	—	—	—	—	Input mode selection	Input mode selection	Input mode selection
Default setting (preset code)	DENON (0000)	DENON CDR (0000)	DENON (0000)	—	DENON DVD (0000)	HITACHI (3010)	ABC CABLE (4007)	HITACHI (4539)
Special remarks	①	①	①	①	①, ②	①	①, ③	①, ③

 Operating the remote control unit

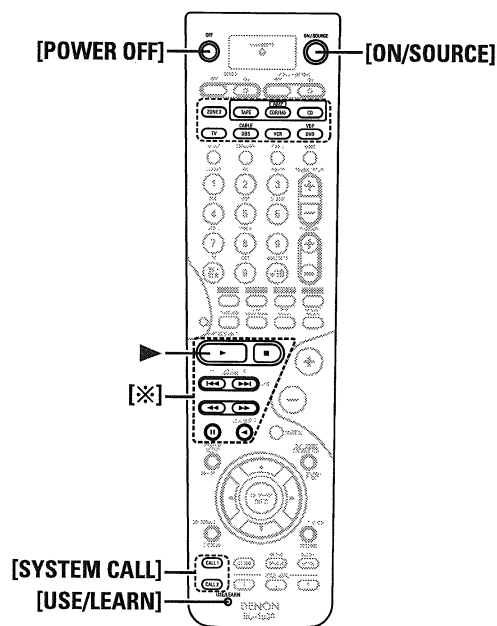

Setting the learning function

 
- If your AV device is a brand other than DENON or if operation is not possible using the preset memory function, the signals of a remote control unit of that device can be stored in the AVR-2807's remote control unit.
- For some remote control units, it may not be possible to learn the signals or the device may not operate properly after the signals are learnt. In this case, use the remote control unit of that device.

- 1 Press **[USE/LEARN]** with the tip of a pen etc., to set the learn mode.
 - **[MODE SELECTOR]** and the "LEARNED/TX" indicator blinks.
- 2 Press **[MODE SELECTOR]** for the device to be operated.
 - **[MODE SELECTOR]** and the "LEARNED/TX" indicator blinks.

- 3 Press the button to be set.
 - The "LEARNED/TX" indicator stops blinking and **[MODE SELECTOR]** lights.

※ If a button that cannot be learnt is pressed, **[MODE SELECTOR]** and the "LEARNED/TX" indicator blinks.

- 4 Point the remote control units straight at each other and press and hold in the button on the other remote control unit to be learnt on the AVR-2807's remote control unit.

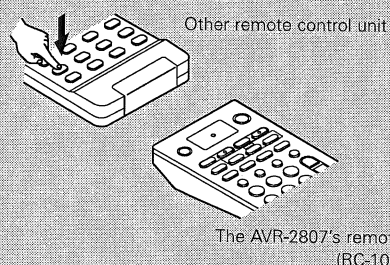

- 5 **[MODE SELECTOR]** and the "LEARNED/TX" indicator lights, release the button on the other remote control unit.
 - **[MODE SELECTOR]** and the "LEARNED/TX" indicator blinks again.

※ Other buttons can be learnt by repeating steps 2 ~ 5.

- 6 Press **[USE/LEARN]**.



- To cancel the learning function mode, press **[USE/LEARN]**.
- If the codes could not be stored, the "LEARNED/TX" indicator start flashing rapidly. For limited number of models, codes cannot be stored in RC-1030.
- If **[MODE SELECTOR]** and the "LEARNED/TX" indicator start flashing rapidly, this means that the memory is already full, and the code you have just attempted to store was not stored. To "learn" that code, first perform the resetting operation (page 65).

Operating the remote control unit

Using the system call function

- A series of operations can be registered at a single button.
- This function makes it possible to for example turn the amplifier's power on, select the input source, turn the monitor power's on, turn the source device's power on and start playback, all by pressing a single button once.
- Up to 10 signals each can be stored at **[SYSTEM CALL]** (1 or 2).

Registering

- 1 Press **[ON/SOURCE]** and **[POWER OFF]** at the same time.
 - The "LEARNED/TX" indicator blinks.
- 2 Press **[SYSTEM CALL 1]** for which you want to register the operations.
 - **[MODE SELECTOR]** and the "LEARNED/TX" indicator blinks.
- 3 Press **[MODE SELECTOR]** for the device to be operated.
- 4 Press the buttons you want to register in the order of the operations to be performed.

Example: Press **[ON]**
 ↓
 Press **[CD]** of **[MODE SELECTOR]**.
 ↓
 Press **[▶]**.

※ Repeat steps 3, 4 to register the desired buttons.
- 5 Press **[SYSTEM CALL]** (1 or 2).

Operating

Press **[SYSTEM CALL]** (1 or 2) at which the operation are registered.

- The stored signals are transmitted successively.

Operating the remote control unit

Setting the punch through function

CD, CDR/MD, TAPE, DVD/VDP or VCR mode buttons can be assigned to unused TV and DBS/CABLE mode buttons. For example, when CD mode operations are assigned to TV mode buttons, the CD mode can be operated while in the TV mode ([※]).

- 1** Press **[ON/SOURCE]** and **[POWER OFF]** at the same time.
 - The "LEARNED/TX" indicator blinks.
- 2** Press **[▶]**.
 - **[MODE SELECTOR]** (TV and DBS/CABLE) and the "LEARNED/TX" indicator blinks.
- 3** Press **[MODE SELECTOR]** for which punch through is to be set (TV or DBS/CABLE).
 - **[MODE SELECTOR]** (CD, CDR/MD, TAPE, DVD/VDP or VCR) and the "LEARNED/TX" indicator blinks.
- 4** Press **[MODE SELECTOR]** for the device to be punched through (CD, CDR/MD, TAPE, DVD/VDP or VCR).
 - **[MODE SELECTOR]** that was set will light.

Resetting the remote control unit

Resetting the learning function

- 1** Press **[USE/LEARN]** with the tip of a pen etc., to set the learn mode.
 - **[MODE SELECTOR]** and the "LEARNED/TX" indicator blinks.
- 2** Press **[MODE SELECTOR]** for the device to be reset.
 - **[MODE SELECTOR]** and the "LEARNED/TX" indicator blinks.
- 3** Hold for 4 seconds or longer **[MODE SELECTOR]** of the equipment that is to be reset and **[ON/SOURCE]**.
 - **[MODE SELECTOR]** and the "LEARNED/TX" indicator blinks again.
- 4** Press **[USE/LEARN]**.

Resetting the punch through setting

- 1** Press **[ON/SOURCE]** and **[POWER OFF]** at the same time.
 - The "LEARNED/TX" indicator blinks.
- 2** Press **[▶]**.
 - **[MODE SELECTOR]** (TV or DBS/CABLE) and the "LEARNED/TX" indicator blinks.
- 3** Press **[MODE SELECTOR]** (TV or DBS/CABLE) that is to be reset.
 - **[MODE SELECTOR]** (CD, CDR/MD, TAPE, DVD/VDP or VCR) and the "LEARNED/TX" indicator blinks.
- 4** Press **[MODE SELECTOR]** of the equipment that is to be reset again.

Operating the remote control unit

**List of preset codes / Liste von voreingestellten Codes / Liste de codes pré-réglés / Lista dei codici pre-regolati /
Lista de códigos pre-ajustados / Lijst van vooringestelde codes / Förteckning över förinställda koder**

CD

ADC	0004
Acoustic Research	0048
Adcom	0021, 0038
Aiwa	0003, 0018, 0023
Akal	0022
Alba	0058
Alto	0059
Arcam	0023
Ariston	0059
Audio Alchemy	0034
Audio Pro	0051
Audio Research	0023
Audio-Technica	0025
AudioTon	0023
Audiolab	0023
Audiomeca	0023
BSR	0034, 0039
Bestar	0024
Burmester	0048
Bush	0039, 0058
CDC	0048
CEC	0027
Cairn	0023
California Audio Labs	0006, 0043
Cambridge	0059
Carrera	0034
Carver	0023, 0029, 0051
Condor	0024
Craig	0058
Crown	0017
Cyrus	0023
DAK	0039
DBX	0040

DKK	0001
DMX Electronics	0023
Denon	0000
Dual	0034, 0035
Dynamic Bass	0029
EEC	0034
Eclipse	0059
Elektra	0046, 0051
Emerson	0021, 0024, 0044, 0054
Fisher	0014, 0027, 0029, 0045
GE	0002
Garrard	0039, 0041, 0046, 0048, 0049
Gemini	0059
Genexxa	0007, 0024, 0044, 0050
GoldStar	0047
Goodmans	0039, 0041, 0044, 0058, 0059
Grundig	0023
HCM	0059
Harman/Kardon	0023, 0026, 0050
Hiro	0059
Hitachi	0007, 0021
IR	0001
Inkel	0030, 0035, 0051
JVC	0012, 0061, 0064
Kenwood	0005, 0008, 0009, 0033
Kodak	0042
Krell	0023
Kyocera	0004
LXI	0044
Linn	0023
Luxman	0015
MCS	0006, 0010
MTC	0048, 0059

Magnavox	0023, 0044
Marantz	0006, 0023, 0030
Matsui	0023
McIntosh	0042
Memorex	0021, 0024, 0028, 0030, 0044
Meridian	0023
Micromega	0023
Miro	0001
Mission	0023
Mitsubishi	0022
Myryad	0023
NAD	0001
NEC	0010, 0038
NSM	0023
Nagaoka	0004
Naim	0023
Nakamichi	0020
Nikko	0024, 0025, 0027, 0059
Onkyo	0016
Optimus	0001, 0007, 0009, 0013, 0019, 0028, 0029, 0034, 0035, 0041, 0044, 0045, 0048, 0050, 0051, 0053
PMG	0024
Panasonic	0006, 0043, 0065
Parasound	0034, 0048
Philips	0023, 0042
Pink Triangle	0059
Pioneer	0007, 0044, 0053
Polk Audio	0023
Poppy	0024
Proton	0023
QED	0023
Quad	0023

Quasar	0006
RCA	0002, 0007, 0011, 0021, 0029, 0044, 0053, 0066
Radiotone	0058, 0059
Realistic	0021, 0024, 0028, 0029, 0030, 0048
Revox	0023
Roadstar	0052
Rotel	0023, 0048
Royal	0048
SAE	0023
STS	0004
Sansui	0023, 0036, 0044, 0059
Sanyo	0013, 0029, 0045
Schneider	0058
Scott	0021, 0024, 0044
Sears	0044
Sharp	0009, 0030
Sherwood	0030, 0035, 0050
Shure	0010
Sonic Frontiers	0023
Sony	0001, 0056, 0057
Soundesign	0019, 0049
SuperTech	0059
Synergy	0059
Tandy	0007
Tascam	0048
Teac	0027, 0030, 0046, 0048, 0058, 0059
Technics	0006, 0037, 0043
Thomson	0011
Thorens	0023
Universum	0011, 0023, 0051
Vector Research	0034, 0047
Victor	0012

Wards	0011, 0023
Watson	0058
Yamaha	0008, 0025, 0032
Yorx	0052
Zenith	0058

MD

BSR	1000
Condor	1000
Denon	1111
Denver	1003
JVC	1015
Kenwood	1004, 1005, 1012
Luxman	1009
Onkyo	1007
Optimus	1013
Orion	1011
Pioneer	1013, 1017
Schneider	1000
Sharp	1006
Sherwood	1014
Sony	1001, 1002
Technics	1016
Universum	1018
Yamaha	1008

DBS

ABsat	3549
AGS	3528, 3531
ASLF	3533
Akai	3507
Akena	3528
Alba	3516
Allsat	3507
Alltech	3533
Alpha	3528
AlphaStar	3542
Amitronica	3533

Amstrad	3550
Anglo	3533
Ankaro	3533
Armstrong	3510
Asat	3507
Astacom	3528
Astra	3510, 3521
Astro	3506
Athena	3528
Axiel	3528
BT	3528, 3531
Bestar	3510
Blaupunkt	3506
Boca	3510
British Sky Broadcasting	3550
Broco	3533
Bubu Sat	3533
Canal Digital	3551
Canal Satellite	3551
Canal+	3551
Chaparral	3508
CityCom	3501, 3546
Colombia	3528
Columbia	3502
Columbus	3528
Condor	3521
Conrad	3501, 3521
Crown	3510
Cyrus	3507
D-box	3536
DNT	3507
Daewoo	3533
Discovery	3531, 3528
Dynasat	3529
EP Sat	3516
Echostar	3505, 3513, 3518, 3533, 3543, 3551, 3556, 3560, 3569

Einhell	3510, 3533
Elta	3507
Emme Esse	3529, 3556
Engel	3533
Eurocrypt	3516
Eurosats	3510
Eurosky	3510, 3521
Eurostar	3529, 3564, 3565
Expressvu	3543
FTE	3554
Fenner	3528
Ferguson	3532
Finlandia	3516
Finlux	3516
Foxtel	3558
Fracarro	3556
Fuba	3506
GE	3519
Galaxis	3512, 3554
Gardiner	3546
General Instrument	3555
Gold Box	3551
Gooding	3520
Goodmans	3516
Gradiente	3559
Granada	3516
Grundig	3506, 3520, 3540, 3550
HTS	3543
Helium	3521
Hirschmann	3506, 3568
Hitachi	3516, 3547
Houston	3528
Hughes Network Systems	3539, 3574, 3575
Humax	3554
Huth	3510
IR	3506, 3516
ISkyB	3559

InVideo	3556
Indovision	3559
Intertronic	3510
Intervision	3521, 3524
JOK	3531
JVC	3520, 3543
K-SAT	3533
Kathrein	3506, 3507, 3523, 3527
Kreiselmeier	3506
La Sat	3521
Lenco	3533
Lifesat	3533
Loewe	3510
Lorenzen	3521, 3538
Magnavox	3535, 3537
Manata	3531
Manhattan	3516
Marantz	3507
Maspro	3540
Matsui	3520
Max	3521
MediaSat	3551
Mediamarkt	3510
Medion	3533
Mega	3507
Memorex	3537
Metronic	3510
Metz	3506
Micro	3533
Micro Elektronik	3533
Microtec	3533
Minerva	3520
Mitsubishi	3539
Morgan's	3502, 3510
Multichoice	3526, 3558
Myryad	3507
Mysat	3533
Netsat	3559

Neuhaus	3533
Neusat	3533
Next Level	3555
Nikko	3533
Nokia	3516, 3536, 3541, 3557, 3563, 3573
Nordmende	3516
Okano	3510, 3528
Orbit	3562
Oxford	3528
Pace	3509, 3516, 3517, 3534, 3545, 3550, 3559
Palladium	3520
Panasat	3522, 3558
Panasonic	3511, 3530, 3550
Panda	3516
Patriot	3528
Philips	3503, 3507, 3516, 3520, 3531, 3535, 3537, 3539, 3540, 3551, 3567, 3574
Pioneer	3514, 3551
Prima	3545
Profile	3531
Promax	3516
Prosat	3524
Proscan	3515
Pye	3520
Quadral	3524
Quelle	3521
RCA	3504, 3515, 3519, 3552
RFT	3507
Radio Shack	3555
Radiola	3507
Roadstar	3533
Rover	3524, 3533
SEG	3538
SKR	3533
SKY	3553, 3559

SM Electronic	3533
Saba	3531
Sabre	3516
Sagem	3548, 3572
Samsung	3571
Sat Team	3533
Satec	3533
Satline	3524
Schneider	3528
Seemann	3510
Seleco	3556
Siemens	3506
Skantin	3533
Sky Television	3561
Skymaster	3524, 3533
Skymax	3507
Smart	3502
Sony	3525, 3550
Star	3559
Star Choice	3555
Strong	3502, 3558
Sumida	3510
Sunsat	3533
Sunstar	3510
Super Sat	3529
TPS	3548
Tantec	3516
Tatung	3516
Technisat	3570
Technowelt	3521
Teco	3510
Teleka	3510
Telestar	3500
Televes	3516
Televisa	3559
Thomson	3516, 3532, 3551, 3566
Thorn	3516
Tonna	3528

Toshiba	3539, 3544
Triax	3501
Uniden	3535, 3537
Unisat	3507, 3510
Universum	3506, 3520
VTech	3546
Variosat	3506
Ventana	3507
Vestel	3538
Wela	3533
Wewa	3516
Wisi	3506, 3516
World Sat	3531
XSat	3528
Xcom Multimedia	3528
Zehnder	3500, 3546
Zenith	3553
Zeta Technology	3507
Zwergnase	3510

VCR

ASA	3006, 3018
AVP	3034
Adelsound	3002
Admiral	3014, 3026
Adventura	3000
Adyson	3017
Aiko	3030
Aiwa	3000, 3006, 3033, 3034
Akai	3009, 3020, 3031
Akiba	3017
Akura	3017
Alba	3017, 3026, 3030, 3031, 3034
Allstar	3018
America Action	3030
American High	3005
Amstrad	3000, 3030

Anam	3006, 3023, 3028, 3029, 3030
Anam National	3023, 3028, 3036, 3050
Anitech	3017
Ansonic	3002
Aristona	3018
Asha	3029
Asuka	3006
Audiosonic	3030
Audiovox	3006
Baird	3000, 3009, 3019
Basic Line	3017, 3030
Beaumark	3029
Bell & Howell	3019
Bestar	3030
Blaupunkt	3023, 3025, 3028
Blue Sky	3030
Bondstec	3017
Brandt	3032
Brandt Electronic	3009
Broksonic	3001, 3021, 3024, 3026, 3033, 3037
Bush	3017, 3026, 3030, 3034
CCE	3017, 3030
CGE	3000
Calix	3006
Canon	3005
Carena	3026
Carrefour	3012
Carver	3018
Cathay	3030
Cimline	3017
Cineral	3030
Citizen	3006, 3030
Colt	3017
Combitech	3034
Condor	3030
Craig	3006, 3013, 3017, 3029

Crown	3017, 3030
Curtis Mathes	3005, 3009, 3015, 3023, 3044
Cybernex	3029
Cyrus	3018
Daewoo	3012, 3030, 3043
Dansai	3017
De Graaf	3010
Decca	3000, 3018
Denon	3010
Diamant	3006
Domland	3026
Dual	3009
Dumont	3000, 3018, 3019
Dynatech	3000
ESC	3029, 3030
Elbe	3007
Elcatech	3017
Electrohome	3006
Electroponic	3006
Elin	3029
Elsay	3017
Elta	3017, 3030
Emerex	3003
Emerson	3000, 3001, 3006, 3011, 3021, 3024, 3026, 3030, 3037
Ferguson	3009, 3032
Fidelity	3000
Finlandia	3018, 3019
Finlux	3000, 3010, 3018, 3019
Firstline	3006, 3011, 3012, 3017, 3026
Fisher	3013, 3019
Flint	3026
Fuji	3004, 3005
Fujitsu	3000
Funai	3000

GE	3005, 3014, 3015, 3029, 3044
GEC	3018
Galaxis	3030
Garrard	3000
General Technic	3033
Genexxa	3019
Go Video	3035
GoldHand	3017
GoldStar	3006, 3007, 3027
Goodmans	3000, 3006, 3017, 3030
Gradiente	3000
Graetz	3009, 3019, 3029
Granada	3018, 3019
Grandin	3000, 3006, 3017
Grundig	3017, 3018, 3025, 3028
HCM	3017
HI-Q	3013
Hanimex	3034
Hanseatic	3006
Harley Davidson	3000
Harman/Kardon	3007, 3018
Harwood	3017
Hinari	3002, 3017, 3029, 3034
Hisawa	3034
Hischito	3012
Hitachi	3000, 3002, 3009, 3010, 3029
Hornophone	3018
Hughes Network Systems	3010
Hypson	3017
IR	3002, 3009, 3010, 3012, 3013, 3017, 3018, 3019, 3020, 3026, 3028, 3029, 3033
ITT	3009, 3019, 3020, 3029
ITV	3006, 3030

Imperial	3000
Ingersol	3002
Inno Hit	3017, 3029
Interfunk	3018
Intervision	3000, 3006, 3026, 3030
Irradio	3017, 3018
JVC	3009, 3016
Jensen	3009
KEC	3006, 3030
KLH	3017
Kaisui	3017
Kendo	3020, 3026
Kenwood	3007, 3009, 3016
Kimari	3013
Kneissel	3034
Kodak	3005, 3006
Korpel	3017
Kuba Electronic	3013
Kyoto	3017
LXI	3006
Lenco	3030
Leyco	3017
Lloyd's	3000
Loewe	3002, 3006, 3018, 3023, 3036, 3050
Logik	3002, 3017, 3029
Luxor	3011, 3014, 3019, 3020
M Electronic	3000, 3007
MEI	3005
MGA	3011, 3029
MGN Technology	3029
MTC	3000, 3029
Magnasonic	3030
Magnavox	3000, 3005, 3008, 3018, 3022, 3038
Magnin	3029
Manesth	3012, 3017
Marantz	3005, 3018

Marta	3006
Matsui	3002, 3026, 3033, 3034
Matsushita	3005, 3023, 3036
Medion	3033
Memorex	3000, 3005, 3006, 3008, 3013, 3014, 3019, 3023, 3026, 3029, 3033, 3036, 3037, 3046, 3050, 3052
Memphis	3017
Metz	3006, 3023, 3025, 3036, 3050
Minerva	3025
Minolta	3010
Mitsubishi	3011, 3014, 3016, 3018
Motorola	3005, 3014
Multitech	3000, 3017
Murphy	3000
Myryad	3018
NAD	3019
NAP	3008
NEC	3007, 3009, 3016, 3019
National	3028
Neckermann	3018
Nesco	3017
Nikkai	3017, 3030
Nikko	3006
Noblex	3029
Nokia	3009, 3019, 3020, 3029
Nordmende	3009, 3032
Oceanic	3000, 3009
Okano	3031, 3033
Olympus	3005, 3028
Optimus	3006, 3014, 3019, 3023, 3035, 3036, 3047, 3048, 3050, 3052
Orion	3001, 3002, 3021, 3024, 3026, 3033, 3034, 3037
Osaki	3000, 3006, 3017

Otake	3026
Otto Versand	3018
Palladium	3006, 3009, 3017
Panasonic	3005, 3023, 3027, 3028, 3036, 3040, 3048, 3050, 3052, 3053
Pathe Cinema	3002, 3011
Pathe Marconi	3009
Penney	3005, 3006, 3007, 3010, 3029
Pentax	3010
Perdio	3000
Philco	3005, 3007, 3026, 3037
Philips	3005, 3018, 3038, 3041, 3049, 3051
Phonola	3018
Pilot	3006
Pioneer	3016, 3018
Polk Audio	3018
Portland	3030
Pro Vision	3030
Profitronic	3029
Proline	3000
Proscan	3015, 3044
Prosonic	3030
Protec	3017
Pulsar	3008
Pye	3018
Quasar	3005, 3023, 3036, 3050
Quelle	3018
RCA	3005, 3010, 3014, 3015, 3020, 3022, 3029, 3044
RFT	3017
Radialva	3006, 3014
Radio Shack	3000, 3046
Radiola	3018
Radix	3006
Randex	3006

Realistic	3000, 3005, 3006, 3013, 3014, 3019
ReplayTV	3039, 3040
Rex	3009
Roadstar	3006, 3017, 3029, 3030
Runco	3008
SBR	3018
SEG	3029
SEI	3002, 3018
STS	3010
Saba	3009, 3032
Saisho	3002, 3026
Salora	3011, 3020
Samsung	3012, 3029, 3035
Sanky	3008, 3014
Sansui	3000, 3009, 3016, 3026, 3037
Sanwa	3002
Sanyo	3013, 3019, 3029
Saville	3034
Schaub Lorenz	3000, 3009, 3019
Schneider	3000, 3017, 3018
Scott	3011, 3012, 3021, 3024
Sears	3000, 3005, 3006, 3010, 3013, 3019
Seleco	3009
Semp	3012
Sentra	3017
Sharp	3014
Shintom	3017, 3019
Shivaki	3006
Shogun	3029
Shorai	3002
Siemens	3006, 3018, 3019, 3025
Siera	3018
Silva	3006
Singer	3012, 3017
Sinudyne	3002, 3018

Sonneclair	3017
Sontec	3006
Sony	3000, 3003, 3004, 3005, 3042, 3045
Soundwave	3006, 3026
Ssangyong	3017
Stern	3030
Sunkai	3033
Sunstar	3000
Suntronic	3000
Sunwood	3017
Supra	3006
Sylvania	3000, 3005, 3011, 3018
Symphonic	3000
TMK	3029
Taisho	3002, 3026
Tandberg	3030
Tandy	3000, 3019
Tashiko	3000
Tatung	3000, 3009, 3018
Teac	3000, 3009, 3030, 3043
Tec	3017, 3030
Tech Line	3017
Technics	3005, 3023, 3028
Teknika	3000, 3005, 3006
Teleavia	3009
Telefunken	3009, 3032
Teletch	3017
Tenosal	3017
Tensai	3000
Thomas	3000
Thomson	3009, 3015, 3016, 3032
Thorn	3009, 3019
Tivo	3041, 3042
Tokai	3017
Toshiba	3009, 3011, 3012, 3018
Totevision	3006, 3029
Uher	3029

Ultravox	3030
Unitech	3029
Universum	3000, 3006, 3018, 3020, 3025, 3029
Vector	3012
Vector Research	3007
Victor	3009, 3016
Video Concepts	3012
Videosonic	3029
Wards	3000, 3005, 3010, 3013, 3014, 3015, 3017, 3018, 3022, 3029, 3044
Watson	3018
White Westinghouse	3017, 3026, 3030
XR-1000	3000, 3005, 3017
Yamaha	3007
Yamishi	3017
Yokan	3017
Yoko	3029
Zenith	3000, 3004, 3008, 3026, 3037

CDR

Denon	0000, 0001
HHB	0500
Kenwood	0501
Marantz	0501
NAD	0503
Philips	0501
Pioneer	0500, 0502
RCA	0502

CABLE

ABC	4001, 4002, 4005, 4006
Alcatel	4028, 4029
Americast	4030
Bell & Howell	4005

Bell South	4030
Birmingham Cable Communications	
	4012
British Telecom	4001
Cable & Wireless	4034
Cabletime	4018, 4024
Daeryung	4002
Filmnet	4017
France Telecom	4019, 4028, 4029
Galaxi	4002
General Instrument	4020, 4025
GoldStar	4008
Hamlin	4003, 4011
Jerrold	4001, 4004, 4005, 4012, 4020, 4025
MNet	4017
Macab	4026
Memorex	4000
Motorola	4020, 4035
Mr. Zap	4036
Noos	4026
Ono	4034
PVP Stereo Visual Matrix	
	4001
Pace	4009, 4032, 4034
Panasonic	4000, 4007
Paragon	4000
Philips	4015, 4016
Pioneer	4008, 4023, 4027, 4037
Pulsar	4000
Quasar	4000
Regal	4011, 4014
Runco	4000
Sagem	4026
Samsung	4008
Scientific Atlanta	4002, 4006, 4013, 4021, 4027, 4037
Sony	4031

Starcom	4001
Supercable	4012
Tele+1	4017
Tocom	4004
Toshiba	4000
United Cable	4001
Videoway	4010
Visionetics	4033
Visiopass	4019
Zenith	4000, 4022, 4030

TV

A-Mark	4501
A.R. Systems	4593
AOC	4501, 4508, 4512, 4519, 4554
AWA	4502
Acura	4502
Admiral	4531, 4545, 4585
Adventura	4516
Adyson	4564
Aiko	4530
Aiwa	4612
Akai	4502, 4512, 4562, 4565, 4596
Akib	4572
Akiba	4514, 4565, 4571, 4572, 4584
Akura	4565, 4569
Alaron	4552, 4563
Alba	4502, 4513, 4514, 4565, 4579, 4607
Allorgan	4572
Allstar	4514
Ambassador	4550
America Action	4553
Amplivision	4564
Ampro	4619

Amstrad	4502, 4514, 4549, 4550, 4579, 4581
Anam	4501, 4502, 4553, 4568
Anam National	4522, 4568, 4605
Anglo	4569
Anitech	4502
Ansonic	4502, 4514, 4578
Arcam	4563, 4564
Archer	4501
Aristona	4514, 4593
Asora	4502
Asuka	4565
Atlantic	4561
AudioTon	4564, 4569
Audiosonic	4514, 4536
Audiovox	4501, 4530, 4553, 4583, 4599
Autovox	4561
BPL	4571
BSR	4572
BTC	4565
Baird	4526, 4527, 4557, 4558, 4562, 4564
Basic Line	4502, 4565
Baur	4514, 4590, 4592
Baysonic	4553
Bazin	4564
Beaumark	4551
Beko	4578, 4615
Belcor	4508
Bell & Howell	4505, 4542
Beon	4514
Best	4578
Bestar	4514, 4578, 4580
Binatone	4564
Blaupunkt	4560, 4573, 4574
Blue Sky	4565, 4607
Blue Star	4571

Boots	4564
Bradford	4553
Brandt	4536, 4575
Brinkmann	4512, 4582
Britannia	4563
Brockwood	4508
Broksonic	4501, 4567, 4585
Bush	4502, 4513, 4514, 4565, 4571, 4572, 4576, 4579, 4580, 4607
CCE	4514, 4564
CGE	4578, 4582
CS Electronics	4563
CXC	4553
Candle	4512, 4516, 4523, 4555
Canton	4565
Carad	4598
Carena	4514, 4584
Carnivale	4512
Carrefour	4513
Carver	4521, 4548
Cascade	4502
Cathay	4514
Celebrity	4500
Centurion	4514
Cimline	4502
Cineral	4530, 4583
Citizen	4512, 4515, 4516, 4523, 4524, 4530, 4555, 4570
City	4502
Clairtone	4554
Clarivox	4514
Clatronic	4578
Concerto	4523
Condor	4578
Contec	4502, 4513, 4553, 4554, 4563
Continental Edison	4536, 4588

Cosmel	4514
Craig	4553
Crosley	4521
Crown	4502, 4514, 4515, 4553, 4578, 4582
Curtis Mathes	4505, 4512, 4515, 4517, 4518, 4521, 4523, 4524, 4531, 4539, 4542, 4547, 4583, 4586, 4618, 4622, 4626
Cybertron	4565
DER	4557, 4558
Daewoo	4502, 4508, 4514, 4515, 4530, 4542, 4580, 4583, 4599, 4600
Dainichi	4565
Dansai	4514
Dayton	4502
Daytron	4508
De Graaf	4562
Decca	4514, 4526
Denko	4569
Denon	4539
Denver	4514
Desmet	4502, 4514
Diamant	4514
Dixi	4502, 4514
Dual	4514, 4564
Dual Tec	4564
Dumont	4506, 4508, 4525
Dwin	4617, 4620
ECE	4514
Elbe	4564
Electroband	4500, 4554
Electa	4569
Elin	4514
Elite	4565
Elta	4502

Emerson	4508, 4515, 4542, 4550, 4551, 4552, 4553, 4554, 4567, 4570, 4571, 4585, 4599, 4600
Emperor	4571
Envision	4512
Erres	4504, 4514
Etron	4502
Euromann	4514, 4569
Europa	4514
Europhon	4564
Expert	4561
Exquisit	4514
Fenner	4502, 4580
Ferguson	4514, 4527, 4536, 4557, 4558, 4575
Fidelity	4558, 4563
Filsai	4564
Finlandia	4562
Finlux	4514, 4525, 4526, 4552
Firstline	4502, 4563, 4564, 4572, 4607
Fisher	4542, 4544, 4562, 4564, 4578
Flint	4584
Forgestone	4558
Formenti	4514
Fortress	4531
Fraba	4514, 4578
Friac	4502, 4578
Frontech	4545, 4569
Fujitsu	4526, 4552, 4561, 4609
Funai	4549, 4552, 4553, 4569, 4572
Futuretech	4553
GBC	4502, 4565, 4580

GE	4510, 4511, 4517, 4518, 4522, 4531, 4538, 4551, 4571, 4583, 4618, 4622, 4626
GEC	4514, 4526, 4564
GPM	4565
Galaxi	4514
Galaxis	4514, 4578
Geloso	4502
General	4555
General Technic	4502
Genexxa	4545, 4565
Gibraltar	4506, 4508, 4512
GoldStar	4508, 4512, 4514, 4515, 4523, 4536, 4551, 4564
Gooding	4588
Goodmans	4513, 4514, 4526, 4552, 4564, 4579, 4580, 4600
Gorenje	4578
Gradiente	4520, 4523, 4548
Graetz	4545
Granada	4514, 4526, 4562, 4564
vrandin	4571, 4598
Grundig	4514, 4525, 4560, 4588, 4593, 4595
Grunpy	4552, 4553
HCM	4502, 4571, 4581
Halifax	4564
Hallmark	4551
Hampton	4563, 4564
Hanimex	4572
Hanseatic	4514, 4593
Hantarex	4514
Hantor	4514
Harley Davidson	4552
Harman/Kardon	4521
Harvard	4553
Harwood	4502, 4514, 4581

Hema	4502, 4564
Hikona	4565
Hinari	4502, 4513, 4514, 4552, 4565
Hisawa	4571, 4584
Hitachi	4505, 4513, 4523, 4536, 4539, 4541, 4545, 4564, 4594
Hornophone	4514
Huanyu	4563, 4580
Hyper	4502, 4563, 4564
Hypson	4514, 4569, 4571
ICE	4564, 4569, 4579
ICeS	4565
IR	4503, 4504, 4513, 4514, 4525, 4526, 4527, 4531, 4534, 4535, 4536, 4545, 4557, 4558, 4559, 4560, 4561, 4563, 4564, 4566, 4572, 4573, 4578, 4580, 4590, 4592, 4593
ITS	4579
ITT	4545
ITV	4514, 4569
Iberia	4514
Imperial	4578, 4582
Indiana	4514
Infinity	4521
Ingelen	4545
Ingersol	4502
Inno Hit	4526
Innova	4514
Inteq	4506
Interbuy	4514, 4569
Interfunk	4514, 4545, 4592
Internal	4514
Intervision	4514, 4564, 4569
Irradio	4565, 4579

Isukai	4565
JBL	4521
JCB	4500
JVC	4513, 4520, 4532, 4557, 4579, 4606
Janeil	4516
KB Aristocrat	4545
KEC	4553
KTV	4512, 4515, 4553, 4554, 4564, 4570
Kaisui	4502, 4563, 4564, 4565, 4571
Kamp	4563
Kapsch	4545, 4561
Karcher	4598
Kasui	4571
Kathrein	4593
Kawasho	4563
Kaypani	4519
Kendo	4514
Kennedy	4561
Kenwood	4508, 4512
Kingsley	4563
Kloss	4516
Kneissel	4514, 4580, 4598
Kolster	4514
Konka	4602, 4603, 4604, 4613, 4614
Korpel	4514
Kosmos	4514
Koyoda	4502
Kyoshu	4581
Kyoto	4545
LG	4523
LXI	4517, 4521, 4542, 4543, 4551, 4618
Leyco	4514, 4526, 4569, 4572
Liesenk & Tter	4514

Liesenkotter	4514, 4573
Lifetec	4514, 4565, 4580
Loewe	4592
Logik	4505
Luma	4561
Lumatron	4564
Luxman	4523
Luxor	4559
M Electronic	4502, 4514, 4536, 4545, 4564, 4580, 4587
MEI	4554
MGA	4508, 4512, 4540, 4551
MTC	4508, 4512, 4523, 4524, 4554, 4563, 4592
Magnafon	4527, 4563
Magnavox	4509, 4512, 4513, 4521, 4533, 4552, 4555, 4556, 4624
Magnum	4514
Majestic	4505
Manesth	4564, 4569
Marantz	4512, 4514, 4521, 4593
Mark	4514
Matsui	4502, 4503, 4513, 4514, 4526, 4550, 4562, 4564, 4572, 4576, 4579, 4588
Matsushita	4568, 4605
Mediator	4504, 4514
Medion	4607
Megas	4598
Megatron	4501, 4539, 4551
Memorex	4502, 4505, 4523, 4540, 4542, 4551, 4552, 4568, 4585
Metz	4577
Midland	4506, 4515, 4517, 4518, 4538, 4618
Minerva	4525, 4588

Minoka	4581
Minutz	4510
Mitsubishi	4508, 4513, 4531, 4535, 4540, 4551, 4592
Mivar	4563
Monaco	4502
Motorola	4522, 4531
Multibroadcast	4558
Multitech	4502, 4553, 4563, 4564
Murphy	4515, 4526, 4545, 4563
Myryad	4593
NAD	4543, 4547, 4551
NEC	4508, 4512, 4513, 4523, 4548, 4584, 4589
NEI	4514
NTC	4530
Nakimura	4514, 4580
Nakio	4587
National	4566
Neckermann	4514, 4590, 4593
Nesco	4552
Netsat	4514
Neufunk	4514, 4593
New Tech	4564
Nicamagic	4563
Nikkai	4514, 4526, 4563, 4565, 4569
Nikko	4512, 4530, 4551
Nobliko	4525, 4563
Nokia	4587
Nordmende	4536
Noshi	4507
Novak	4504
Novatronic	4514
Oceanic	4545
Okano	4502, 4514, 4569, 4578
Omega	4569
Onwa	4553

Optimus	4542, 4547, 4568, 4605
Optonica	4531, 4546
Orion	4514, 4550, 4552, 4567, 4572, 4576, 4585
Online	4514, 4565
Osaki	4526, 4564, 4565, 4569, 4581
Osio	4514
Oso	4565
Osume	4526
Otto Versand	4513, 4514, 4564, 4590, 4592, 4593
Pael	4563
Palladium	4578, 4582
Panama	4564, 4569
Panasonic	4518, 4522, 4537, 4545, 4566, 4568, 4577, 4605
Panavision	4514
Pathe Cinema	4563
Pausa	4502
Penney	4501, 4507, 4508, 4510, 4511, 4512, 4515, 4517, 4518, 4523, 4524, 4538, 4543, 4551, 4618, 4626
Perdio	4514, 4545
Philco	4508, 4509, 4512, 4521, 4533, 4539, 4585
Philips	4504, 4514, 4521, 4558, 4580, 4593
Phoenix	4563
Phonola	4504, 4514
Pilot	4508, 4512, 4515
Pioneer	4536, 4545, 4547, 4608
Plantron	4502
Playsonic	4564
Portland	4508, 4515, 4530
Precision	4564
Prima	4569

Princeton	4616
Prinz	4559
Prism	4518
Profex	4502
Profi	4502
Profitronic	4514
Proline	4526
Proscan	4517, 4618
Prosonic	4514
Protech	4502, 4514, 4564, 4569, 4582, 4607
Proton	4501, 4519, 4551, 4586
Pulsar	4506, 4508
Pye	4504
Quasar	4518, 4522, 4546, 4568, 4605
Quelle	4503, 4514, 4525, 4573, 4574, 4590, 4592
Questa	4513
R-Line	4514
RBM	4525
RCA	4507, 4508, 4517, 4518, 4529, 4531, 4538, 4608, 4618, 4621, 4622, 4623, 4626, 4627
RFT	4526
Radialva	4514, 4565
Radio Shack	4508, 4512, 4515, 4517, 4523, 4542, 4546, 4551, 4553, 4618
Radiola	4504, 4514
Radiomarelli	4514
Radiotone	4502, 4514, 4569
Rank Arena	4513
Realistic	4508, 4512, 4515, 4523, 4542, 4546, 4551, 4553
Recor	4514
Redstar	4514

Reflex	4514
Revox	4514
Rex	4545, 4561, 4569
Rhapsody	4554, 4563
Roadstar	4502, 4565, 4569, 4582
Royal Lux	4581
Runco	4506, 4512, 4589, 4597
SBR	4504, 4514, 4558
SEG	4513, 4564, 4569, 4607
SEI	4550, 4572
SEI-Sinudyne	4514
SKY	4514
SSS	4508, 4553
Saba	4536, 4545, 4575
Sagem	4598
Saisho	4502, 4503, 4550, 4569
Salora	4545, 4559
Sampo	4512, 4515, 4519
Samsung	4502, 4508, 4512, 4514, 4515, 4523, 4524, 4529, 4551, 4564, 4569, 4578, 4593, 4595
Samsux	4515
Sandra	4563
Sansei	4583
Sansui	4585
Sanyo	4503, 4513, 4526, 4542, 4544, 4562
Schneider	4514, 4565, 4579, 4607
Scimitsu	4508
Scotch	4551
Scotland	4545
Scott	4508, 4551, 4552, 4553, 4567
Sears	4517, 4521, 4523, 4542, 4543, 4544, 4549, 4551, 4552, 4618
Seleco	4545, 4561

Semivox	4553
Semp	4543
Sencora	4502
Sentra	4565
Serino	4598, 4563, 4584
Sharp	4513, 4515, 4531, 4546, 4610, 4611
Shintosh	4514
Shogun	4508
Shorai	4572
Siemens	4514, 4560, 4573, 4574
Signature	4505
Silva	4563
Silver	4513
Simpson	4555, 4556
Sinudyne	4550, 4572
Sky-Worth	4514
Solavox	4545
Sonitron	4562
Sonoko	4502, 4514
Sonolor	4545, 4562
Sontec	4514
Sony	4500, 4503, 4513, 4528, 4590, 4605
Sound & Vision	4580
Soundesign	4551, 4552, 4553, 4555
Soundwave	4514, 4582
Spectricon	4501
Squareview	4549
Ssangyong	4502
Standard	4502, 4564, 4565
Starlite	4553
Stenway	4565, 4571
Stern	4545, 4561
Strato	4514, 4569
Stylandia	4564
Sunkai	4572, 4576
Sunstar	4502, 4514, 4579

Sunwood	4514
SuperTech	4563
Supra	4523
Supre-Macy	4516
Supreme	4500
Susumu	4565
Sylvania	4509, 4512, 4521, 4533
Symphonic	4549, 4553
Sysline	4514
Sytong	4563
TMK	4523, 4550, 4551
TNCi	4506
TVTEXT 95	4593
Tandberg	4577
Tandy	4515, 4526, 4531, 4545, 4564, 4565
Tashiko	4513, 4564
Tatung	4501, 4514, 4522, 4526, 4564
Teac	4502, 4514, 4569, 4571, 4581, 4582, 4584, 4607
Tec	4564
Technics	4518, 4568, 4605
Technol Ace	4552
Techwood	4501, 4518, 4523
Teknika	4505, 4508, 4515, 4521, 4523, 4524, 4530, 4540, 4552, 4553, 4555
Telefunken	4523, 4534, 4536, 4575, 4601
Telegaz	4514
Telemeister	4514
Telesonic	4514
Telestar	4514
Teletech	4502
Teleton	4513, 4555, 4561, 4564
Televideon	4563
Temco	4572

Tennessee	4514
Tensai	4565, 4572
Texet	4563, 4565
Thomson	4536, 4601, 4627
Thorn	4514, 4526, 4557, 4558, 4590, 4592
Tokai	4502, 4514, 4545
Tomashi	4571
Toshiba	4513, 4524, 4525, 4542, 4543, 4591, 4625
Tosonic	4554
Totevision	4515
Trans Continens	4564
Tristar	4558, 4565
Triumph	4550
Tsoschi	4571
Uher	4561
Ultravox	4514, 4563
Unic Line	4514
United	4514
Universal	4511
Universum	4514, 4569, 4578
Univox	4514, 4545
Vector Research	4512
Vestel	4514
Victor	4513, 4520, 4568, 4605
Videologic	4565, 4563
Videotechnic	4564
Vidikron	4521
Vidtech	4508, 4513, 4551
Viking	4516
Vision	4564
Vistar	4561
Voxson	4545
Waltham	4564
Wards	4505, 4508, 4509, 4510, 4511, 4512, 4521, 4523, 4528, 4533, 4546, 4551, 4552

Watson	4514
Watt Radio	4563
Wega	4513
Wegavox	4502
White Westinghouse	4514, 4563, 4585, 4599, 4600
Windstar	4571
Xrypton	4514
Yamaha	4508, 4512
Yamishi	4564, 4571, 4584
Yokan	4514
Yoko	4514, 4564, 4569
Zanussi	4561
Zenith	4505, 4506, 4530, 4585, 4600
Zonda	4501

LD

Aiwa	2507
Carver	2502, 2505, 2510
Cyrus	2511
Denon	1111, 1112, 1113
Disco Vision	2500
Funai	2507
GoldStar	2503
Harman/Kardon	2505
Hitachi	2500
Magnavox	2505, 2509
Marantz	2502, 2505
Mitsubishi	2501
NAD	2501
Optimus	2501
Panasonic	2508
Philips	2502, 2505, 2511
Pioneer	2500, 2501
Polk Audio	2505
Quasar	2508

Radiola	2511
Realistic	2507
Renaissance	2510
Salora	2502
Samsung	2510
Sega	2500
Sony	2504, 2506
Technics	2508
Telefunken	2501
Theta Digital	2505
Yamaha	2509

DVD

Afreedy	2039
Aiwa	2022
Akai	2015
Apex	2028, 2049
Bush	2035
Denon	0000, 0001
Emerson	2014
Fisher	2027
GE	2003
Go Video	2044
Gradiente	2023
Harman/Kardon	2013, 2041
Hitachi	2012, 2025
Hiteker	2028
JMB	2037
JVC	2010, 2017
Kenwood	2000, 2006, 2032, 2048
Konka	2043, 2045, 2046, 2047
LG	2014
Lecson	2038
Magnavox	2001, 2030
Marantz	2007
Microsoft	2003
Mitsubishi	2002
NAD	2036

Onkyo	2001, 2016, 2018
Optimus	2011
Oritron	2023
Panasonic	2000, 2020, 2031
Philco	2035
Philips	2001, 2007
Pioneer	2004, 2011, 2020
Princeton	2029
Proline	2024
Proscan	2003
RCA	2003, 2011, 2042
REC	2034
Realmagic	2029
Roadstar	2034
SM Electronic	2035
Sampo	2039
Samsung	2012
Sanyo	2027
Sharp	2019
Sherwood	2021
Sony	2005
Teac	2011
Technics	2000
Techwood	2036
Theta Digital	2011
Thomson	2003, 2009
Toshiba	2001
Universum	2014
Wesder	2040
Wharfedale	2033, 2038
Yamaha	2000, 2008
Yamakawa	2026
Zenith	2001, 2014

TAPE

Aiwa	1502, 1516, 1517
Akai	1525, 1529
Arcam	1506

Carver	1502
Denon	0000
Fisher	1505
Garrard	1527, 1529
Grundig	1502
Harman/Kardon	1502, 1514
Inkel	1503, 1504, 1528
JVC	1521, 1522, 1523
Kenwood	1503, 1504
Magnavox	1502
Marantz	1500, 1502
Memorex	1509, 1510
Mitsubishi	1525, 1529
Myryad	1502
Onkyo	1511, 1512, 1524
Optimus	1501, 1518, 1528, 1529
Panasonic	1519
Philips	1502
Phonotrend	1528
Pioneer	1501, 1509, 1510, 1518
Polk Audio	1502
RCA	1501, 1518
Revox	1502, 1515
Sansui	1500, 1502
Sanyo	1505
Sherwood	1528
Sony	1513, 1520, 1526
Tae Kwang	1529
Teac	1525, 1527
Technics	1519
Thorens	1502
Victor	1521, 1522, 1523
Wards	1501
Yamaha	1507, 1508

DVD preset codes DVD-Voreinstellungscodes Codes prééglés DVD Codici di preselezione DVD Códigos de preajuste de DVD DVD-voorkeuzecodes Förinställda DVD-koder	0000	0001
DENON		
Model No.	DVD-550	DVD-2800
Modellnr	DVD-700	DVD-2800II
Modèle numéro	DVD-900	DVD-2900
Modello No	DVD-1000	DVD-2910
Nº de modelo	DVD-1400	DVD-3800
Modelnr	DVD-1500	DVD-3910
Modellnr	DVD-1710	DVD-A11
	DVD-1910	DVD-A1
	DVD-2200	DVD-A1XV
		DVD-800
		DVD-1600
		DVD-2000
		DVD-2500
		DVD-3000
		DVD-3300