


7 REMOTE CONTROL UNIT

Following the procedure outlined below, insert the batteries before using the remote control unit.

Range of operation of the remote control unit

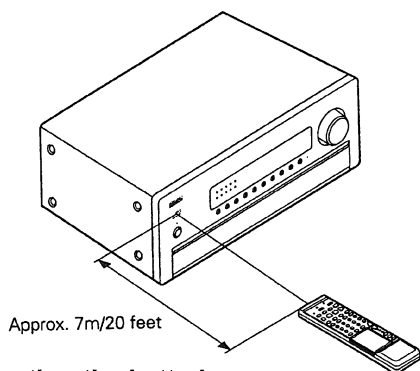


Point the remote control unit at the remote control sensor as shown on the diagram at the left.

NOTES:


- The remote control unit can be used from a straight distance of approximately 7 meters/20 feet, but this distance will shorten or operation will become difficult if there are obstacles between the remote control unit and the remote control sensor, if the remote control sensor is exposed to direct sunlight or other strong light, or if operated from an angle.
- Neon signs or other devices emitting pulse-type noise nearby may result in malfunction, so keep the set as far away from such devices as possible.

Inserting the batteries

- Open the bottom cover of the remote control unit and remove the battery cover.

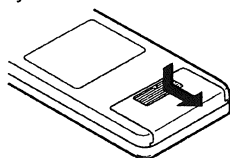

- Insert the two R6P/AA batteries, matching the ⊕ and ⊖ marks on the batteries with those in the case. Close the bottom cover until it clicks shut.

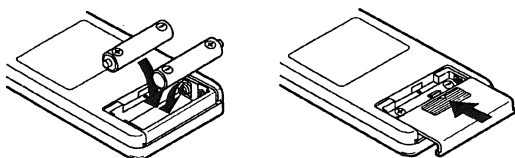

NOTES:

- Use only AA, R6P, UM-3 batteries for replacement.
- Be sure the polarities are correct. (See the illustration inside the battery compartment.)
- Remove the batteries if the remote control transmitter will not be used for an extended period of time.
- If batteries leak, dispose of them immediately. Avoid touching the leaked material or letting it come in contact with clothing, etc. Clean the battery compartment thoroughly before installing new batteries.
- Have replacement batteries on hand so that the old batteries can be replaced as quickly as possible when the time comes.
- The codes that have been learned may be lost if removed batteries are not replaced within about 5 minutes.

7-1 System code buttons

DENON remote-controllable audio components can be controlled using this unit's remote control unit. Note that some components, however, cannot be operated with this remote-control unit.

- Set to slide switch to "AUDIO" ("AVR/AVC").




- Set the slide switch to the position for the component to be operated (CD, DECK or DAT).




- Use the buttons shown below to operate the audio component. For details, refer to the respective component's manual.

a. For CD players and DATs

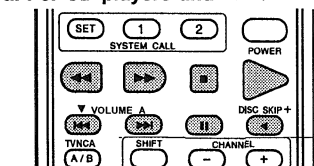


- ◀▶ : Manual search (reverse and forward)
- : stop
- ▶ : Play
- ◀▶ : Auto search
- || : Pause
- DISC SKIP + : Disc selection (CD changer only)

b. For tape decks (DECK)

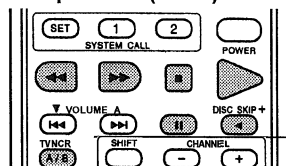

- ◀ : Reverse
- ▶ : Forward
- : stop
- ▶ : Forward play
- || : Pause
- A/B : A/B deck selection
- ◀ : Reverse play


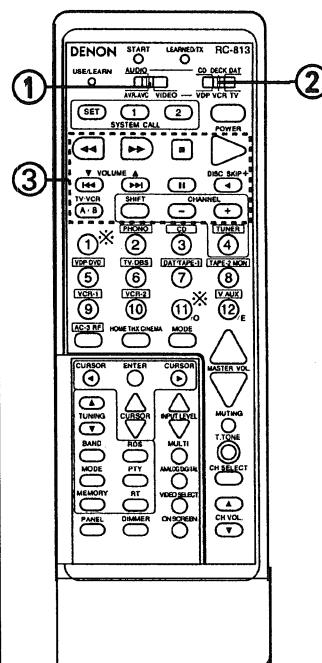



※ These buttons does not function. (These buttons can be used by using the preset memory or the learning function.)

7-2 Preset memory

DENON and other makes of components can be operated by setting the preset memory for your make of video component. **Operation is not possible for some models, however. In this case use the learning function (see page 21) to store the remote control signals.**

  
For instructions on clearing the presettings stored in the preset memory, see page 22.


- Set the slide switch to "VIDEO".

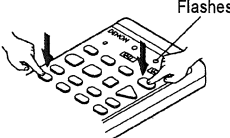- Set the slide switch to the component to be registered (VDP, VCR or TV).


(Keep the POWER button pressed in when performing steps 3 and 4.)
- Holding in the POWER button, press the button for the corresponding manufacturer in block A.
 (Refer to Table 7-2.)

 
The LEARNED/TX LED flashes

- Next, while holding the POWER button, press the button for the code in block B. (Refer to Table 7-2.) The operation is completed when the button is released and the LEARNED/TX LED lights.

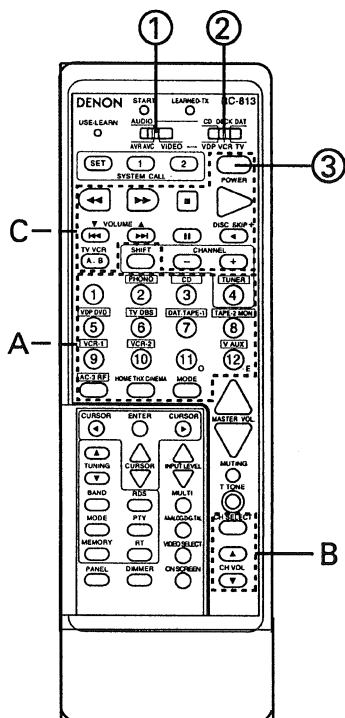



- To continue registering other components, repeat steps 2 to 4.

This remote control unit can be used to operate components of other manufacturers without using the learning function by registering the manufacturer of the component as shown on Table 7-2.

Table 7-2: Combinations of Personal System Codes for Different Manufacturers

"VDP"

A \ B	CH SELECT (CH SELECT)	CH VOL. (CH VOL.)	CH VOL. (CH VOL.)
①	DENON A	DENON B	DENON C
② (PHONO)	—	—	—
③ (CD)	MITSUBISHI	—	—
④ (TUNER)	PANASONIC	—	—
⑤ (VDP/DVD)	—	—	—
⑥ (TV/DBS)	SONY A	SONY B	SONY C
⑦ (DAT/TAPE-1)	PIONEER	—	—
⑧ (TAPE-2MON)	—	—	—
⑨ (VCR-1)	SANYO	—	—
⑩ (VCR-Z)	SHARP	—	—
⑪	—	—	—
⑫ (V.AUX)	PHILIPS	—	—
IAC-3 RF (AC-3RF)	RCA	—	—
HOMETHX CINEMA 0 (HOME THX CINEMA)	—	—	—
MODE (MODE)	MAGNAVOX	—	—

"VCR"

A \ B	CH SELECT (CH SELECT)	CH VOL. (CH VOL.)	CH VOL. (CH VOL.)
①	—	—	—
② (PHONO)	HITACHI A	HITACHI B	HITACHI C
③ (CD)	MITSUBISHI A	MITSUBISHI B	MITSUBISHI C
④ (TUNER)	PANASONIC A	PANASONIC B	—
⑤ (VDP/DVD)	JVC (VICTOR)A	JVC (VICTOR)B	—
⑥ (TV/DBS)	SONY A	SONY B	SONY C
⑦ (DAT/TAPE-1)	PIONEER	—	—
⑧ (TAPE-2MON)	TOSHIBA A	TOSHIBA B	—
⑨ (VCR-1)	SANYO A	SANYO B	—
⑩ (VCR-Z)	SHARP A	SHARP B	—
⑪	NEC A	NEC B	NEC C
⑫ (V.AUX)	PHILIPS A	PHILIPS B	PHILIPS C
IAC-3 (AC-3RF)	RCAA	RCA B	—
HOMETHX CINEMA 0 (HOME THX CINEMA)	GENERAL ELECTRIC A	GENERAL ELECTRIC B	—
MODE (MODE)	MAGNAVOX A	MAGNAVOX B	MAGNAVOX C

“TV”


A \ B	CH SELECT (CH SELECT)	CH VOL. (CH VOL.)	CH VOL. (CH VOL.)
①	DENON	—	—
② (PHONO)	HITACHI A	HITACHI B	—
③ (CD)	MITSUBISHI A	MITSUBISHI B	MITSUBISHI C
④ (TUNER)	PANASONIC	—	—
⑤ (VDP/DVD)	JVC (VICTOR)	—	—
⑥ (TV/DBS)	SONY A	—	—
⑦ (DAT/TAPE-1)	IONEER	—	—
⑧ (TAPE-2/MON)	TOSHIBA	—	—
⑨ (VCR-1)	SANYO A	SANYO B	—
⑩ (VCR-2)	SHARP	—	—
⑪	NEC A	NEC B	NEC C
⑫ (V.AUX)	PHILIPS A	PHILIPS B	PHILIPS C
AC-3 RF (AC-3RF)	RCAA	RCA B	—
HOME THX CINEMA 0 (HOME THX CINEMA)	GENERAL ELECTRIC A	GENERAL ELECTRIC B	—
MODE (MODE)	MAGNAVOX A	MAGNAVOX B	MAGNAVOX C

NOTES:



- The signals for the pressed buttons are emitted while setting the preset memory. To avoid accidental operation, cover the remote control unit's transmitting window while setting the preset memory.
- Some models and years of manufacture of components of the manufacturers listed on Table 7-2 cannot be used.

7-3 Operation after components are registered

 - Set the slide switch to “VIDEO”.




 - Set the slide switch to the component to be registered (VDP, VCR or TV).

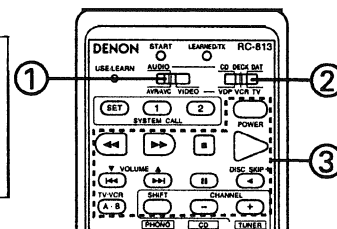


- Use the buttons shown below to operate the video component. (Some models cannot be used.)
For details, refer to the respective component's manual.

a. VDP

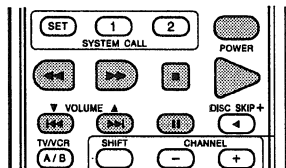


- POWER : Power on/off
 ◀▶ : Manual search (reverse and forward)
 ■ : stop
 ▶ : Play
 ◀▶ : Auto search
 II : Pause

b. VCR

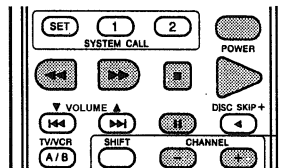

- POWER : Power on/off
 ◀▶ : Manual search (reverse and forward)
 ■ : stop
 ▶ : Play
 II : Pause
 CHANNEL : Channel selection
 +, -

c. TV

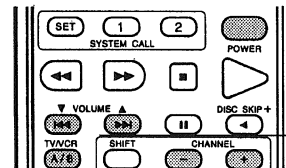


- POWER : Power on/off
 VOLUME : Volume up/down
 ▲, ▼ : TV/video selection
 CHANNEL : Channel selection
 +, -

7-4 Remote control unit learning function

If your AV components are not DENON products or if operation is not possible with the preset memory settings, the components' remote control signals can be "learned" to enable remote control operation. The buttons that can be "learned" are the CD, DAT and DECK system buttons (see page 18) and the VDP, VCR and TV system buttons (see page 20). (For the TV only, the A block buttons can also be "learned".)


1. Press the **USE/LEARN** selector button with the tip of a pen etc., to set the learn mode. Both the **START** and **LEARNED/TX** indicators flash.

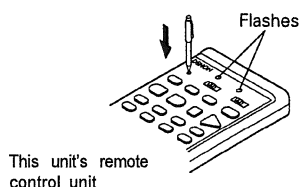


2. Set the program switch to the side to be "learned".
Set to the AUDIO side for the CD, tape deck or DAT position, to the VIDEO side for the VDP, VCR or TV position.



 3. Set the program switch to the position to be "learned".




4. Set the remote control units so they are facing each other, then press the button to be "learned" on this unit's remote control unit.

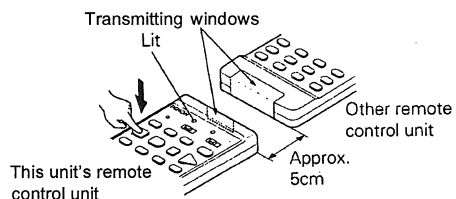


The indicator stops flashing and the START LED lights. The learnable buttons are the buttons which can be operated with the DENON system codes for the CD player, DAT and tape deck, the buttons which can be operated with the preset memory for the VCR, VDP and TV. For the TV only, however, the buttons in the section indicated "A" on the diagram above can also be "learned". Use these to "learn" TV channels.

NOTE:


- Use button (11) / 0 as the 0 number button, button (12) / E as the enter button.

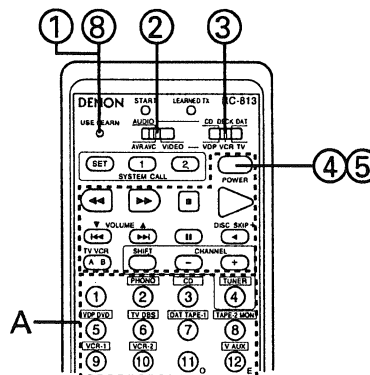

5. Check that the START LED is lit, then press the button to be “learned” on the other remote control unit.

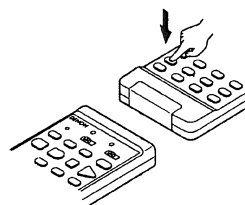


6. Once the START LED turns off and the LEARNED/TX LED lights, release the button on the other remote control unit.

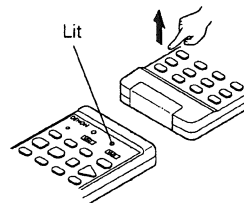

The two LEDs start flashing again.

7. To “learn” other buttons, repeat steps 2 to 6.

8. Once the learning operation is completed, press the USE/LEARN selector button again.
The two LEDs stop flashing and the learning mode is cancelled.

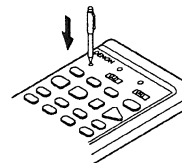


Check that the stored codes work properly.

- NOTES:

- Up to 26 codes can be “learned”, but this number may be lower if the codes are long.
- If a non-learnable button is pressed or two or more buttons are pressed at once, the two LEDs will once again light when the button(s) is released.
- If the codes could not be stored, the LEARNED/TX LED does not light after the START LED turns off. For limited number of models, codes cannot be stored in RC-813.
- If the two LEDs start flashing rapidly after the START LED lights, this means that the memory is already full, and the code you have just attempted to store was not stored.
To “learn” that code, first perform the resetting operation.

7-5 Clearing "learned" remote control signals and the preset memory settings



1. Press the USE/LEARN selector button with the tip of a pen, etc., to set the learn mode.

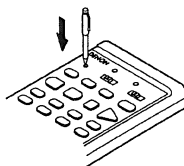

2. To clear "learned" remote control signals, set the slide switch to the position at which the signals were "learned". To clear the preset memory settings, set the slide switch to "VIDEO".



 
3. Set the slide switch to the position at which the signals were "learned" or at which the preset memory settings were set.

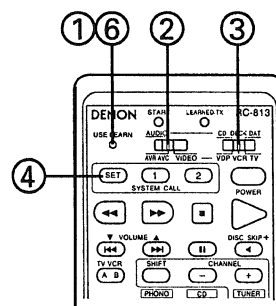

4. Press the SYSTEM CALL SET button, and hold it in for at least four seconds.



5. When both the START and LEARNED /TX LEDs light simultaneously, all the stored codes are cleared.

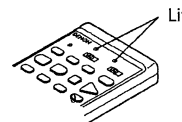


6. Press the USE/LEARN selector button.

8 OPERATIONS

8-1 Preparations for playback


1. Check that all connections are proper.
2. Set to the center position

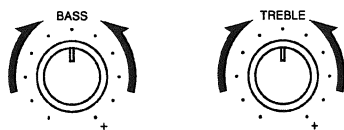

3. Set the remote control unit's slide switch to the AUDIO position (only when operating with the remote control unit)





 4. Turn on the power.
Press the POWER switch (button).



-ON/STANDBY

The power turns on and "ON/STANDBY" indicator is lit. Several seconds are required from the time the power switch is set to the "ON" position until sound is output. This is due to the built-in muting circuit that prevents noise when the power switch is turned on and off. Set the POWER switch to this position to turn the power on and off from the included remote control unit (RC-813).

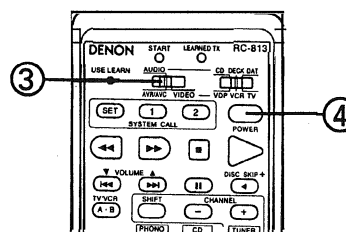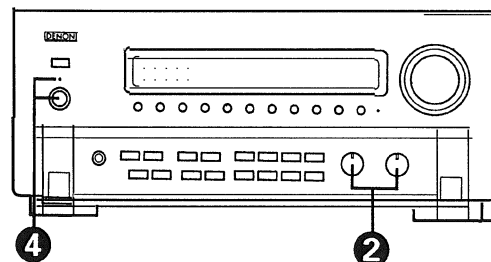

■ OFF

The power turns off and "ON/STANDBY" indicator is off. In this position, the power cannot be turned on and off from the remote control unit.