

■ System code buttons

DENON remote-controllable audio components can be controlled using this unit's remote control unit. Note that some components, however, 'cannot be operated with this remote control unit

1 Set the slide switch to the position for the component to be operated (CD or DECK).



2 Use the buttons shown below to operate the component.
For details, refer to the respective component's manual.

a. For CD players

CD changer,
disc skip

Auto search
reverse (◀◀)

stop (■)

DISC SKIP+

DISC SKIP-

A/B

Play (▶)

Auto search
forward (▶▶)

Pause (||)

b. For tape decks (DECK)

Reverse play (◀)

Rewind (◀◀)

Stop (■)

DISC SKIP+


DISC SKIP-

A/B

Forward play (▶)

Fast-forward (▶▶)

Switching between decks
A and B for double decks (A/B)

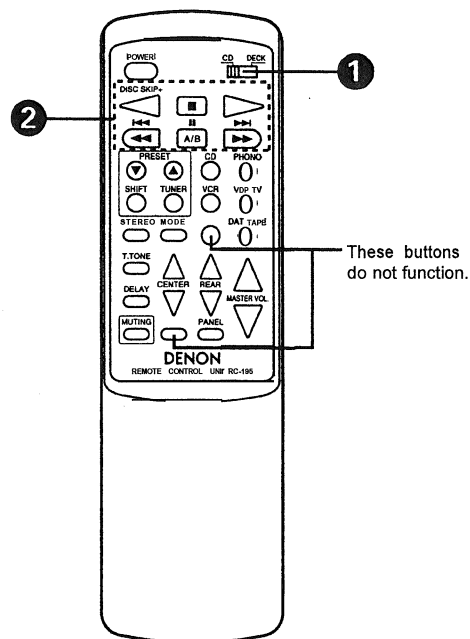


4 OPERATIONS

4-1 Preparations for playback

- 1 Check that all connections are proper.
- 2 Set to the minimum position.





- 3 Set to the center position.

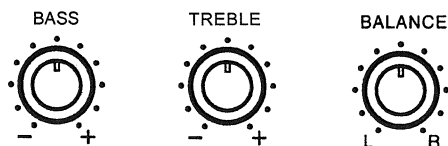


- 4 Turn on the power.
Press the POWER button.



Several seconds are required from the time the power switch is set to the "ON" position until sound is output. This is due to the built-in muting circuit that prevents noise when the power switch is turned on and standby.

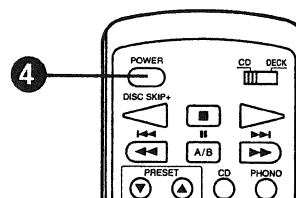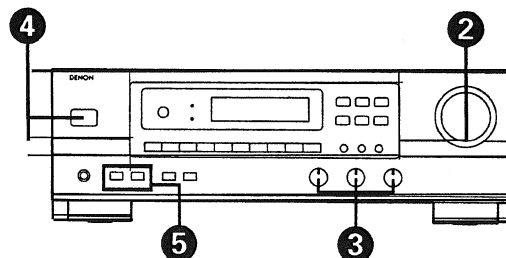


 - 5 Select the front speakers.
Press the speaker A or B switch to turn the speaker on




4-2 Playing the program source (Stereo playback)


- 1 Select the source to be played

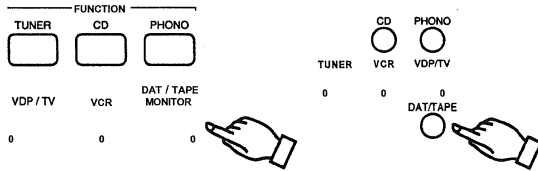


- 2 Select the STEREO mode.

 

- 3 Adjust the MASTER VOLUME control.

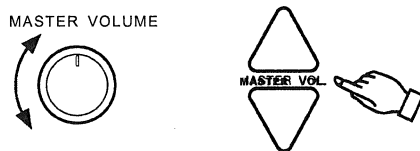


- 4 Adjust the front left/right BALANCE.
Turn the control counterclockwise to reduce the volume of the right channel, clockwise to reduce the volume of the left channel.

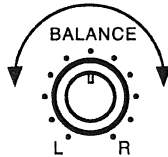

4-3 Simulcast playback

Use this switch to monitor a video source other than the audio source.

 - 1 Press and hold the VIDEO SELECT button until the desired source appears on the display.




- * Cancelling simulcast playback
- Press the VIDEO SELECT button once more
- Select the VIDEO function.



4-4 Using the muting function

Use this to turn off the audio output temporarily.


- 1 Press the MUTING button.
- * Cancelling MUTING mode.
 - Press the MUTING button again.

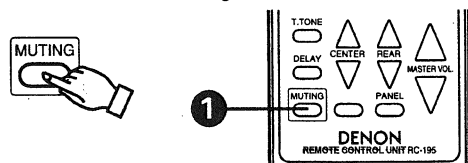


This function can only be set from the remote control unit.
The STANDBY LED flashes when the muting function is set.

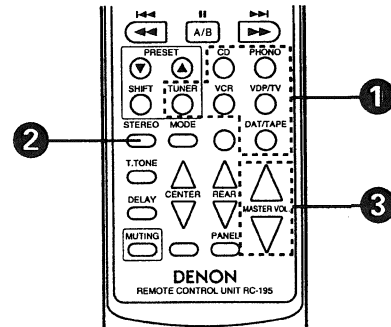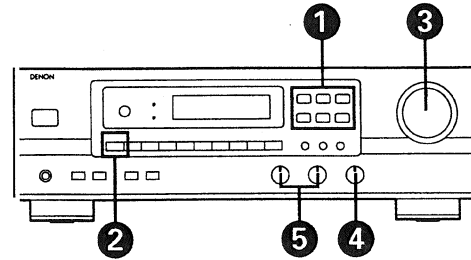


- 5 Adjust the BASS and TREBLE

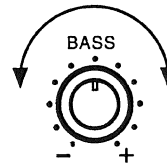

Turn the control clockwise to increase the bass, counterclockwise to decrease it.

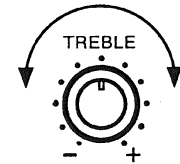

Turn the control clockwise to increase the treble, counterclockwise to decrease it.

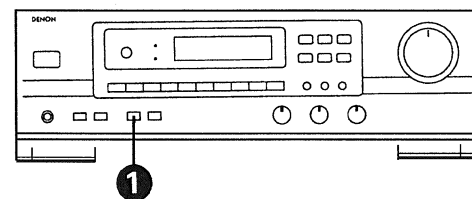

4-5 Listen with headphones

Connect the headphones to the PHONES jacks.

When listening with headphones privately, set A, B SPEAKER switches and the superwoofer's power switch to the OFF position and set the stereo surround mode.

NOTE:

To prevent hearing loss, do not raise the volume level excessively when using headphones.

