 


5 REMOTE CONTROL UNIT

Following the procedure outlined below, insert the batteries before using the remote control unit.

Range of operation of the remote control unit

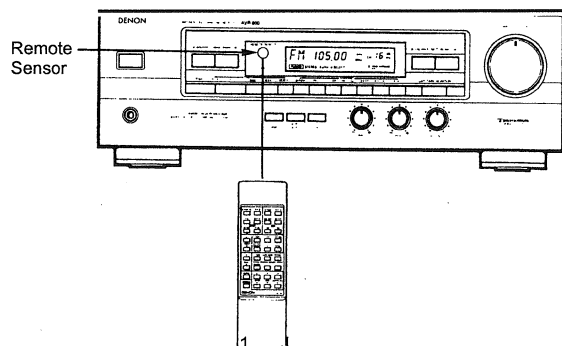

 
Point the remote control unit at the remote control sensor as shown on the diagram at the left.

NOTES:


- The remote control unit can be used from a straight distance of approximately 7 meters, but this distance will shorten or operation will become difficult if there are obstacles between the remote control unit and the remote control sensor, if the remote control sensor is exposed to direct sunlight or other strong light, or if operated from an angle.
- Neon signs or other devices emitting pulse-type noise nearby may result in malfunction, so keep the set as far away from such devices as possible.

Inserting the batteries

1. Open the bottom cover of the remote control unit and remove the battery cover.

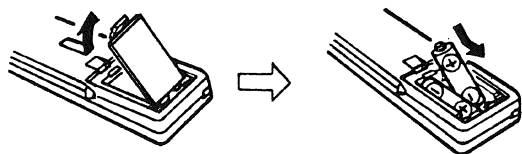

 2. Insert the two R6P/AA batteries, matching the ⊕ and ⊖ marks on the batteries with those in the case. Close the bottom cover until it clicks shut.

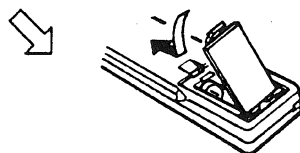

NOTES

- Use only R6P, AA, UM-3 batteries for replacement.
- Be sure the polarities are correct. (See the illustration inside the battery compartment.)
- Remove the batteries if the remote control transmitter will not be used for an extended period of time.
- If batteries leak, dispose of them immediately. Avoid touching the leaked material or letting it come in contact with clothing, etc. Clean the battery compartment thoroughly before installing new batteries.
- When replacing the batteries, always replace both batteries with new ones.

 
System codes

The system codes for Denon tape decks and CD players are set in this remote control unit.

Tape deck system buttons

With these buttons, a Denon remote controllable tape deck can be controlled directly. For details, refer to the tape deck's operating instructions. Note that operation may not be possible for some models.

- ▶ : Forward play
- ◀ : Reverse play
- : stop
- ◀◀ : Rewind
- ▶▶ : Fast-forward
- A/B : Switching between decks A and B for double decks

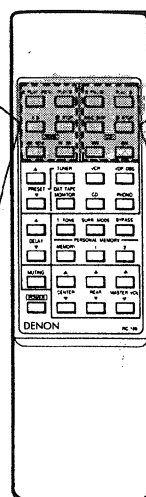

CD system buttons

With these buttons, a Denon remote controllable CD player can be controlled directly. For details, refer to the CD player's operating instructions. Note that operation may not be possible for some models.

- ▶ : Play
- II : Pause
- : stop
- ◀◀ and ▶▶ : Auto search (reverse and forward)
- DISC SKIP : CD changer, disc skip