


10

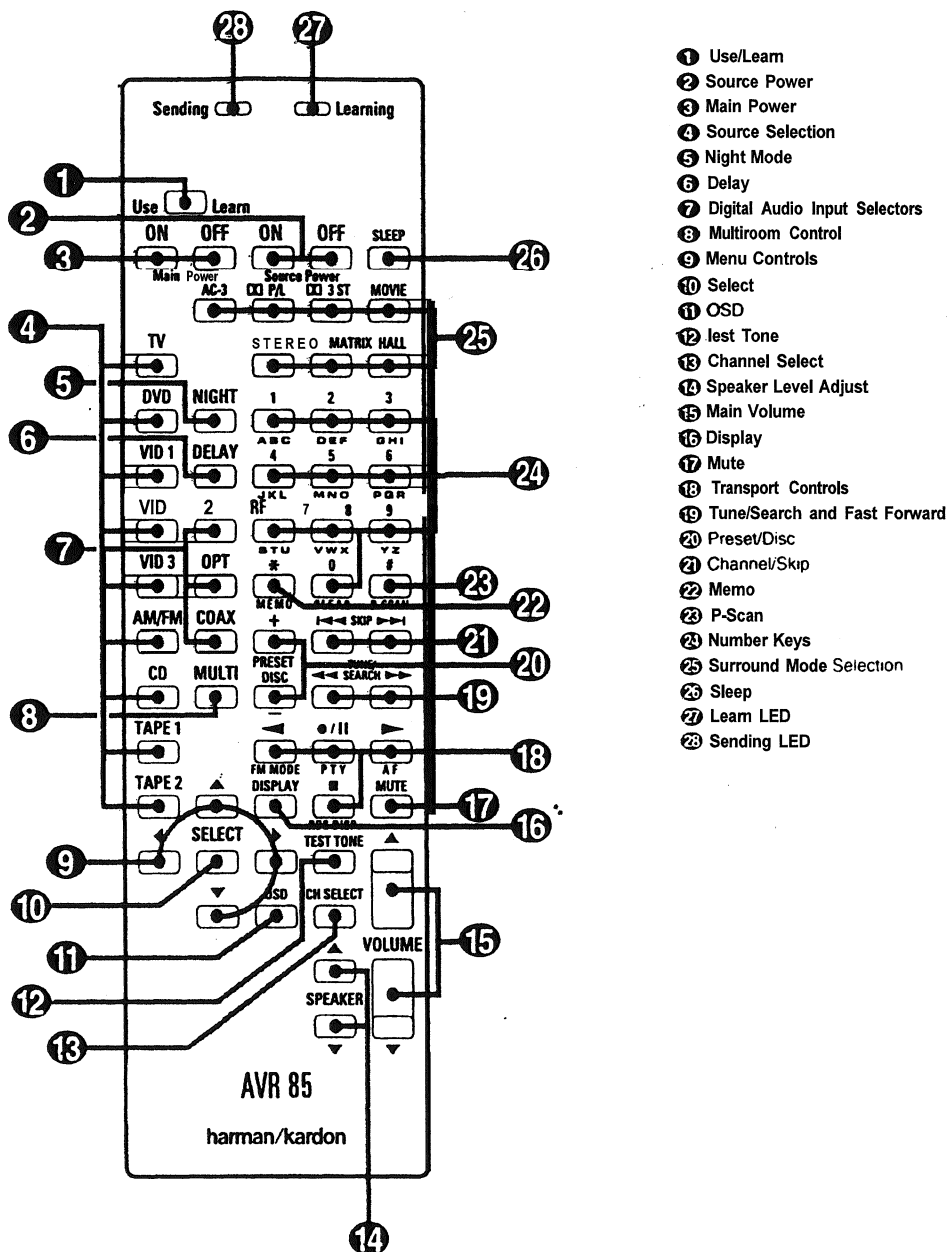

Remote Control Functions

11

① Use/Learn: This switch selects the operation mode of the remote control. Slide it to the left for normal operation. Slide it to the right when the remote is being programmed.

② Source Power: Press these buttons to control power for the last source device selected.

③ Main Power: Press these buttons to turn the unit on or off.

④ Source Selection: Pressing one of these buttons selects the input source that will be listened to through the receiver. When a source is selected the remote's transport and numeric number buttons will also transmit the commands needed to control that machine.

⑤ Night Mode: Press this button to activate the "Night" mode, preventing loud playback when the digital modes are in use without altering the dynamic range of the output signal

⑥ Delay: Press this button to change the delay for the surround channels when the Surround Mode Menu is on the screen

⑦ Digital Audio Input Selectors: Press one of these buttons to select a digital input source. The digital audio source may be the same as, or different analog audio of the selected video source

⑧ Multiroom Control: Press this button to turn the remote room feed on or off. The Multi indicator  will light or flash when the remote feed is on. Note that the remote zone feed will remain on after the main room power is turned off until it is switched off by pressing this button again

⑨ Menu Controls: These buttons control the action of the cursor or the selection of menu items when the receiver is being configured using the setup menus.

⑩ Select: This button enters settings to the receiver's memory during system configuration.

⑪ OSD: Press this button to activate the on-screen menu system.

⑫ Test Tone: Press this button to begin calibration of the output level for each channel. A test signal will immediately be heard from the left front speaker and the Test indicator  will flash.

⑬ Channel Select: Press this button to view a status report of the output level for each channel (see figure #9 on page 25). When the Test Tone is audible and the system output levels are being set, pressing this button will advance the channel being adjusted in a clockwise direction to the next channel.

⑭ Speaker Level Adjust: When setting the system output levels, press these buttons to increase or decrease the output level.

⑮ Main Volume: These buttons control the unit's volume. Note that all channels are controlled simultaneously.

⑯ Display: Press this button to turn off all displays and indicators in the Information Display except for a small Disp indication in the lower right corner of the display . Press the button again to turn the display back on

⑰ Mute: Press this button to temporarily cut the audio output of the receiver. Press it again to return to the previous volume level.

⑱ Transport Controls: These buttons control the tape or disc motion of the last playback source selected with the Source Selection buttons . Use them as you would the Play, Stop, Pause, Record, Reverse Play and Forward Play buttons on any VCR, CD, cassette, DVD or LD remote control. The Reverse Play button  also operates the FM Mode function of the AVR85's tuner

Note: The  /  and  buttons are also used to control the PTY, AF and RDS Display functions of the tuner (see page 25)

⑲ Tune/Search & Fast Forward: These buttons have multiple functions, which vary according to the Input device selected

a When the TUNER has been selected, these buttons are used to tune stations

b When CD, Tape, DVD, LD or VCR is the input source, these buttons act as the Fast Scan Forward  or Fast Scan Reverse  controls

⑳ Preset/Disc: These buttons have multiple functions, which vary according to the input device selected

a When the TUNER has been selected these buttons will scroll up  or down  through the stations that have been programmed in the preset memory

Remote Control Functions

12

b. When CD is selected and the unit is a CD changer, these buttons will change to the next disc + or previous disc —.

c. When Tape 1 or Tape 2 is the input source, and the tape machine is a compatible Harman Kardon dual cassette deck, these buttons will switch between the "A" and "B" sides.

21 Channel/Skip: These buttons have multiple functions, which vary according to the input device selected and the codes programmed from another remote.

a. When IV, Vid 1 or Vid 2 are selected, they may function as the channel up ► or channel down ◀ tuning buttons when programmed with the codes from another unit's remote.

b. When CD is selected these buttons act as forward and reverse "Skip" buttons to move to the next track or chapter on the disc.

c. When a compatible Harman Kardon cassette player has been selected as Tape 1 or Tape 2, these buttons move the tape forward ► or backwards ◀ to the next selection using the Music Scan feature.

22 Memo: The memo button is used to enter stations to the tuner's preset memory in either the manual or automatic modes. It is also used in the process of clearing the memory. This button also performs the functions of the "*" symbol on compatible equipment.

 
23 P-Scan: Press this button to automatically scan through the stations preset into the tuner memory. Press the button again to end the scan when the tuner stops at the desired station. This button also performs the functions of the "#" symbol on compatible equipment.

24 Number Keys: These buttons serve as a ten button numeric keypad to enter tuner preset positions. They are also to be used to select channel numbers when TV has been selected on the remote, or to select track numbers on a CD, DVD or LD player, depending on how the remote has been programmed. The letters below the buttons are used to enter information for tuner station names.

NOTE: The 0 button has a dual function. It also serves as the CLEAR button for use in programming the tuner or clearing the system memory.

25 Surround Mode Selection: Press one of these buttons to select a surround mode for the current listening session.

26 Sleep: Pressing this button when the Sleep timer has previously been activated allows you to view the time remaining before the timer function turns the unit off. When the remote is in the AM/FM mode **24**, the Sleep function may also be set by pressing this button so that the Sleep indicator **23** blinks. Press the Memo and Sleep buttons within five seconds to set the desired sleep time in the following order:



When the desired time is shown in the display press the Memo button **22** @ to enter the time. The unit will go into the Standby mode when the time entered has elapsed.

27 Learn LED: This indicator will illuminate when a button on the remote is being programmed with signals from another remote during the "learning" mode. The light will go out when the signal is received and memorized.

28 Sending LED: This indicator should flash any time a button is pressed to confirm that a command is being sent to the receiver or another unit. If the light is dim or does not illuminate when a button is pressed the batteries in the remote should be replaced.