

 
15 REMOTE CONTROL UNIT

The accessory RC-272 remote control unit can be used to control the CD player from a convenient distance.


Load batteries in the remote control unit before using it.

Inserting the dry cell batteries


1. Remove the battery cover on the back of remote control unit.

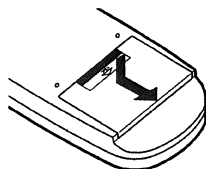

 2. Insert two R6P (standard size AA) dry cell batteries with correct polarity as indicated inside the battery compartment.

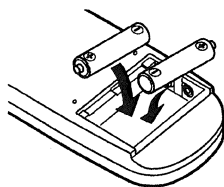

 3. Replace the battery cover

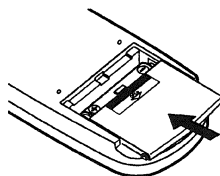


Notes on the Batteries

- The remote control unit uses standard size AA dry cell batteries.
- The batteries will need to be replaced approximately once a year. Replacement may be necessary earlier depending on how much the remote control unit is used.
- If, in less than a year from the time new batteries were inserted, the remote control fail to operate the CD player from a near-by position, it is time to replace the batteries.
- Insert the batteries properly, following the polarity diagram inside the battery compartment, in other words make sure (+) and (-) terminals are properly aligned.
- Batteries are prone to damage and leakage.
Therefore:
 - Do not combine new batteries with used ones.
 - Do not combine different types of batteries.
 - Do not jumper opposite poles of the batteries, expose them to heat, break them open nor expose of them in open fire.
- If the remote control unit is not to be used for a long period of time, remove the batteries from the unit.
- If the batteries have leaked, remove any traces of battery fluid from the battery compartment, wiping thoroughly with a dry cloth. Then insert new batteries.

Directions for Use

 - Operate the remote control unit while pointing it towards the remote control sensor on the CD player (see below).
- The remote control unit can be used at a distance up to 8 meters in a straight line from the CD player. This distance decreases if there are obstructions blocking the signal path or when the remote control unit is operated at an angle from the remote control sensor.
- The buttons on the remote control unit have identical functions with those on the CD player.
However, the following functions cannot be remote controlled: Power ON/OFF.

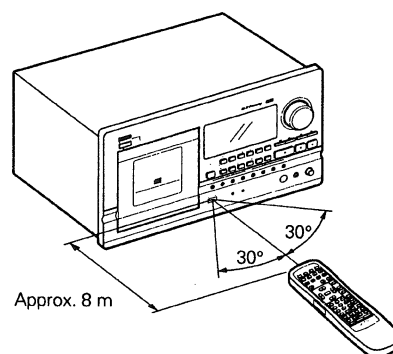

Notes on Operation

- Do not press identical buttons on the CD player and remote control unit simultaneously as this may cause malfunction.
- The remote control unit may be difficult to operate if the remote control sensor is exposed to strong light, such as direct sunlight or light from fluorescent lamp, or if these are obstacles between the remote control unit and the sensor.

Remote Control Unit RC-272

OPERATE ZONE 1/ZONE 2 buttons

Use these to select the play zone in the multi-zone mode.

DISC SKIP +/- buttons

Use these to skip the currently playing disc.

◀◀/▶▶ buttons

Use ▶▶ to return to previous tracks, ▶▶ to move ahead to subsequent tracks.

■ button

Stops playback.

⏸ button

Pauses playback.

▶ button

Starts playback.

◀◀ Manual search reverse

▶▶ Manual search forward

↑ / ↓ buttons

Use these to select items, etc., when checking programs, creating delete files and writing disc files.

← / → buttons

Use these to move the cursor in the writing mode, etc.

ENTER button

Press this button to set the character input mode, check the input characters, start playback, etc.

Number buttons

Use these to select CDs and tracks, to input characters, etc.

CONTINUE button

Press this button to select the continuous play mode.

RANDOM button

Press this button to select the random play mode.

ALL DISCS button

Press this button to select the all disc play mode.

1 DISC button

Press this button to select the one disc play mode.

REPEAT ALL button

Press this button to select the all-repeat play mode.

REPEAT 1 button

Press this button to select the one track repeat play mode.

REPEAT OFF button

Press this button to cancel the repeat mode.

POWER ON button

Press this when the main unit is in the standby mode to turn the power on.

STANDBY button

Press this when the main unit is in the power on mode to turn the power to the standby mode.

ZONE MODE SINGLE/MULTI button

Use this to select the zone mode.

WRITE button

Use this when registering programs, disc files and best hits.

SORT button

Use this to select the way in which the CDs are sorted.

DISC button

Use this to select CDs directly with the number buttons.

TRACK/CAPS button

Use this to select tracks directly with the number buttons and to select the characters type to be input.

GROUP button

Press this button to select the group.

PROGRAM button

Press this button to register and play programs.

BEST HIT button

Press this button to register and play best hits.

MODE OFF button

Press this button to cancel the group play, program play and best hit play modes.

CROSS FADE button

Press this button in the single zone play mode to turn the cross fade function on and off.

1 TIME/TEXT button

Switches the character display.

TIME: The CD number, track number and playing time are displayed.

TEXT: The text title, track title and artist's name are displayed.

CHECK button

Press this button to check the contents of the programs and delete file.

CLEAR button

Use this button to clear programs, disc file titles and the best hit list, and when creating delete files.

