 


7 REMOTE CONTROL UNIT

 
■ The included remote control unit (RC-278) can be used to operate the DN-C550R from a distance.

Inserting the batteries


① Remove the remote control unit's back lid.

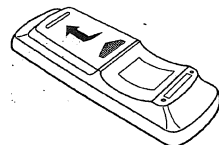

② Insert the two R6P (AA) batteries in the battery compartment, in the direction indicated by the marks inside the compartment.

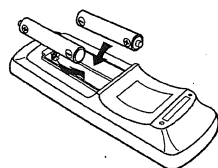


③ Put the back lid back on.

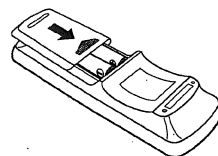 

Cautions on batteries

- Use R6P (AA) batteries in the remote control unit.
- The batteries should be replaced with new ones after approximately one year, though this depends on the frequency with which the remote control unit is used.
- Even if the batteries are less than a year old, replace them with new ones if the remote control unit no longer operates even from a short distance from the main unit.
- The included battery is only for verifying operation. Replace it with a new battery as soon as possible.
- When inserting new batteries, wait about two minutes after removing the old batteries before inserting the new ones.
- Be sure to set the batteries in the proper "⊕" and "⊖" directions, as indicated by the marks in the remote control unit's battery compartment.
- Remove the batteries when not using the remote control unit for long periods of time.
- To avoid explosions and fluid leakage:
 - Do not use one new battery with one old one.
 - Do not use two different types of batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, wipe all the fluid off the battery compartment, then insert new batteries.

 Using the remote control unit

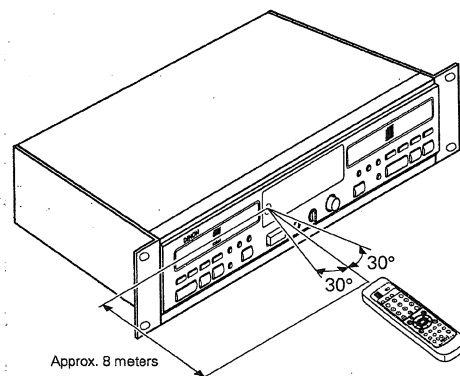

NOTES:

- The remote control unit may not operate if the remote sensor is exposed to direct sunlight or strong artificial light, or if there is an obstacle between it and the remote sensor.
- Do not press buttons on the main unit and on the remote control unit at the same time. Doing so will result in malfunction.

Names and Functions of Remote Control Unit Buttons

- Buttons not explained here function in the same way as the corresponding buttons on the main unit.
- Buttons marked "*" function regardless of the function selector switch.

