 


PLAYBACK USING THE REMOTE CONTROL

 
The accessory RC-174 remote control unit is used to control the RECEIVER from a distance.

(1) Inserting the dry cell batteries


1 Remove the rear cover on the remote control unit.

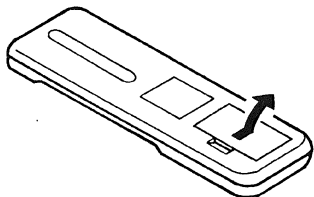


2 Insert two size "AA" (R6) dry cell batteries as shown in the diagram on the battery supply unit.

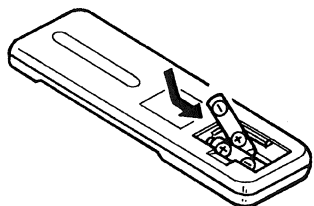

3 Replace the rear cover.

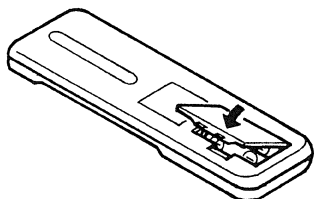 

 (2) Directions for use

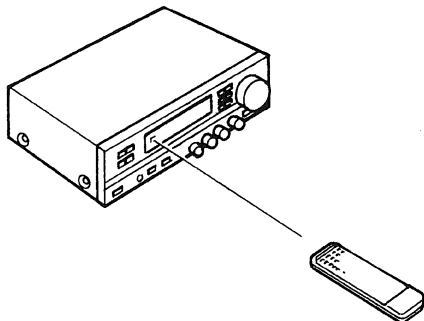

Notes on Use of the Batteries

- The remote control unit uses size "AA" (R6) dry cell batteries.
- The batteries will need to be replaced approximately once a year. This will depend upon how often the remote control is used.
- If, in less than a year from the time new batteries were inserted, the remote control fails to operate the receiver from a near-by position, it is time to replace the batteries.
- Insert the batteries properly, following the diagram on the remote control battery supply unit, and making sure to align the plus and minus sides of each battery.
- Batteries are prone to damage and leakage. Therefore:
 - Do not combine new batteries with used ones.
 - Do not combine different types of batteries.
 - Do not jumper the opposite poles of the batteries, expose them to heat or break them open, or put them into open fire.
- When the remote control is not to be used for a long period of time, remove the batteries from the unit.
- If the batteries have leaked, remove any battery fluid from the inside of the battery supply unit by wiping it out thoroughly, and insert new batteries.

- Operate the remote control unit while pointing it towards the remote control sensor on the receiver as shown in the diagram left.
- The remote control unit can be used at distances up to about 8 meters in a straight line from the receiver. This distance will decrease if there are obstructions blocking the infra-red light transmission or if the remote control unit is not directed straight at the receiver.

Note on Operation

- Do not press the operating buttons on the receiver and the remote control unit at the same time. This will cause misoperation.
- Operation of the remote control unit will become less effective or erratic if the infrared remote control sensor on the receiver is exposed to strong light or if there are obstructions between the remote control unit and the sensor.
- In case you operate your VCR, TV or other components by remote control, do not operate buttons on two different remote control units at the same time. This will cause mis-operation.

Besides being able to operate the DRA-565RD/365R receiver with this remote control unit, you can also operate a DENON cassette deck and CD player from this handy full-system remote control unit.

Remote Control Section

Full-system Remote Control Unit

The full-system remote control unit operates all major functions of the receiver such as function switching, volume control, and preset station selection. But that's not all! The same control pad can also control the major functions of a DENON CD player and cassette deck to create a remarkably ergonomic and versatile DENON system with all the quality sound reproduction that the devoted audiophile expects,

Remote Control Unit RC-174 supplied with DRA-565RD /365R

DECK

▶ PLAY	PLAY button
◀ PLAY (REV)	PLAY (REV) button
■ STOP	STOP button
◀◀ REW	REWIND button
FF ▶▶	FF button
● REC	Refer to the operating instructions of your DENON tape deck.
⏸ PAUSE	
A/B W-DECK	A/B DECK SELECT button

PANEL button

DRA-565RD

The display switches between the frequency, manual characters, station name, programme type and time each time this button is pressed. Station names, programme types and the time are only displayed when receiving RDS stations.

DRA-365R

 
The display switches between the frequency and the manual characters each time this button is pressed.

The following may appear on the display for some stations, but this is not a malfunction: "NO PTY": This is an RDS broadcast, but the program type (PTY) is not being broadcast.

"NO PS": An RDS broadcast is being received, but the PS (Programme Service name or station name) is not being received due to weak signals, etc.

"NO TIME DATA": This is displayed when the station currently tuned in is not broadcasting time data, and may be displayed for one minute after the power is turned on even when the station currently tuned in is broadcasting time data.

(The PANEL button only operates when the function is set to the TUNER mode.)

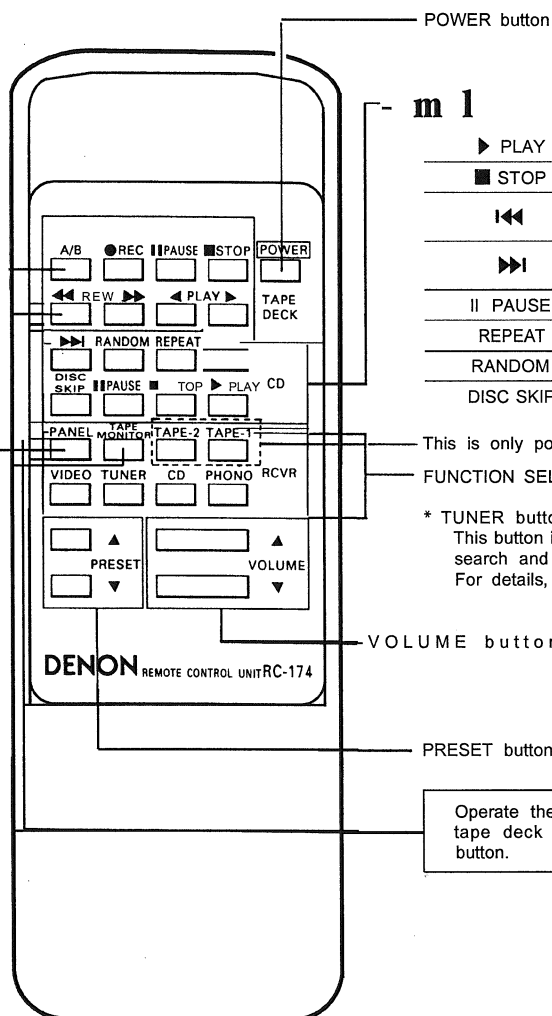

m 1

▶ PLAY	PLAY button
■ STOP	STOP button
◀◀	Reverse Track Search button
▶▶	Forward Track Search button
⏸ PAUSE	PAUSE button
REPEAT	REPEAT button
RANDOM	RAMDOM button
DISC SKIP	DISC SKIP button

This is only possible on the DRA-565RD.

FUNCTION SELECTOR buttons

* TUNER button (DRA-565RD only)
This button is used for RDS search and PTY search and TP search operations
For details, refer to Page 11.

VOLUME buttons

PRESET buttons

Operate the monitor of the DRA-365R tape deck with the TAPE MONITOR button.

- The RC-174 Remote Control Unit can control CD players and cassette decks made by DENON.
- Note that operation may not be possible for some models.
- Buttons are conveniently separated into groups, each group controlling one specific component. The groups are RECEIVER, CD and DECK.

For details on operating other components, refer to the instruction manuals for the CD player and/or cassette deck.

CAUTION :

- If the power is turned off with the remote control unit, the receiver is switched to the power stand-by state. If you are to be absent for a long period of time, be sure to turn the power off using the POWER switch on the receiver.
- A part of 1st digit of fluorescent display light while the receiver is in the power stand-by state.
- You may experience erratic operation of the remote control unit if it is operated in fluorescent light and direct sunlight, in particular if this light strikes the remote control sensor on the receiver. However, this is not a malfunction, and if this should happen, protect the sensor against such light.