


Getting Started


Rear panel

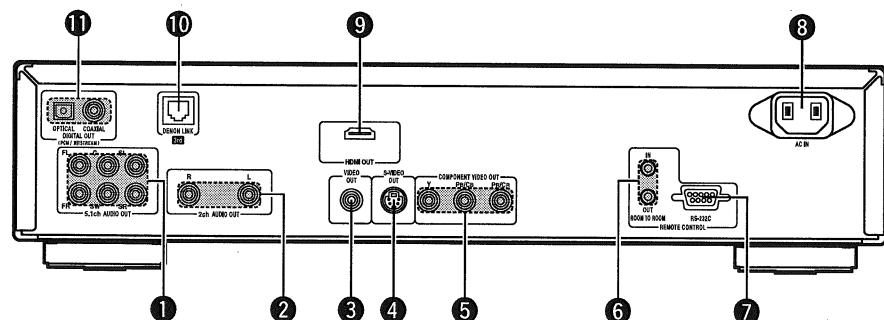

- | | |
|---|---|
| 1 5.1ch AUDIO OUT terminals(10) | 7 RS-232C input/output terminal
Control terminal for system extension. |
| 2 2ch AUDIO OUT terminals(9, 10) | 8 AC inlet(12) |
| 3 VIDEO OUT terminal(9) | 9 HDMI OUT terminal(11) |
| 4 S-VIDEO OUT terminal(9) | 10 DENON LINK output terminal(11) |
| 5 COMPONENT VIDEO OUT terminals(9) | 11 DIGITAL OUT COAXIAL/
OPTICAL terminals(9, 12) |
| 6 ROOM TO ROOM IN/OUT jacks
Control terminal for system extension. | |

Getting Started

Remote control unit

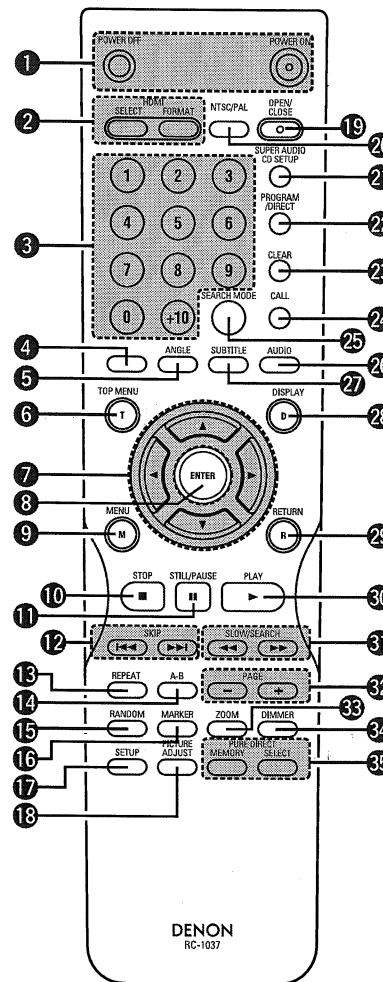

- | | |
|--|--|
| 1 POWER ON/OFF buttons(32) | |
| 2 HDMI SELECT/FORMAT buttons(29) | |
| 3 Number buttons (0 ~ 9, +10)(16, 34) | |
| 4 This button does not function. | |
| 5 ANGLE button(34) | |
| 6 TOP MENU button(34) | |
| 7 Cursor buttons (Δ ▽ ◀ ▶)(15) | |
| 8 ENTER button(15) | |
| 9 MENU button(34) | |
| 10 STOP button(32) | |
| 11 STILL/PAUSE button(33) | |
| 12 SKIP buttons(39, 40) | |
| 13 REPEAT button(37) | |
| 14 A-B button(42) | |
| 15 RANDOM button(37) | |
| 16 MARKER button(44) | |
| 17 SETUP button(15) | |
| 18 PICTURE ADJUST button(30) | |
| 19 OPEN/CLOSE button(32) | |
| 20 NTSC/PAL button(45) | |
| 21 SUPER AUDIO CD SETUP button(36) | |
| 22 PROGRAM/DIRECT button(42) | |
| 23 CLEAR button(35) | |
| 24 CALL button(42) | |
| 25 SEARCH MODE button(35) | |
| 26 AUDIO button(34) | |
| 27 SUBTITLE button(34) | |
| 28 DISPLAY button(37, 43) | |
| 29 RETURN button(19) | |
| 30 PLAY button(32) | |
| 31 SLOW/SEARCH buttons(40) | |
| 32 PAGE +/- buttons(35) | |
| 33 ZOOM button(39) | |
| 34 DIMMER button(45) | |
| 35 PURE DIRECT MEMORY/SELECT buttons(28) | |