 


6 REMOTE CONTROL UNIT

 
■ The DVD-5910 can be controlled from a distance using the included remote control unit (RC-993).

(1) Inserting Batteries


① Remove the remote control unit's rear cover.

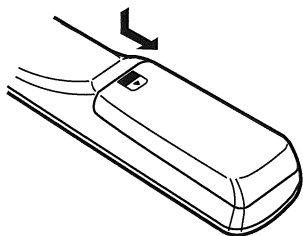

② Place three R6P/AA batteries in the battery compartment in the direction indicated by the marks.

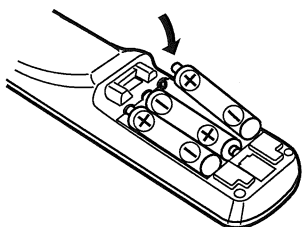


③ Close the rear cover.

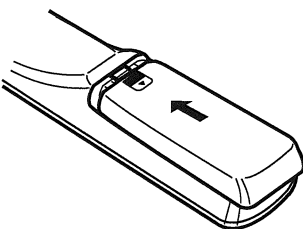 

Cautions On Batteries

- Use R6P/AA batteries in this remote control unit.
- Replace the batteries with new ones approximately once a year, though this depends on the frequency with which the remote control unit is used.
- If the remote control unit does not operate from close to the main unit, replace the batteries with new ones, even if less than a year has passed.
- The included battery is only for verifying operation. Replace it with a new battery as soon as possible.
- When inserting the batteries, be careful to do so in the proper direction, following the $\oplus$ and $\ominus$ marks in the remote control unit's battery compartment.
- To prevent damage or battery fluid leakage:
 - Do not use a new battery with an old one.
 - Do not use two different types of batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- Remove the batteries when not planning to use the remote control unit for a long period of time.
- If the batteries should leak, carefully wipe off the fluid from the inside of the battery compartment, then insert new batteries.

 (2) Using the Remote Control Unit

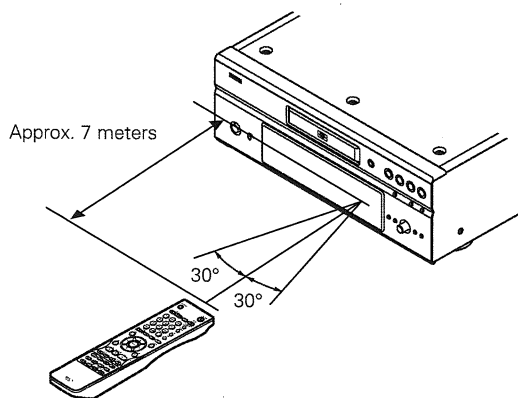


- When operating the remote control unit, point it at the remote control sensor as shown on the diagram.
- The remote control unit can be used from a direct distance of approximately 7 meters. This distance will be shorter, however, if there are obstacles in the way or if the remote control unit is not pointed directly at the remote control sensor.
- The remote control unit can be operated at a horizontal angle of up to 30° with respect to the remote control sensor.

NOTES:

- It may be difficult to operate the remote control unit if the remote control sensor is exposed to direct sunlight or strong artificial light.
- Do not press buttons on the main unit and on the remote control unit at the same time. Doing so will result in malfunction.

(3) Names and Functions of Remote Control Unit Buttons

 ■ Button not explained here function in the same way as the corresponding buttons on the main unit.

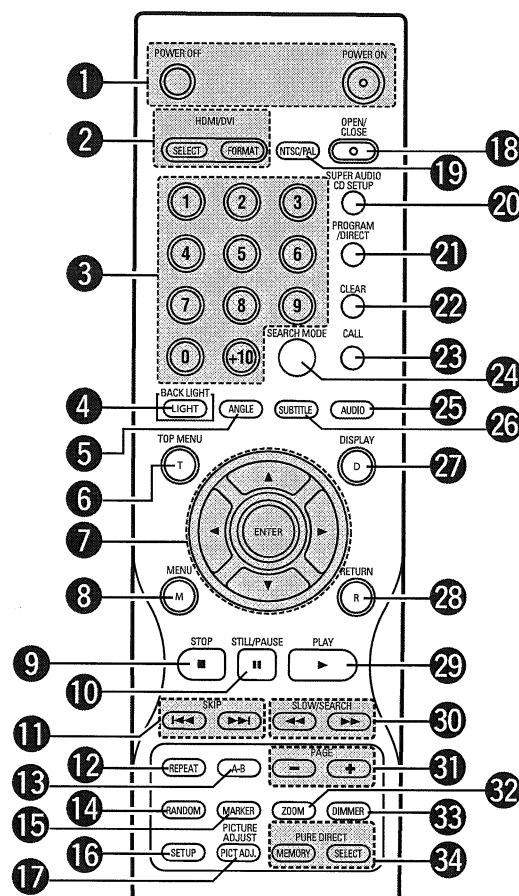

1 POWER ON/POWER OFF buttons

- Press this to switch the power between on and standby.

2 HDMI/DVI SELECT/FORMAT buttons

- Use these to select to use HDMI connector or DVI connector, and the format of video signals (480P/576P, 720P, 1080i, AUTO).

3 Number buttons

- Use these to input numbers.
- Use the +10 button to input numbers of 10 or over.
- Example: To input 25

⓪ → ⓪ → ⓪

4 LIGHT button

- Press this to light the all buttons.
- Press again this to put out light.

5 ANGLE button

- Press this to switch the angle.

6 TOP MENU button

- The top menu stored on the disc is displayed.

7 Cursor buttons/ENTER button

- Use the ▲ and ▼ cursor buttons to select in the vertical direction.
- Use the ◀ and ▶ cursor buttons to select in the horizontal direction.
- Press the ENTER button to select the item selected with the cursor buttons.

8 MENU button

- The DVD menu stored on the disc is displayed.

9 STOP button (■)

10 STILL/PAUSE button (||)

11 SKIP buttons

12 REPEAT button

- Press this to play tracks repeatedly.

13 A-B repeat button (A-B)

- Use this to repeat sections between two specific points.

14 RANDOM button

- Press this to play the tracks on the video or music CD in random order.

15 MARKER button

- Press this to mark places you want to see again.

16 SETUP button

- Press this to display the default setting screen.

17 PICTURE ADJUST button

- Press this to adjust the picture quality to suit your tastes.

18 OPEN/CLOSE button

19 NTSC/PAL button

- Use this to switch the set's video output format (NTSC/PAL).

20 SUPER AUDIO CD SETUP button

21 PROGRAM/DIRECT button

- Press this to switch between the normal play, programmed play.

22 CLEAR button

- Press this to clear numbers that you have input.

23 CALL button

- Press this to check the program contents.

24 SEARCH MODE button

- Press this to change the search mode to search for groups or titles, tracks or chapters when selecting sections of discs directly using the number buttons.

25 AUDIO button

- For DVDs, press this to switch the audio language. For video CDs, press this to switch the channel between "STEREO", "MONO LEFT" and "MONO RIGHT".

26 SUBTITLE button

- Press this to switch the DVD's subtitle language.

27 DISPLAY button

- Press this to display the ON-SCREEN.

28 RETURN button

- Press this to return to the previous menu screen.

29 PLAY button (▶)

30 SLOW/SEARCH buttons

31 PAGE -/PAGE + buttons

- Use these to selected the desired still picture on DVD audio discs containing browseable still pictures.

32 ZOOM button

- Press this to enlarge the image.

33 DIMMER button

- Use this to adjust the brightness of the main unit's display.
- Can be switched in 4 steps, from all off to always on.

34 PURE DIRECT MEMORY/SELECT buttons

- Use these to make and select that various setting to achieve higher quality sound.