

Getting Started

Cautions on handling

 
- Do not get fingerprints, oil or dirt on discs.
- Take special care not to scratch discs when removing them from their cases.
- Do not bend or heat discs.
- Do not enlarge the hole at the center.
- Do not write on the labeled (printed) surface with ball-point pens, pencils, etc., or stick new labels on discs.
- Water droplets may form on discs if they are moved suddenly from a cold place (outdoors for example) to a warm place, but do not try to dry them off using a hairdryer, etc.

Cautions on storing discs


- Be sure to remove discs after using them.
- Be sure to store discs in their cases to protect them from dust, scratches, warping, etc.
- Do not store discs in the following places:
 1. Places exposed to direct sunlight for long periods of time
 2. Dusty or humid places
 3. Places exposed to heat from heating appliances, etc.

Cleaning discs

- If there are fingerprints or dirt on discs, wipe them off before using the disc. If not the sound quality could be reduced and the sound may be broken.
- Use a commercially available disc cleaning set or a soft cloth to clean discs.

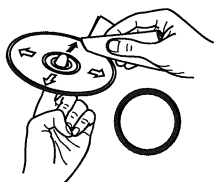

 Gently wipe the disc from the inside towards the outside.

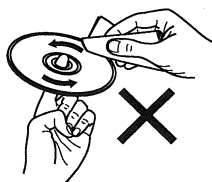

Do not wipe with a circular motion.

 
NOTE:

- Do not use record spray, antistatic agents, or benzene, thinner or other solvents.


About the remote control unit

Inserting the batteries

① Remove the cover.

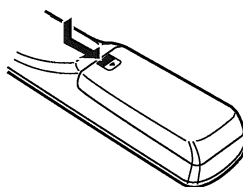

 ② Set two R6P/AA batteries in the battery compartment in the indicated direction.

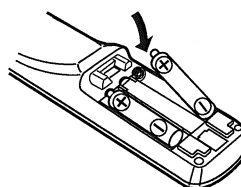

③ Set the cover back in place.

 
Notes on batteries:

- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated nearby the unit. (The attached batteries are only for verifying operation.)
- When inserting the batteries, be sure to do so in the proper direction, following the "⊕" and "⊖" marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- Remove the batteries from the remote if it will not be in use for long periods.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.

Getting Started

Operating range of the remote control unit

- Point the remote control unit at the remote sensor when operating it.
- The remote control unit can be used from a distance of up to about 23 feet / 7 meters, at a horizontal angle of up to 30° with respect to the sensor.

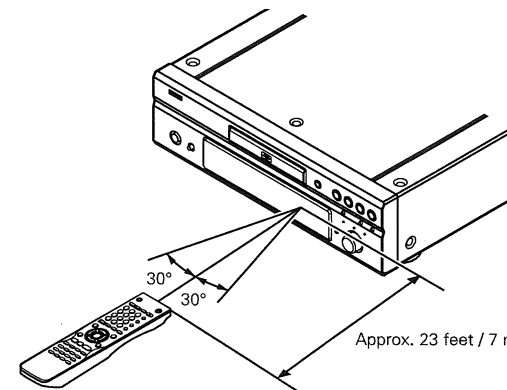


NOTE:

- It may be difficult to operate the remote control unit if the remote sensor is exposed to direct sunlight or strong artificial light.


Getting Started

 Rear panel

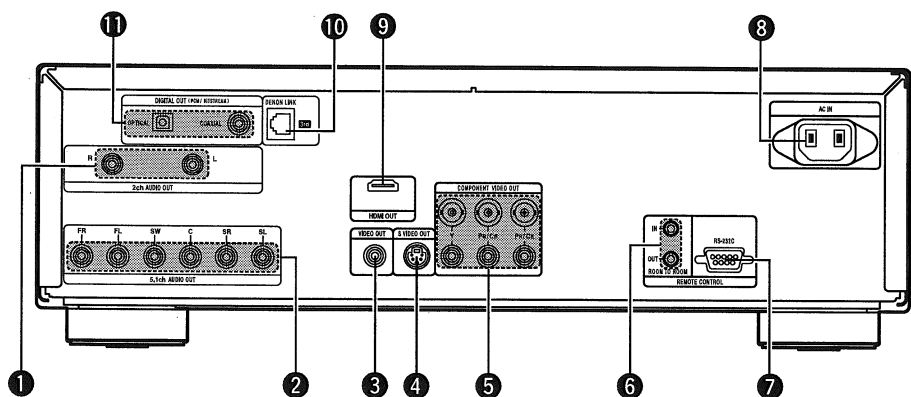

- | | |
|---|--|
| 1 2ch AUDIO OUT terminals(9, 10) | 8 AC inlet(12) |
| 2 5.1ch AUDIO OUT terminals(10) | 9 HDMI OUT terminal(11) |
| 3 VIDEO OUT terminal.....(9) | 10 DENON LINK output terminal(11) |
| 4 S-VIDEO OUT terminal.....(9) | 11 DIGITAL OUT COAXIAL/
OPTICAL terminals.....(9, 12) |
| 5 COMPONENT VIDEO OUT terminals.....(9) | |
| 6 ROOM TO ROOM IN/OUT jacks
Control terminal for system extension. | |
| 7 RS-232C input/output terminal
Control terminal for system extension. | |

 Remote control unit

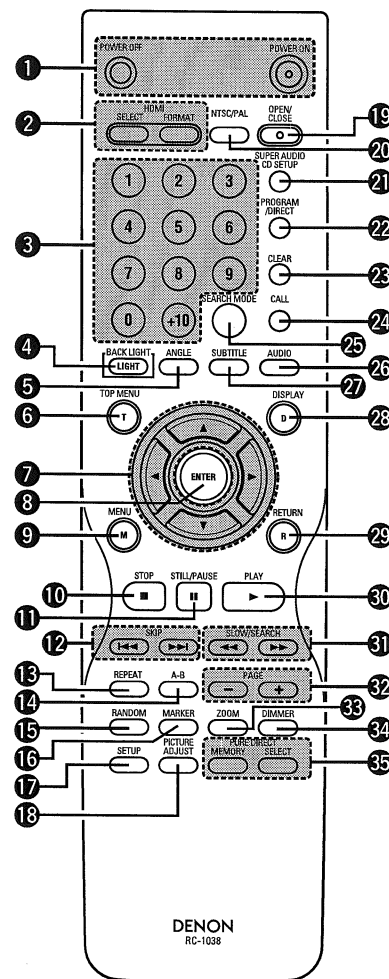

- | | |
|---|--|
| 1 POWER ON/OFF buttons(34) | |
| 2 HDMI SELECT/FORMAT buttons.....(29) | |
| 3 Number buttons (0 ~ 9, +10).....(16, 36) | |
| 4 BACK LIGHT button
Press this to light the opal color button.
Press again this to put out light. | |
| 5 ANGLE button(36) | |
| 6 TOP MENU button(36) | |
| 7 Cursor buttons (Δ ▽ ◀ ▶)(15) | |
| 8 ENTER button.....(15) | |
| 9 MENU button(36) | |
| 10 STOP button(34) | |
| 11 STILL/PAUSE button(35) | |
| 12 SKIP buttons.....(41, 42) | |
| 13 REPEAT button.....(39) | |
| 14 A-B button(44) | |
| 15 RANDOM button.....(39) | |
| 16 MARKER button(46) | |
| 17 SETUP button.....(15) | |
| 18 PICTURE ADJUST button.....(32) | |
| 19 OPEN/CLOSE button(34) | |
| 20 NTSC/PAL button(47) | |
| 21 SUPER AUDIO CD SETUP button.....(38) | |
| 22 PROGRAM/DIRECT button(44) | |
| 23 CLEAR button(37) | |
| 24 CALL button(44) | |
| 25 SEARCH MODE button.....(37) | |
| 26 AUDIO button.....(36) | |
| 27 SUBTITLE button(36) | |
| 28 DISPLAY button.....(39, 45) | |
| 29 RETURN button.....(19) | |
| 30 PLAY button.....(34) | |
| 31 SLOW/SEARCH buttons.....(42) | |
| 32 PAGE buttons(37) | |
| 33 ZOOM button(41) | |
| 34 DIMMER button(47) | |
| 35 PURE DIRECT
MEMORY/SELECT buttons(28) | |