 


NOTE

- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit.
- The supplied batteries are only for verifying operation.
- When inserting the batteries, be sure to do so in the proper direction, following the “⊕” and “⊖” marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not attempt to charge dry batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.

Operating Range of the Remote Control Unit

Point the remote control unit at the remote sensor when operating it.

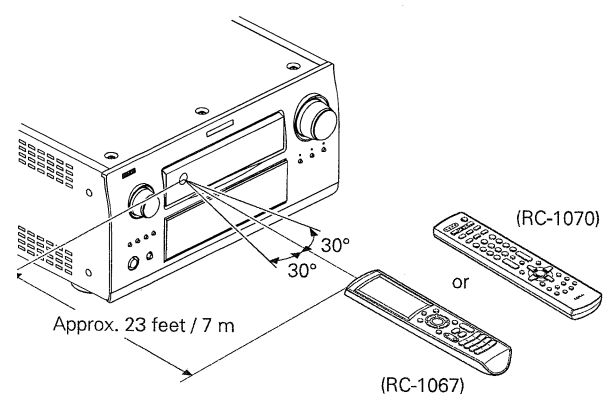

 
NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.

Part Names and Functions

For buttons not explained here, see the page indicated in parentheses ().


Front Panel

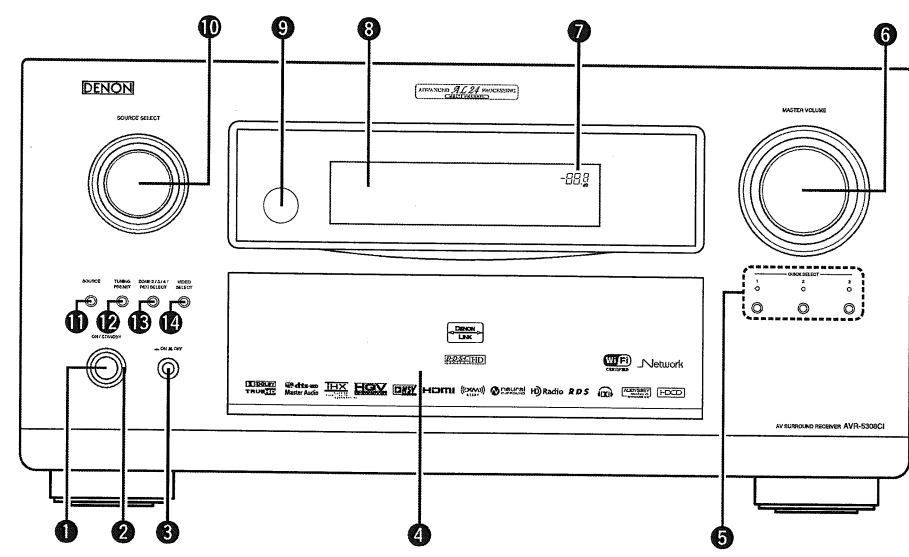

- | | | | |
|---|------|---------------------------------------|----------|
| ① Power operation button (ON/STANDBY) | (56) | ⑧ Display | (5) |
| ② Power indicator | (56) | ⑨ Remote control sensor | (4) |
| ③ Power switch (ON OFF) | (56) | ⑩ SOURCE SELECT knob | (43) |
| ④ Door | (5) | ⑪ SOURCE button | (43) |
| ⑤ QUICK SELECT buttons / indicators | (74) | ⑫ TUNING PRESET button | (57) |
| ⑥ MASTER VOLUME control knob | (56) | ⑬ ZONE2/3/4 / REC SELECT button | (71, 90) |
| ⑦ Master volume indicator | | ⑭ VIDEO SELECT button | (45) |

Remote Control Unit

 □ Main remote control unit (RC-1067)

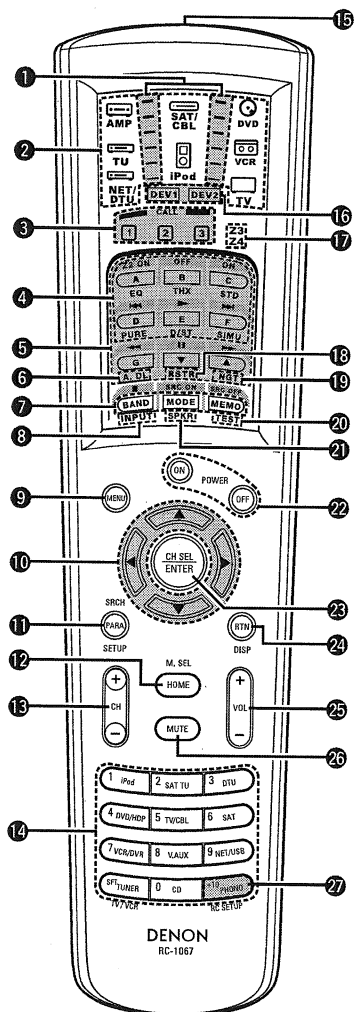

- 1 Signal transmission indicator (76)
- 2 Mode select buttons (76)
- 3 Quick select / System call buttons (74, 80)
- 4 Surround mode buttons (48 ~ 50)
- 5 System buttons (77, 78)
- 6 Audio delay button (A. DL) (54)
- 7 Tuner system buttons (57)
- 8 Input mode button (INPUT) (45)
- 9 MENU button (25)
- 10 Cursor buttons (Δ ∇ ◀ ▶) (25)
- 11 Parameter / Search button (PARA / SRCH) (50, 58, 61, 64)
- 12 Monitor select (M. SEL) / HOME button (33, 76)
- 13 Channel buttons (CH) (57)
- 14 Input source select / Number buttons (43, 56)
- 15 Remote control signal transmitter (4)
- 16 Device select indicators (DEV1 / DEV2) ... (76)
- 17 ZONE3 / ZONE4 select indicators (Z3 / Z4) (90)
- 18 RESTORER button (RSTR) (53)
- 19 Night button (NGT) (53)
- 20 Test tone button (TEST) (31)
- 21 Surround speaker select button (SPKR) (32)
- 22 POWER buttons (56)
- 23 Channel select (CH SEL) / ENTER button (25, 74)
- 24 Return button (RTN) (25)
- 25 Master volume control buttons (VOL) (56)
- 26 Muting button (MUTE) (56, 90)
- 27 Main remote control unit setup button (RC SETUP) (76)

 


The time for which the backlight stays on can be changed (page 81 "Setting the Time the Backlight Stays Lit").

NOTE

The ZONE2 mode **QUICK SELECT** (1 ~ 3), **A. DL**, **RSTR**, **NGT**, **INPUT**, **SPKR**, **TEST** and surround mode buttons cannot be used.

□ Sub remote control unit (RC-1070)

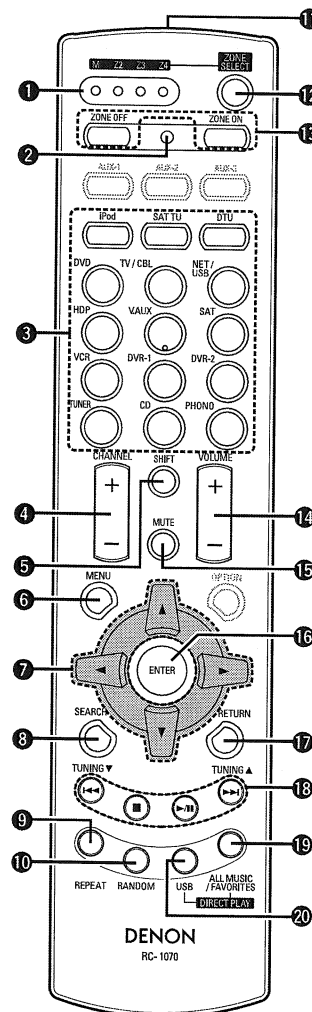


- 1 ZONE indicators (84)
- 2 Advanced setup button (84)
- 3 Input source select buttons (43)
- 4 CHANNEL buttons (57)
- 5 SHIFT button (57)
- 6 MENU button (25)
- 7 Cursor buttons (Δ ∇ ◀ ▶) (25)
- 8 SEARCH button (58, 61, 64)
- 9 REPEAT button (63)
- 10 RANDOM button (64)
- 11 Remote control signal transmitter (4)
- 12 ZONE SELECT button (84)
- 13 Zone power on/off buttons (ZONE ON / ZONE OFF) (90)
- 14 Master volume control buttons (VOLUME) (56)
- 15 Muting button (MUTE) (56, 90)
- 16 ENTER button (25)
- 17 RETURN button (25)
- 18 System buttons (57, 82, 83)
- 19 ALL MUSIC/FAVORITES (DIRECT PLAY) button (82)
- 20 USB (DIRECT PLAY) button (82)

NOTE

The **AUX-1**, **AUX-2**, **AUX-3** and **OPTION** buttons cannot be used.

- The sub remote control unit is equipped with frequently used buttons, so it can be used for simple remote control unit operations.

 - It is not possible to operate devices other than the amplifier

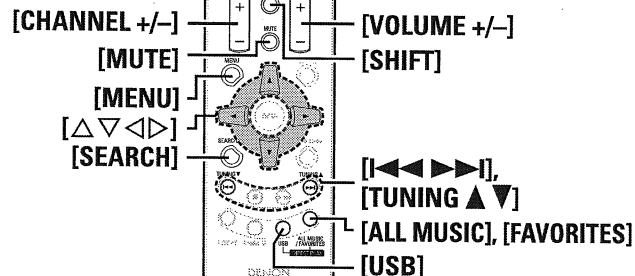

Functions of Buttons by Component

Device operated	DVD, HDP, TV / CBL, DVR-1, DVR-2, VCR, V.AUX, SAT, CD, PHONO				TUNER (AM/FM)				DTU (HD Radio)			
Zone selection	M	Z2	Z3	Z4	M	Z2	Z3	Z4	M	Z2	Z3	Z4
ZONE SELECT	Zone operation mode selection				Zone operation mode selection				Zone operation mode selection			
ZONE OFF	Power turned off (※1)				Power turned off (※1)				Power turned off (※1)			
ZONE ON	Power turned on (※1)				Power turned on (※1)				Power turned on (※1)			
SOURCE SELECT	Input source selection (※2)				Input source selection			—	Input source selection			—
CHANNEL + / -	—				Preset channel selection			—	Preset channel selection			—
SHIFT	—				Preset channel memory block selection			—	Preset channel memory block selection			—
VOLUME + / -	Adjustment of volume (※1)		—		Adjustment of volume (※1)		—		Adjustment of volume (※1)		—	
MUTE	Muting (※1)		—		Muting (※1)		—		Muting (※1)		—	
MENU	Selected zone menu		—		Selected zone menu		—		Selected zone menu		—	
△ ▽ ◁ ▷	—				—				Multicast switching (△ ▽)			
SEARCH	—				RDS search				Multicast switching			
⏮ ⏭ ⏪ ⏩, TUNING ▲ ▼	—				Tuning			—	Tuning			—
USB	※3		—		※3		—		※3		—	
ALL MUSIC * (Music server only)	※4		—		※4		—		※4		—	
FAVORITES *	※5		—		※5		—		※5		—	

※1: Affects the currently selected zone.

※2: In ZONE4, it is not possible to select "XM," "HD Radio," or sources with no digital input signals ("TUNER," "PHONO," "iPod," etc.).

Network audio signals (Internet radio, music server, USB) can be played as long as they are not copyright-protected.

※3: The input source switches to "NET/USB" and the files on the USB memory device are played.

※4: The input source switches to "NET/USB" and the files in "All Music" on the music server are played.

※5: The input source switches to "NET/USB" and the files in "Favorites" are played.

 
*: Whether "All Music" or "Favorites" is selected depends on the "Direct Play" setting (page 47).

DIRECT PLAY button

- Playback is possible in the mode selected at GUI menu "Source Select" – "NET/USB" – "Playback Mode" – "Direct Play".
- **FAVORITES:** Playback starts from the first track registered in the favorites.
- **ALL MUSIC:** Playback starts from the first track registered in the "All Music" folder.
- When **[USB]** is pressed, playback starts from the first track on the USB memory device.

NOTE

When the music server is stopped or restarted, it may no longer be possible to play tracks stored in the favorites.

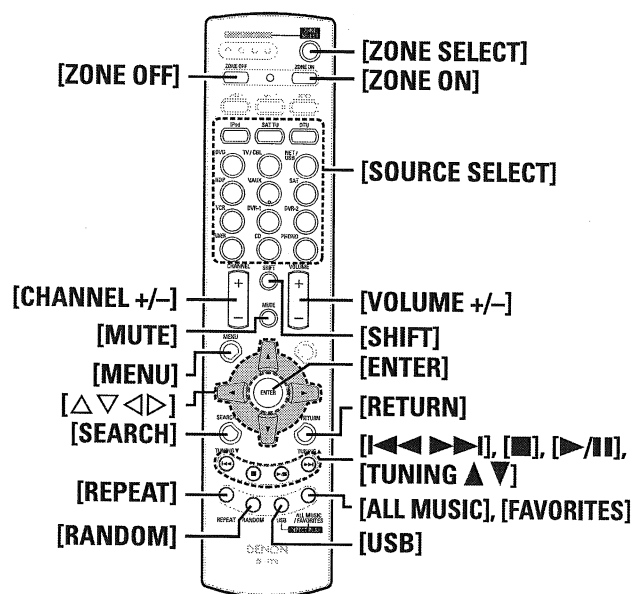

Device operated	SAT TU (XM)				NET / USB				iPod			
Zone selection	M	Z2	Z3	Z4	M	Z2	Z3	Z4	M	Z2	Z3	Z4
ZONE SELECT	Zone operation mode selection				Zone operation mode selection				Zone operation mode selection			
ZONE OFF	Power turned off (※1)				Power turned off (※1)				Power turned off (※1)			
ZONE ON	Power turned on (※1)				Power turned on (※1)				Power turned on (※1)			
SOURCE SELECT	Input source selection				Input source selection (※2)				Input source selection			
CHANNEL +/-	Preset channel selection				Preset channel selection				-			
SHIFT	Preset channel memory block selection				-				-			
VOLUME +/-	Adjustment of volume (※1)				Adjustment of volume (※1)				Adjustment of volume (※1)			
MUTE	Muting (※1)				Muting (※1)				Muting (※1)			
MENU	Selected zone menu				Selected zone menu				Selected zone menu			
Δ ∇ ◀ ▶	Category search				File operations				File operations			
ENTER	-				File operations				File operations			
SEARCH	Direct access of channel				Page forward screen / Character search				Page forward screen / Browse/Remote mode switching (press and hold)			
RETURN	-				File operations				File operations			
◀ ▶, TUNING ▲ ▼	Channel selection				Track search				Track search			
■	-				Stop				Stop			
▶/II	-				Play/pause				Play/pause			
REPEAT	-				1-track/all-track repeat play (USB / Media server)				1-track/all-track repeat play			
RANDOM	-				Random play (USB / Media server)				Song/album shuffle play			
USB	※3				※3				※3			
ALL MUSIC * (Music server only)	※4				※4				※4			
FAVORITES *	※5				※5				※5			

※1: Affects the currently selected zone.

 
※2: In ZONE4, it is not possible to select "XM", "HD Radio", or sources with no digital input signals ("TUNER", "PHONO", "iPod", etc.). Network audio signals (Internet radio, music server, USB) can be played as long as they are not copyright-protected.

※3: The input source switches to "NET/USB" and the files on the USB memory device are played.

※4: The input source switches to "NET/USB" and the files in "All Music" on the music server are played.

※5: The input source switches to "NET/USB" and the files in "Favorites" are played.

*: Whether "All Music" or "Favorites" is selected depends on the "Direct Play" setting (page 47).

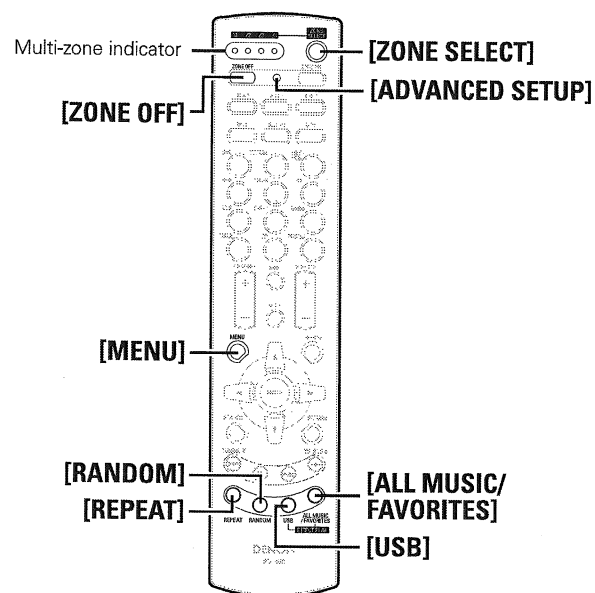

Switching Zones

Use this procedure to select the zone to be operated by the sub remote control unit.

- 1** Press **[ZONE SELECT]**.
The currently selected multi-zone indicator lights.
- 2** While the multi-zone indicator is light, press **[ZONE SELECT]** to select the zone to be operated.
The currently selected multi-zone indicator lights.

Setting the Zone for Which the Sub Remote Control Unit is Used (ZONE SELECT LOCK Mode)

We recommend always using the sub remote control unit for the same room. When this is done, the unit can be set so that the zone does not switch when buttons are operated.

- 1** Use the tip of a pen to press **[ADVANCED SETUP]**.
All the multi-zone indicators light.
- 2** Select the multi-zone to be set.
The selected multi-zone indicator lights.
 - ① To set to "MAIN ZONE" : Press **[REPEAT]**.
 - ② To set to "ZONE2" : Press **[RANDOM]**.
 - ③ To set to "ZONE3" : Press **[USB]**.
 - ④ To set to "ZONE4" : Press **[ALL MUSIC/FAVORITES]**.
- 3** Use the tip of a pen to press **[ADVANCED SETUP]**.
The multi-zone indicator turns off.

To Cancel

- 1** Use the tip of a pen to press **[ADVANCED SETUP]**.
The currently selected multi-zone indicator lights.
- 2** Press **[ZONE SELECT]**.
All the multi-zone indicators light.
- 3** Use the tip of a pen to press **[ADVANCED SETUP]**.
The multi-zone indicator turns off.

Setting the Remote ID

When using multiple DENON AV receivers in the same room, make this setting so that no AV receiver other than the desired one operates.

- 1** While pressing **[MENU]**, press **[ADVANCED SETUP]** with the tip of a pen.
The multi-zone indicator corresponding to the currently selected remote ID flashes.
- 2** Select the remote ID to be set.
 - ① To set to 1 : Press **[REPEAT]**.
The "M" indicator flashes.
 - ② To set to 2 : Press **[RANDOM]**.
The "Z2" indicator flashes.
 - ③ To set to 3 : Press **[USB]**.
The "Z3" indicator flashes.
 - ④ To set to 4 : Press **[ALL MUSIC/FAVORITES]**.
The "Z4" indicator flashes.
- 3** While pressing **[MENU]**, press **[ADVANCED SETUP]** with the tip of a pen.
The multi-zone indicator turns off.

NOTE

When changing a setting, be sure to set the same remote ID as the AVR-5308CI's (page 41).

Resetting the Settings

While pressing **[ZONE OFF]**, press **[ADVANCED SETUP]** with the tip of a pen.
All the multi-zone indicators flash 4 times, then all the settings are restored to their defaults.