

Cautions on Handling

• Before turning the power switch on

Check once again that all connections are correct and that there are no problems with the connection cables.

- Power is supplied to some of the circuitry even when the unit is set to the standby mode. When traveling or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.

• About condensation

If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.

If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.

• Cautions on using mobile phones

Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when it is in use.

• Moving the unit

Turn off the power and unplug the power cord from the power outlet.

 
Next, disconnect the connection cables to other system units before moving the unit.

- Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.

Cautions on Installation

Note:

For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.

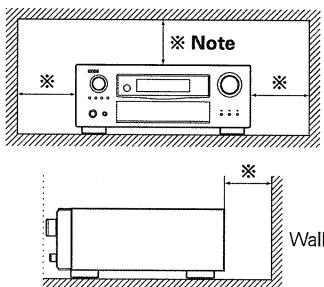


About the Remote Control Unit

In addition to the AVR-2808CI, the included main remote control unit (RC-1068) can also be used to operate the equipment listed below.


- ① DENON system components
- ② Non-DENON system components
 - By setting the preset memory (page 51 ~ 53)
 - By using the learn function (page 54)

Inserting the Batteries

 - ① Lift the clasp and remove the rear lid.

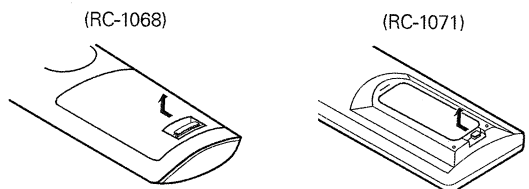

 - ② Load the two batteries properly as indicated by the marks in the battery compartment.

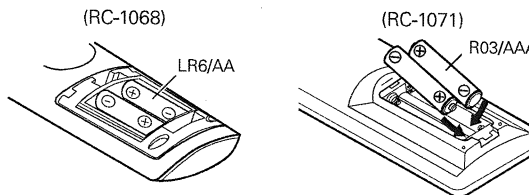


- ③ Put the rear cover back on.

NOTE

- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit.
- The supplied batteries are only for verifying operation.
- When inserting the batteries, be sure to do so in the proper direction, following the "⊕" and "⊖" marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not attempt to charge dry batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.

Operating Range of the Remote Control Unit

 Point the remote control unit at the remote sensor when operating it.

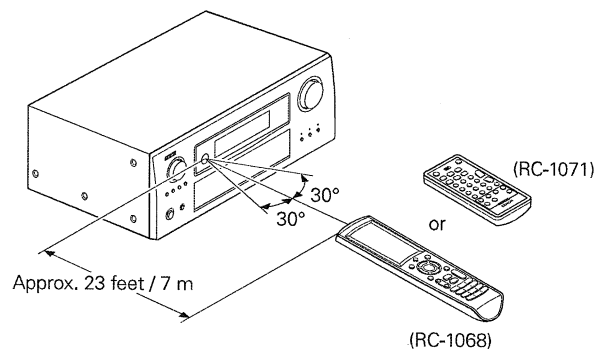


NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.

Remote Control Unit

 ■ Main remote control unit (RC-1068)

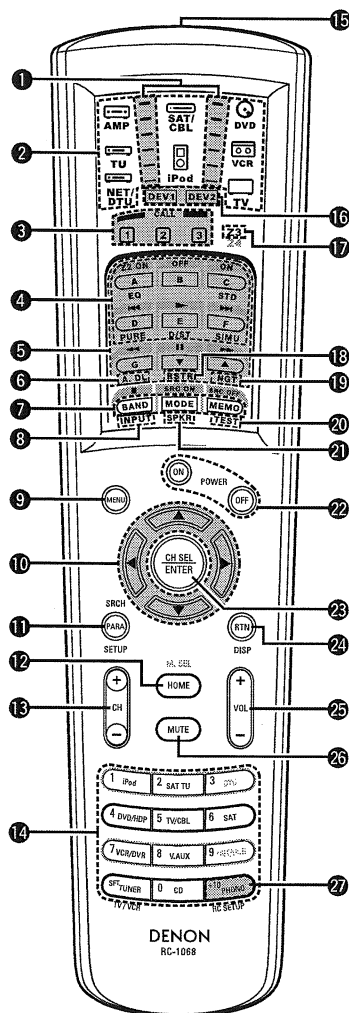

- 1 Signal transmission indicator (51)
- 2 Mode select buttons (51)
- 3 Quick select / System call buttons (50, 55)
- 4 Surround mode buttons (36 ~ 38)
- 5 System buttons (52, 53)
- 6 Audio delay button (A. DL) (41)
- 7 Tuner system buttons (44)
- 8 Input mode button (INPUT) (34)
- 9 MENU button (20)
- 10 Cursor buttons (Δ ∇ ◀ ▶) (20)
- 11 Parameter / Search button (PARA / SRCH) (38, 46, 48)
- 12 HOME button (51)
- 13 Channel buttons (CH) (44)
- 14 Input source select / Number buttons .. (43, 44)
- 15 Remote control signal transmitter (3)
- 16 Device select indicators (DEV1 / DEV2) ... (51)
- 17 ZONE3 select indicators (Z3) (51)
- 18 RESTORER button (RSTR) (41)
- 19 Night button (NGT) (41)
- 20 Test tone button (TEST) (27)
- 21 Front speaker select button (SPKR) (43)
- 22 POWER buttons (43)
- 23 Channel select (CH SEL) / ENTER button (20, 50)
- 24 Return button (RTN) (20)
- 25 Master volume control buttons (VOL) (43)
- 26 Muting button (MUTE) (43, 60)
- 27 Main remote control unit setup button (RC SETUP) (51)

 


The time for which the backlight stays on can be changed (page 55 "Setting the Time the Backlight Stays Lit").

NOTE

- The **M. SEL**, **DTU**, **NET/USB** buttons cannot be used.
- The **NET/DTU** and **ZONE2** mode **QUICK SELECT** (1 ~ 3), **A. DL**, **RSTR**, **NGT**, **INPUT**, **SPKR**, **TEST** and surround mode buttons cannot be used.
- The **ZONE4** mode cannot be used.

■ Sub remote control unit (RC-1071)

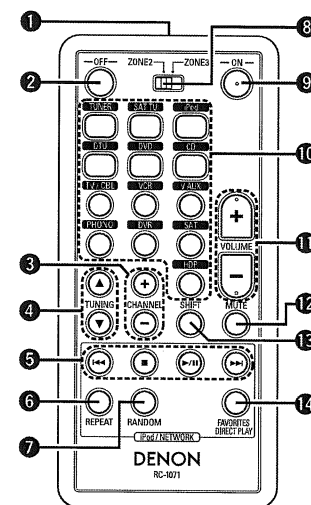

- 1 Remote control signal transmitter (3)
- 2 Zone power off button (OFF) (60)
- 3 CHANNEL buttons (56)
- 4 TUNING buttons (56)
- 5 System buttons (56)
- 6 REPEAT button (56)
- 7 RANDOM button (56)
- 8 ZONE2/ZONE3 select switch (56)
- 9 Zone power on button (ON) (60)
- 10 Input source select buttons (60)
- 11 Volume control buttons (VOLUME) (60)
- 12 Muting button (MUTE) (60)
- 13 SHIFT button (56)
- 14 FAVORITES DIRECT PLAY button (56)

Adjusting the Backlight's Brightness

The display's brightness can be adjusted in 5 steps.
(Default: Step 3)

- 1 Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 2 Press **[CHANNEL +]** or **[CHANNEL -]**.
The display gets one step brighter when **[+]** is pressed.
The display gets one step darker when **[-]** is pressed.
- 3 Press **[RC SETUP]** to complete the setting.

Resetting the Main Remote Control Unit

Learning Function

[Resetting button by button]

- 1 Press **[MODE SELECTOR]** for the device you want to reset.
- 2 Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 3 Press **[9], [7]** and **[6]**, in that order.
The signal transmission indicator flashes twice.
- 4 Press the button you want to reset twice.
The signal transmission indicator flashes twice.

[Resetting by device mode]

- 1 Press **[MODE SELECTOR]** for the device you want to reset.
- 2 Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 3 Press **[9], [7]** and **[6]**, in that order.
The signal transmission indicator flashes twice.
- 4 Press **[MODE SELECTOR]** for the device you want to reset twice.
The signal transmission indicator flashes twice.

System call function

- 1 Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 2 Press **[9], [7]** and **[8]**, in that order.
The signal transmission indicator flashes twice.
- 3 Press **[SYSTEM CALL]** (1, 2 or 3) you want to reset.
- 4 Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.

Punch-through function

- 1 Press **[MODE SELECTOR]** for the device you want to reset (TV or SAT/CBL).
- 2 Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 3 Press **[9], [8]** and **[4]**, in that order.
The signal transmission indicator flashes twice.
- 4 Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.

All settings

 
- 1 Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 2 Press **[9], [8]** and **[1]**, in that order.
The signal transmission indicator flashes 4 times.
All the settings are restored to their defaults.

About the zone remote control unit (RC-1071)

The sub remote control unit (RC-1071) included with the AVR-2808CI can be used as the exclusive multi-zone remote control unit.

※ The following describes operation for the selected zone. (Use **[ZONE SELECT]** to switch zones.)

- Turning the multi-zone power on and off
- Selecting the input source to be played
- Adjusting and temporarily muting the multi-zone volume
- Listening to the tuner
- Operating an iPod (Note that **[FAVORITES DIRECT PLAY]** can only be used with the ASD-3W/3N.)

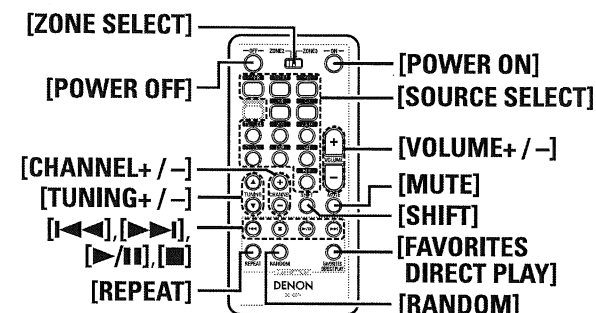

ZONE SELECT	Switching the zone to be operated
POWER OFF	Power off
POWER ON	Power on
SOURCE SELECT	Switching the input zone
VOLUME + / -	Volume control
CHANNEL + / -	Channel + / -
TUNING + / -	Tuning + / -
MUTE	Muting
SHIFT	Switching the memory block
I<< I>> I<<>> I	Auto search (cue)
■	Stop
▶/II	Play / Pause
FAVORITES DIRECT PLAY	Playing files registered at "FAVORITES"
REPEAT	1-track / All-track repeat play
RANDOM	1-track / album shuffle play

※ When using a Control Dock for iPod (ASD-1R), **[FAVORITES DIRECT PLAY]** cannot be used.