 


Cautions on Handling

- **Before turning the power switch on**
Check once again that all connections are correct and that there are no problems with the connection cables.
- Power is supplied to some of the circuitry even when the unit is set to the standby mode. When traveling or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.
- **About condensation**
If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.
If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.
- **Cautions on using mobile phones**
Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when it is in use.
- **Moving the unit**
Turn off the power and unplug the power cord from the power outlet.
Next, disconnect the connection cables to other system units before moving the unit.
- Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.

Cautions on Installation

Note:
For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.

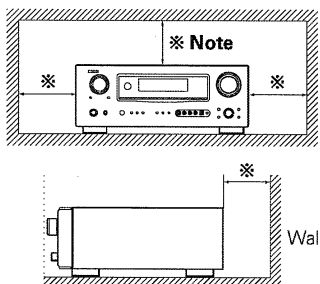

 
 
About the Remote Control Unit

In addition to the AVR-2308CI, the included main remote control unit (RC-1080) can also be used to operate the equipment listed below.



- ① DENON system components
- ② Non-DENON system components
 - By setting the preset memory (page 50 ~ 52)

Inserting the Batteries

- ① Lift the clasp and remove the rear lid.

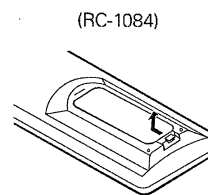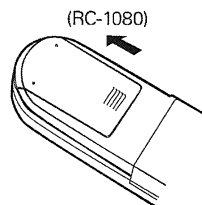

  - ② Load the two batteries properly as indicated by the marks in the battery compartment.

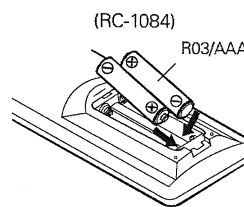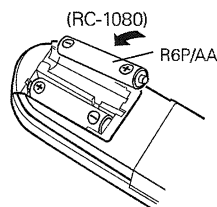


- ③ Put the rear cover back on.

NOTE

- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit.
- The supplied batteries are only for verifying operation.
- When inserting the batteries, be sure to do so in the proper direction, following the “+” and “-” marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not attempt to charge dry batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.

Operating Range of the Remote Control Unit

 Point the remote control unit at the remote sensor when operating it.

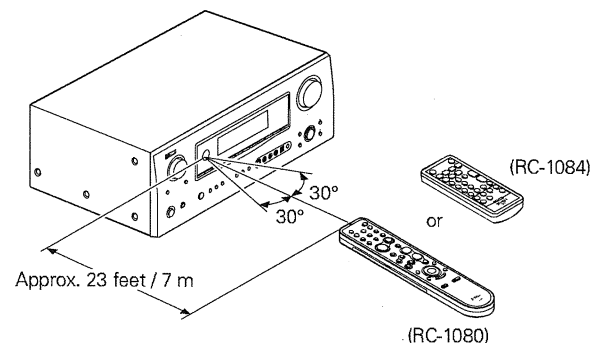


NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.

Remote Control Unit


□ Main Remote Control Unit (RC-1080)

 [Front]

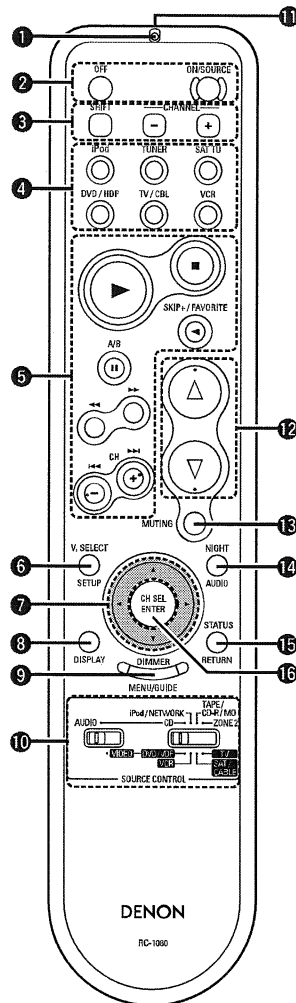


- 1 Indicator (50)
- 2 Power buttons (43)
- 3 Tuner system buttons (44)
- 4 Source select buttons (43)
- 5 System buttons (47)
- 6 Video select button (V. SELECT) (35)
- 7 Cursor buttons (Δ ▽ ◀ ▶) (20)
- 8 DISPLAY button (41)
- 9 DIMMER button (32)
- 10 Mode selector switches (44, 46)
- 11 Remote control signal transmitter (3)
- 12 Master volume control buttons (43)
- 13 MUTING button (43)
- 14 NIGHT button (41)
- 15 STATUS button (45)
- 16 Channel select (CH SEL) / ENTER button (20, 48)

 [Rear]

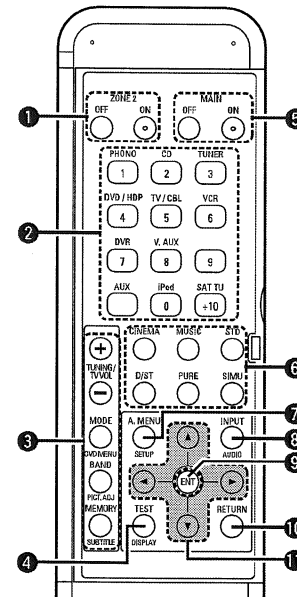

- 1 ZONE2 power buttons (57)
- 2 Source select buttons (43)
- 3 Tuner system buttons (44)
- 4 Test tone button (TEST) (27)
- 5 Main zone power buttons (MAIN) (57)
- 6 Surround mode buttons (36, 37)
- 7 Amp menu button (A. MENU) (20)
- 8 Input mode button (INPUT) (34)
- 9 Enter button (ENT) (20)
- 10 RETURN button (20)
- 11 Cursor buttons (Δ ▽ ◀ ▶) (20)

 □ Sub remote control unit for ZONE2 (RC-1084)

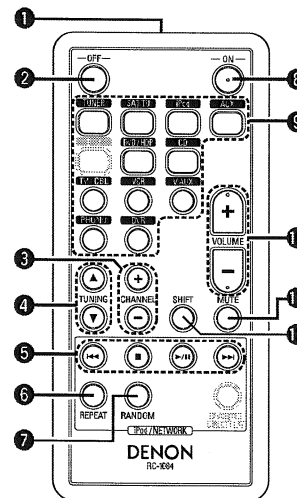

- 1 Remote control signal transmitter (3)
- 2 Zone power off button (OFF) (53)
- 3 CHANNEL buttons (53)
- 4 TUNING buttons (53)
- 5 System buttons (53)
- 6 REPEAT button (53)
- 7 RANDOM button (53)
- 8 Zone power on button (ON) (53)
- 9 Input source select buttons (53)
- 10 Volume control buttons (VOLUME) (53)
- 11 Muting button (MUTE) (53)
- 12 SHIFT button (53)

NOTE

The DTU buttons cannot be used.



The **FAVORITES DIRECT PLAY** button is for future use.

NOTE

If buttons on the front or rear are pressed strongly, the button on the opposite side will be activated too.

[Front]

[▶], [■], [II],
[◀], [◀◀], [▶▶],
[◀◀], [▶▶]

[MODE
SELECTOR 1]

[MODE
SELECTOR 2]

[Rear]

[NUMBER]

[MEMORY]

[RETURN]

Punch Through Function

"Punch Through" is a function allowing you to operate ▶, ■, II, ◀, ◀◀, ▶▶, ◀◀ and ▶▶ on CD, iPod/NETWORK, TAPE/CD-R/MD, DVD/VDP or VCR components when in the SAT/CABLE or TV mode. By default, nothing is set.

- 1 Set [MODE SELECTOR 1] to "VIDEO".
- 2 Set [MODE SELECTOR 2] to the component to be registered (SAT/CABLE or TV).
- 3 Press [MEMORY] and [RETURN] at the same time. The indicator starts flashing.
- 4 Input the number of the component you want to set.


	No.
CD	1
iPod/NETWORK	2
TAPE/CD-R/MD	3
DVD/VDP	4
VCR	5
No setting	0

Sub Remote Control Unit

The sub remote control unit (RC-1084) included with the AVR-2308CI can be used as the exclusive multi-zone remote control unit.

※ The following describes operation for the selected zone.

 - Turning the multi-zone power on and off
- Selecting the input source to be played
- Adjusting and temporarily muting the multi-zone volume
- Listening to the tuner

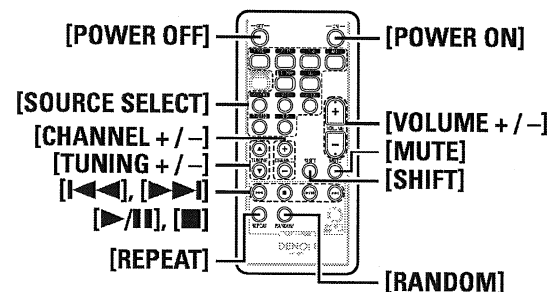

POWER OFF	Power off
POWER ON	Power on
SOURCE SELECT	Switching the input source
VOLUME + / -	Volume control
CHANNEL + / -	Channel + / -
TUNING + / -	Tuning + / -
MUTE	Muting
SHIFT	Switching the memory block
I◀◀ ▶▶I	Auto search (cue)
■	Stop
▶/II	Play / Pause
REPEAT	1-track / All -track repeat play
RANDOM	1-track / album shuffle play

※ When using a Control Dock for iPod (ASD-1R), the [FAVORITES DIRECT PLAY] button cannot be used.