

Cautions on Handling

• Before turning the power switch on

Check once again that all connections are correct and that there are no problems with the connection cables.

- Power is supplied to some of the circuitry even when the unit is set to the standby mode. When traveling or leaving home for long periods of time, be sure to unplug the power cord from the power outlet.

• About condensation

If there is a major difference in temperature between the inside of the unit and the surroundings, condensation (dew) may form on the operating parts inside the unit, causing the unit not to operate properly.

If this happens, let the unit sit for an hour or two with the power turned off and wait until there is little difference in temperature before using the unit.

• Cautions on using mobile phones

Using a mobile phone near this unit may result in noise. If so, move the mobile phone away from this unit when it is in use.

• Moving the unit

Turn off the power and unplug the power cord from the power outlet.

 
Next, disconnect the connection cables to other system units before moving the unit.

- Note that the illustrations in these instructions may differ from the actual unit for explanation purposes.

Cautions on Installation

Note:

For proper heat dispersal, do not install this unit in a confined space, such as a bookcase or similar enclosure.

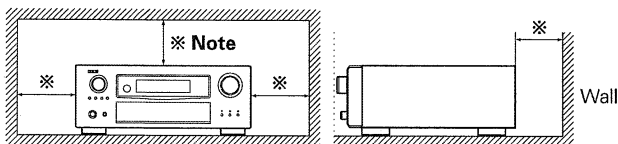


About the Remote Control Unit

In addition to the AVR-2809CI, the included main remote control unit (RC-1102) can also be used to operate the equipment listed below.

- ① DENON system components
- ② Non-DENON system components
 - By setting the preset memory (page 61 ~ 63)
 - By using the learning function (page 64)

Inserting the Batteries

 - ① Lift the clasp and remove the rear cover.

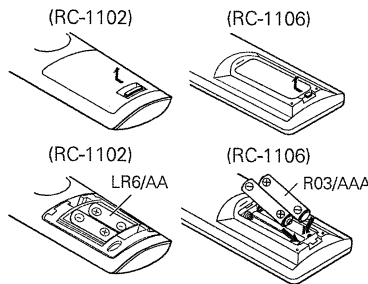

- ② Load the two batteries properly as indicated by the marks in the battery compartment.

 
- ③ Put the rear cover back on.

NOTE

- Replace the batteries with new ones if the set does not operate even when the remote control unit is operated close to the unit.
- The supplied batteries are only for verifying operation.
- When inserting the batteries, be sure to do so in the proper direction, following the "⊕" and "⊖" marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
 - Do not attempt to charge dry batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- Remove the batteries from the remote control unit if it will not be in use for long periods.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.

Operating Range of the Remote Control Unit

Point the remote control unit at the remote sensor when operating it.

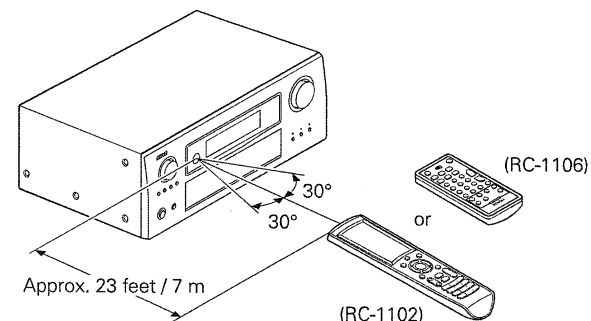


NOTE

The set may function improperly or the remote control unit may not operate if the remote control sensor is exposed to direct sunlight, strong artificial light from an inverter type fluorescent lamp or infrared light.

Remote Control Unit

 ❑ Main remote control unit (RC-1102)

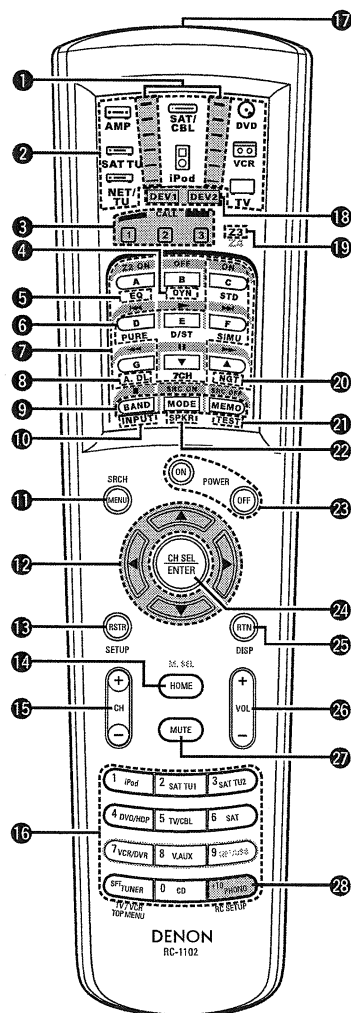

- 1 Signal transmission indicator (61)
- 2 Mode select buttons (61)
- 3 Quick select / System call buttons (60, 64)
- 4 DYNAMIC VOLUME button (DYN) (46)
- 5 MultEQ XT button (EQ) (45)
- 6 Surround mode buttons (40 ~ 42)
 - Standard button (STD) (40)
 - Pure Direct button (PURE) (42)
 - Direct/Stereo button (D/ST) (41)
 - DSP simulation button (SIMU) (41)
 - 7CH Stereo button (7CH) (41)
- 7 System buttons (62, 63)
- 8 Audio delay button (A. DL) (47)
- 9 Tuner system buttons (51)
- 10 Input mode button (INPUT) (37)
- 11 Menu / Search button (MENU / SRCH) (20)
- 12 Cursor buttons (Δ ▽ ◀ ▶) (20)
- 13 RESTORER button (RSTR) (47)
- 14 HOME button (61)
- 15 Channel buttons (CH) (51)
- 16 Input source select / Number buttons (50, 51)
- 17 Remote control signal transmitter (3)
- 18 Device select indicators (DEV1 / DEV2) (61)
- 19 ZONE3 select indicators (Z3) (61)
- 20 Night button (NGT) (47)
- 21 Test tone button (TEST) (28)
- 22 Front speaker select button (SPKR) (29)
- 23 POWER buttons (50)
- 24 Channel select (CH SEL) / ENTER button (20, 59)
- 25 Return button (RTN) (20)
- 26 Master volume control buttons (VOL) (50)
- 27 Muting button (MUTE) (50, 69)
- 28 Main remote control unit setup button (RC SETUP) (61)

 


The time for which the backlight stays on can be changed (page 65 "Setting the Time the Backlight Stays Lit").

NOTE

- The **M. SEL**, **NET/USB** buttons cannot be used.
- The ZONE2 mode **QUICK SELECT (1 ~ 3)**, **A.DL**, **NGT**, **INPUT**, **SPKR**, **TEST** and surround mode buttons cannot be used.
- The ZONE4 mode cannot be used.

❑ Sub remote control unit (RC-1106)

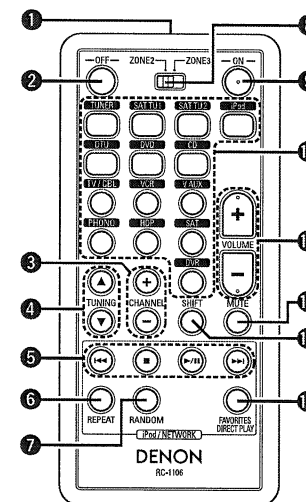


- 1 Remote control signal transmitter (3)
- 2 Zone power off button (OFF) (69)
- 3 CHANNEL buttons (66)
- 4 TUNING buttons (66)
- 5 System buttons (66)
- 6 REPEAT button (66)
- 7 RANDOM button (66)
- 8 ZONE2/ZONE3 select switch (66)
- 9 Zone power on button (ON) (69)
- 10 Input source select buttons (69)
- 11 Volume control buttons (VOLUME) (69)
- 12 Muting button (MUTE) (69)
- 13 SHIFT button (66)



The **FAVORITES DIRECT PLAY** button can function when the control dock for iPod ASD-3N or ASD-3W is used.

NOTE

 The **DTU** button cannot be used.

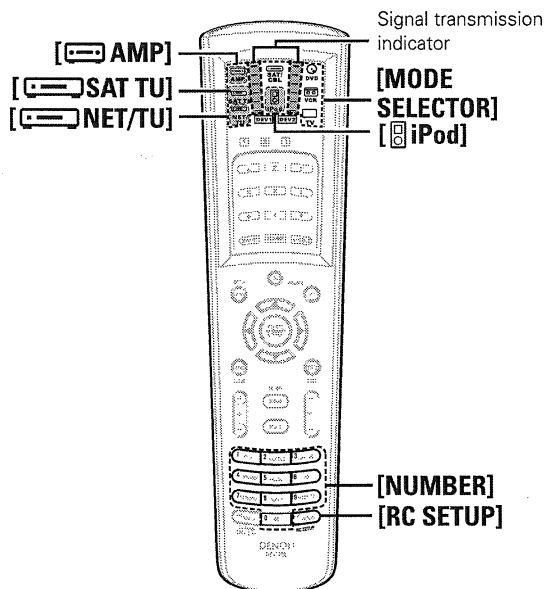

Setting the Remote ID

When using multiple DENON AV receivers in the same room, make this setting so that only the desired AV receiver operates.

- 1** Press **[AMP]** to set the main remote control unit to the AMP mode.
- 2** Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 3** Refer to the table at the right, and use **[NUMBER]** to input the 5-digit number corresponding to the remote ID to be changed.
The signal transmission indicator flashes twice.
- 4** Press **[NET/TU]** (**[DEV2]** mode), **[iPod]** or **[SAT TU]** (**[DEV1]/[DEV2]** mode) to select the mode to be set.
- 5** Repeat steps 2 to 4 to set the remote IDs for all modes.

MODE SELECTOR Remote ID	AMP (MAIN)	SAT TU		NET/TU	iPod
		DEV1 (SIRIUS)	DEV2 (XM)	DEV2 (Analog Tuner)	
1 (Default)	81001	52271	52864	62863	72815
2	82001	52272	52812	62275	72816
3	83001	52273	52813	62276	72817
4	84001	52274	52814	62277	72818

NOTE

- When changing a setting, be sure to set the same remote ID as the AVR-2809CI's (page 34).
- When changing the AMP mode's remote ID, also change the "SAT TU", "NET/TU" and "iPod" remote ID at the same time.

 
Learning Function

If your AV devices are of a brand other than DENON or if they cannot be operated with the preset memory function, their remote control signals can be transferred to stored in the AVR-2809CI's main remote control unit.

- 1** Press **[MODE SELECTOR]** for the device you want to set.
- 2** Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 3** Press **[9], [7] and [5], in that order.**
The signal transmission indicator flashes twice and the learning mode is set.
- 4** Press the button to be set.
The main remote control unit's display turns off.
※ If a button that cannot be learned is pressed, the signal transmission indicator lights but the signal is not learned.

5 Point the main remote control units directly at each other and press and hold the button on the other device's remote control unit that you want to learn.

Once learning is completed normally, the display lights and the signal transmission indicator flashes twice.

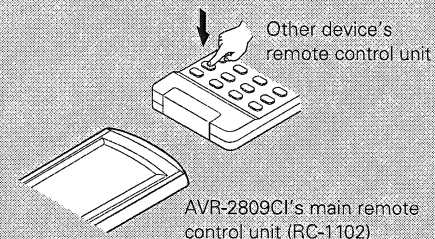

- ※ If you want to learn other buttons, repeat steps 4 and 5.
- ※ The mode can be switched by pressing **[MODE SELECTOR]**.
- ※ The signal transmission indicator lights once for a long time if learning was not possible.

6 Press and hold in [RC SETUP] for at least 3 seconds. The signal transmission indicator flashes twice and the setting is completed.



- With some remote control units, the signals cannot be learned or the device will not operate properly even when the signals have been learned. In this case, use the device's own remote control unit.
- Learned buttons have priority over the preset memory. If you no longer need the learned setting, reset the learning function (page 66).

NOTE

- [HOME]** cannot be learned.
- Do not learn any remote control signals at **[RC SETUP]**.
- The AMP, ZONE2, ZONE3, ZONE4 and SYSTEM CALL modes cannot be learned.

[Video]

Symptom	Cause	Countermeasure	Page
No picture appears.	- The connections between the AVR-2809CI and monitor are faulty. - The monitor's input setting is wrong. - PURE DIRECT mode is set. - The player is connected using the component input connectors, the monitor is connected using the video (yellow) or S-Video output connectors.	- Check the connections. - Set properly. - Cancel the PURE DIRECT mode. - High definition (1080i/720p) and progressive (480p/576p) video signals are not down-converted. Set the player to interlace (480i/576i) signals.	11 ~ 16, 19 – 42 –
Picture cannot be recorded.	Input source does not match recorder's video connection connector (video or S-Video).	The video conversion function does not work for the REC OUT connectors. Match the input source and recorder connections.	15
DVDs cannot be copied on a VCR.	–	This is not a malfunction. Most movie software includes copy prevention signals and cannot be copied.	–
On-screen display is not shown.	- The operation content display is "OFF". - The main volume display is "OFF". - The display during tuner operation is "OFF". - The display during iPod operation is "OFF".	When viewing HDMI or component video signals via the AVR-2809CI, the on-screen display appears when the MENU button.	9
		When only HDMI or component video signals are input to the AVR-2809CI, the characters of the on-screen display are not displayed over the picture.	9
		Set "Manual Setup" – "Option Setup" – "On-Screen Display" – "Text" to "ON".	33
		Set "Manual Setup" – "Option Setup" – "On-Screen Display" – "Master Volume" to "ON".	33
		- Set when "Manual Setup" – "On-Screen Display" – "Tuner Information" is not "OFF". - Set when "Manual Setup" – "On-Screen Display" – "iPod Information" is not "OFF".	33

[HDMI]

Symptom	Cause	Countermeasure	Page
HDMI audio signals are not output from speakers.	The "Manual Setup" – "HDMI Setup" – "HDMI Audio Out" setting is set to "TV".	Set to "Amp".	29
No picture appears with HDMI connections.	- The connections to the HDMI connectors are faulty. - HDMI input setting is improper. - The monitor is not compatible with copyright protection (HDCP). - The HDMI format of the player and monitor do not match.	- Check the connections. - Check the HDMI input setting. - Connect a monitor that is compatible with copyright protection (HDCP). - Match the HDMI format of the player and monitor.	11 38 11 11
No sound is output from the monitor connected with HDMI connections.	The "Manual Setup" – "HDMI Setup" – "HDMI Audio Out" setting is set to "Amp".	Set to "TV".	29
When performing the following operations on a connected device, AVR-2809CI has the same operations. · Power ON/OFF · Switching audio output devices · Adjust volume · Switch input source	HDMI's CEC function is operating.	Set "Manual Setup" – "HDMI Setup" – "HDMI Control" to "OFF". When you only want to operate the power on/off each device, set "Power Off Control" to "OFF".	29

[iPod]

Symptom	Cause	Countermeasure	Page
iPod cannot be played.	- The input source assigned to "iPod Dock" is not selected. - Cable is not properly connected. - Control dock for iPod's AC adapter is not connected to power outlet.	- Switch to the input source assigned at "iPod Dock". - Reconnect. - Plug the control dock for iPod's AC adapter into a power outlet.	39 13 –

[XM Satellite Radio]

Symptom	Cause	Countermeasure	Page
"CHECK XM TUNER" is displayed.	• The XM Mini-Tuner is not installed or not fully seated in the XM Mini-Tuner Dock or the XM Mini-Tuner dock is not connected to the AVR-2809CI.	• Confirm the XM Mini-Tuner is fully seated in the dock and check the XM Mini-Tuner dock cable is connected to the AVR-2809CI.	18
"CHECK ANTENNA" is displayed.	• The XM antenna is not connected to the XM Mini-Tuner Dock or the XM antenna cable is damaged.	• Check that the XM antenna is securely connected to the XM Mini-Tuner Dock and check the antenna cable for damage. Replace the XM antenna if the cable is damaged.	18
"NO SIGNAL" is displayed.	• The signal cannot be received.	• Reposition your XM Mini-Tuner and Home Dock antenna.	—
"OFF AIR" is displayed.	• The selected channel is not currently broadcasting.	• Select another channel.	—
Receiving only XM channels 0 and 1.	• The XM Mini-Tuner is not activated.	• Contact XM Radio.	—
"XM ---" is displayed.	• The selected channel is not available. The channel may have been reassigned to a different channel number. This message may occur initially with a new radio or a radio that has not received XM's signal for an extended period.	• Consult the latest channel guide at www.xmradio.com or www.xmradio.ca for the current list of channels. For cases of a new radio or a radio that has not received XM's signal for an extended period, allow the radio to receive the XM satellite signal for at least 5 minutes and then try to select the channel again.	—
"CH UNAVAILABLE" is displayed.	• Channel is not present.	• Select another channel.	—
"CH UNAUTHORIZED" is displayed.	• You selected an XM channel that is blocked or cannot be received with your XM subscription package.	• Consult the latest channel guide at www.xmradio.com or www.xmradio.ca for the current list of channels. For information on receiving this channel, visit www.xmradio.com or www.xmradio.ca contact XM Satellite Radio at 1-800-967-2346 or 1-877-438-9677.	—

[SIRIUS Satellite Radio]

Symptom	Cause	Countermeasure	Page
"CHECK SIRIUS TUNER" is displayed.	• The SiriusConnect Home Tuner unit is not connected.	• Check that the connections are correct.	18
"ANTENNA ERROR" is displayed.	• The antenna is not connected.	• Check that the connections are correct.	18
"NO SIGNAL" is displayed.	• The signal cannot be received.	• Reposition the antenna.	—
"INVALID CHANNEL" is displayed.	• Channel is not present.	• Select another channel.	—
"ACQUIRING SIGNAL" is displayed.	• The signal cannot be received. • Displays while SiriusConnect Home Tuner is connected.	• Reposition your SiriusConnect Home Tuner and Home Dock antenna.	—
"Call SIRIUS" * is displayed.	• Channels are not subscribed to.	• If you subscribe to the channel, you can receive the channel.	—
"SUBSCRIPTION UPDATED" is displayed.	• While updating contract information.	—	—
"Enter Lock Code []" is displayed.	• Selected channels are locked.	• Please insert pass word (4 digits) into "[]".	—

*: After scroll displays "Call 888-539-...." twice, displays "Call SIRIUS".

Specifications

Audio section

Power amplifier

Rated output:

Front (A, B):
115 W + 115 W (8 Ω /ohms, 20 Hz ~ 20 kHz with 0.08 % T.H.D.)
145 W + 145 W (6 Ω /ohms, 1 kHz with 0.7 % T.H.D.)

Center:

115 W (8 Ω /ohms, 20 Hz ~ 20 kHz with 0.08 % T.H.D.)
145 W (6 Ω /ohms, 1 kHz with 0.7 % T.H.D.)

Surround:

115 W + 115 W (8 Ω /ohms, 20 Hz ~ 20 kHz with 0.08 % T.H.D.)
145 W + 145 W (6 Ω /ohms, 1 kHz with 0.7 % T.H.D.)

Surround Back:

115 W + 115 W (8 Ω /ohms, 20 Hz ~ 20 kHz with 0.08 % T.H.D.)
145 W + 145 W (6 Ω /ohms, 1 kHz with 0.7 % T.H.D.)

130 W x 2ch (8 Ω /ohms)

180 W x 2ch (4 Ω /ohms)

Dynamic power:

Output connectors:

Front: A or B 6 ~ 16 Ω /ohms

A + B 8 ~ 16 Ω /ohms

Center, Surround, Surround Back: 6 ~ 16 Ω /ohms

Analog

Input sensitivity / Input impedance:

200 mV / 47 k Ω /kohms

Frequency response:

10 Hz ~ 100 kHz — +1, -3 dB (DIRECT mode)

S/N:

102 dB (IHF-A weighted, DIRECT mode)

Distortion:

0.005 % (20 Hz ~ 20 kHz) (DIRECT mode)

Rated output:

1.2 V

Digital

D/A output:

Rated output — 2 V (at 0 dB playback)

Total harmonic distortion — 0.008 % (1 kHz, at 0 dB)

S/N ratio — 102 dB

Dynamic range — 96 dB

Format — Digital audio interface

Digital input:

Phono equalizer (PHONO input — REC OUT)

Input sensitivity:

2.5 mV

RIAA deviation:

±1 dB (20 Hz to 20 kHz)

S/N:

74 dB (A weighting, with 5 mV input)

Rated output:

150 mV

Distortion factor:

0.03 % (1 kHz, 3 V)

Video section

Standard video connectors

Input / output level and impedance:

1 Vp-p, 75 Ω /ohms

Frequency response:

5 Hz ~ 10 MHz — +0, -3 dB (when video convert set to "OFF")

S-Video connectors

Input / output level and impedance:

Y (brightness) signal — 1 Vp-p, 75 Ω /ohms

C (color) signal — 0.286 Vp-p, 75 Ω /ohms

5 Hz ~ 10 MHz — +0, -3 dB (when video convert set to "OFF")

Frequency response:

Color component video connector

Input / output level and impedance:

Y (brightness) signal — 1 Vp-p, 75 Ω /ohms

P_B / C_B signal — 0.7 Vp-p, 75 Ω /ohms

P_R / C_R signal — 0.7 Vp-p, 75 Ω /ohms

5 Hz ~ 100 MHz — +0, -3 dB (when video convert set to "OFF")

Frequency response:

Tuner section

[FM]

[AM]

(note: μ V at 75 Ω /ohms, 0 dBf = 1×10^{-15} W)

Receiving Range:

87.5 MHz ~ 107.9 MHz

Usable Sensitivity:

1.0 μ V (11.2 dBf)

50 dB Quieting Sensitivity:

MONO 1.6 μ V (15.3 dBf)

STEREO 23 μ V (38.5 dBf)

S/N (IHF-A):

MONO 77 dB

STEREO 72 dB

Total harmonic Distortion (at 1 kHz):

MONO 0.15 %

STEREO 0.3 %

General

Power supply:

AC 120 V, 60 Hz

Power consumption:

6.0 A

0.1 W (Standby)

Maximum external dimensions:

434 (W) x 171 (H) x 414 (D) mm (17-3/32" x 6-47/64" x 16-19/64")

Weight:

12.8 kg (28 lbs 3.5 oz)

Main remote control unit (RC-1102)

Batteries:

LR6/AA type (two batteries)

Maximum external dimensions:

63 (W) x 238 (H) x 31 (D) mm (2-31/64" x 9-3/8" x 1-7/32")

Weight:

190 g (Approx 6.7 oz) (including batteries)

Sub remote control unit (RC-1106)

Batteries:

R03/AAA type (two batteries)

Maximum external dimensions:

54 (W) x 115 (H) x 23 (D) mm (2-1/8" x 4-17/32" x 29/32")

Weight:

80 g (Approx 2.8 oz) (including batteries)

* For purposes of improvement, specifications and design are subject to change without notice.

List of preset codes / Liste de codes pré-régistrés

Denon Amp

Device type	Leading Digit
D Denon	81001 (ID1), 82001 (ID2), 83001 (ID3), 84001 (ID4)

Denon SAT Tuner

D Denon (Sirius Radio)	52271 (ID1), 52272 (ID2), 52273 (ID3), 52274 (ID4)
Denon (XM Radio)	52864 (ID1), 52812 (ID2), 52813 (ID3), 52814 (ID4)

Denon Analog Tuner

D Denon	62863 (ID1), 62275 (ID2), 62276 (ID3), 62277 (ID4)
---------	--

Denon iPod

D Denon	72815 (ID1), 72816 (ID2), 72817 (ID3), 72818 (ID4)
---------	--

Cable Set Top Box ※1

A A-Mark	00008, 00144
ABC	00003, 00008, 00237
Accuphase	00003
Acorn	00237
Action	00237
Active	00237
Aichi Denshi	01512
Americast	00899
Amstrad	01222
Archer	00237
Austar	00276
B BCC	00276
Bell South	00899
Bestlink	00303
Birmingham Cable Communications	00276
British Telecom	00003
C Cable & Wireless	01068
Century	00008
Coship	01462
D Daehan	00778
Daeryung	00008, 01877, 00877, 00477
Digeo	01187
Director	00476
DX Antenna	01500
E Emerson	00303
Encon	00008
F Fosgate	00276

Foxtel	01222
France Telecom	00817
Freebox	01482
G Fujitsu	01497
Galaxi	00008
GE	00144, 00237
Gehua	00476
General Instrument	00003, 00276, 00476
Gibraltar	00003
GNI	01466
GoldStar	00144
H Hitachi	00003, 00008
Hongtian Jiangsu	01462
Hwalin	00303
I Insight	00476
J Jerrold	00003, 00276, 00476
Jiuzhou	01445
K Kabelvision	00003
KNC	00008
LG	00144
L Macab	00817
Maspro	01510
Matav	01082
Melita	00003
Memorex	00000
Mitsubishi	00003
Motorola	00276, 00476, 01187, 01376
MS	00303
N NEC	01436
Noos	00817
Nova Vision	00008
Novaplex	00008
NTL	00003, 00276, 01060, 01068
O Oak	00303
Ono	01068
Optus	00276, 01060
P Pace	00008, 00237, 00877, 01060, 01068, 01577, 01877
Panasonic	00000, 00008, 00144, 01488
Paragon	00000, 00008, 00525
Penney	00000
Philips	00317, 00817, 01305
Pioneer	00144, 00533, 00877, 01500, 01877
Pulsar	00000
PVP Stereo Visual Matrix	00003
Q Quasar	00000
R RadioShack	00303
Regal	00276
Runco	00000

S Sagem	00817
Salora	00000
Samsung	00000, 00003, 00144, 00778, 00840, 01060, 01866, 02015
Scientific Atlanta	00000, 00003, 00008, 00237, 00477, 00877, 01510, 01877
Skyworth	01464
Sony	01006, 01460
Sprucer	00144
Starcom	00003
StarHub	00276
Sumitomo	01500, 01504
Supercable	00276
T Taihan	00778
TCL	01445
Telewest	01068
Time Warner	01877
TongKook	00840
Tox	00003
Toshiba	00000, 01509
Trans PX	00276, 00303
TS	00003, 00303
U United Cable	00003, 00276
US Electronics	00003, 00008, 00276
V Videoway	00000
Visiopass	00817
Z Zenith	00000, 00525, 00899

Cable/PVR Combination ※1

A Americast	00899
D Digeo	01187
F Freebox	01482
M Motorola	01187, 01376
P Pace	00237, 01877
P Pioneer	00877, 01877
S Scientific Atlanta	00877, 01877
Sony	01006
Supercable	00276
T Time Warner	01877
Z Zenith	00899

CD Player ※4

A Acoustic Research	40420
Advantage	40032
Aiwa	40157
Arcam	40157
Audio Research	40157
Audiolab	40157
Audiomeca	40157

Audioton	40157
AVI	40157
B Balanced Audio Technology	40157
Burmester	40420
Bush	40388
C Cairn	40157
California Audio Labs	40029, 40303
Cambridge	40157
Cambridge Audio	40157
Cambridge Soundworks	40157
Carver	40157, 40179
CDC	40420
CEC	40420
Copland	40393
Curtis Mathes	40032
Cyrus	40157
D Denon	40003, 40766, 40873, 42867 * , 42868
DKK	40000
DMX Electronics	40157
Dual	40003
Dynaco	40157
Dynamic Bass	40179
F Fisher	40000, 40179
G Garrard	40393, 40420
Genexxa	40000, 40032, 40037, 40179
Goldmund	40157
Grundig	40157
H Hafler	40173
Hamman/Kardon	40100, 40157, 40173
Hitachi	40032
I Inkel	40157
Integra	40101
J Jerrold	40003
JVC	40032, 40072
K Kenwood	40000, 40028, 40029, 40036, 40037, 40157, 40190, 40681
KLH	41318
Krell	40157
L Linn	40157
Loewe	40157
Luxman	40393
LXI	40179
M Magnavox	40157
Marantz	40029, 40157
Matsui	40157
MCS	40029
Memorex	40000, 40032, 40179, 40420, 40468
Meridian	40157

Micromega	40157
Miro	40000
Mission	40157
Modulaire	40000, 40032, 40087, 40179, 40420, 40468
MTC	40420
Musical Fidelity	40393
Myryad	40157
N NAD	40000, 40721
Naim	40157
NSM	40157
O Onkyo	40101, 40868
Optimus	40000, 40032, 40037, 40087, 40179, 40393, 40420, 40468
Orion	40393
P Panasonic	40029, 40303, 40388, 40752
Parasound	40420
Penney	40029
Philips	40157
Pioneer	40032, 40101, 40468
Polk Audio	40157
Procead	40420
Proton	40157
Q QED	40157
Quad	40157
Quasar	40029
R Radiola	40157
RadioShack	40000, 40032, 40179, 40420, 40468
RCA	40032, 40053, 40179, 40420, 40468
Realistic	40000, 40032, 40087, 40179, 40420, 40468
Restek	40157
Revox	40157
Roksan	40420
Rotel	40157, 40420
Royal	40420
S SAE	40157
Saisho	40000
Sansui	40000, 40157
Sanyo	40000, 40087, 40179
SAST	40157
Sears	40179
Sharp	40037
Siemens	40157
Silsonic	40036
Simaudio	40157
Sonic Frontiers	40157
Sony	40000, 40100, 40185, 40490, 41364
Sugden	40157
Sylvania	40157

T	TAG McLaren	40157
	Tandy	40032
	Tascam	40393, 40420
	Teac	40390, 40420, 40490
	Technics	40029, 40303
	Techwood	40303
	Thomson	40053
	Thorens	40157
	Thule Audio	40157
	Tokai	40420
U	Universum	40053, 40157
V	Victor	40072
W	Wadia	40393
	Wards	40000, 40032, 40053, 40087, 40157, 40179
Y	Yamaha	40032, 40036, 40490, 40868
	Yorx	40000

CD Recorder ※4

D	Denon	40766, 42868
R	RCA	40053, 40420
S	Sony	40000, 40100, 41364
T	Teac	40420
	Thomson	40053

Tape Deck ※3

A	Aiwa	20029, 20197, 20200, 21315
	Akai	20283, 20439
	Arcam	20076
	Audiolab	20029
C	Carver	20029
D	Denon	20076, 20371, 21311, [22471]*
F	Fisher	20074
G	Garrard	20308, 20309, 20375, 20439
	Genexxa	20439
	GoldStar	20375
	Grundig	20029, 20375
H	Harman/Kardon	20029, 20182, 21314
I	Inkel	20070, 20071, 20337
J	JVC	20244, 20273, 20274, 20303, 20304, 20310, 21309
K	Kenwood	20070, 20071, 20092, 20233, 20234, 21364
L	LG	20375
	Luxman	20308, 20309
M	Magnavox	20029
	Marantz	20009, 20029
	Memorex	20099
	Mitsubishi	20283, 20439
	Myryad	20029
O	Onkyo	20135, 20136, 20282

	Optimus	20027, 20220, 20337, 20439
	Orion	20308, 20309
P	Palladium	20375
	Panasonic	20229
	Philips	20029, 20229
	Phonotrend	20337
	Pioneer	20027, 20099, 20109, 20220, 21312
	Polk Audio	20029
R	Radiola	20029
	RCA	20027, 20220
	Revox	20029
S	Sansui	20029, 20009
	Sanyo	20074
	Sharp	20231, 20371
	Sherwood	20337
	Sonic	20375
	Sony	20170, 20234, 20243, 20291, 21313

T	TaeKwang	20439
	Tandberg	20109
	Teac	20280, 20283, 20308, 20309
	Technics	20229
	Technovox	20229
	Thorens	20029
U	Universum	20375, 20439
V	Victor	20244, 20273, 20274
W	Wards	20027, 20029
	Wharfedale	20439
Y	Yamaha	20094, 20097

Video - Accessory ※1

A	ABS	01272
	Accurian	01653
	Alienware	01272
C	CyberPower	01272
D	D-Link	01554
	Dgtec	01363
E	Epson	01563
G	Gateway	01272
H	Hewlett Packard	01267, 01272
	Howard Computers	01272
	HP	01267, 01272
	Hush	01272
I	iBUYPOWER	01272
	Insignia	01415
L	LG	01415
	Linksys	01272, 01365
M	Media Center PC	01272
	Microsoft	01272, 01805
	Mind	01272
	Motorola	01363

N	Niveus Media	01272
	Northgate	01272
P	Packard Bell	01272
	Panasonic	01120
	Philips	01272
	Pioneer	01010
R	Ricavision	01272
S	Samsung	01190, 01490
	Sensory Science	01126
	Sharp	01010
	SMC	01456
	Sony	01272, 01324, 01364
	Stack 9	01272
	Sylvania	01563
	Systemax	01272
T	Tagar Systems	01272
	Toshiba	01272
	Touch	01272
V	Viewsonic	01272, 01329
	Vizio	01126
	Voodoo	01272
X	Xbox	01805
Z	Zenith	01415
	ZT Group	01272

Satellite Set Top Box ※1

A	@sat	01300
	@Sky	01334
	A-Mark	00345
	ABsat	00123, 00713
	ADB	00642, 01259, 01367, 01418, 01473, 01491
	AGS	00710
	Aiwa	01514
	Akai	00200
	Alba	00455, 00713, 01284, 01659, 01811
	Allsat	00200, 01043
	Alltech	00713
	Allvision	01232, 01334, 01412
	AlphaStar	00772
	Amitronica	00713
	Amstrad	00345, 00713, 00795, 00847, 00863, 00882, 01113, 01175, 01693, 01801
	Anglo	00713
	Ankaro	00713
	AntSat	01083
	Apollo	00455
	Apro	01672
	Arcon	01043, 01075
	Armstrong	00200
	Arnion	01300

	Asat	00200
	ASCI	01334
	ASLF	00713
	AssCom	00853
	Astacom	00710
	Aston	00142
	Astra	00713
	Astratec	01743
	Astro	00173, 00658, 01099, 01100, 01113
	Atlantic Telephone	01333
	Atsat	01300
	AtSky	01334
	Audioline	01672
	Aurora	00642, 00879, 01333, 01433
	Austar	00497, 00642, 00863, 00879, 01176, 01259
	Axiel	00710
	Axil	01457, 01659
	Axis	01111
B	B@ytronic	01412
	Base	01718
	Beko	00455
	Bell ExpressVu	00775
	Big Sat	01457
	Black Diamond	01284
	Blaupunkt	00173
	Blue Sky	00713
	Boca	00713, 01232, 01366
	Boston	00710, 01251
	Brainwave	00658, 01672
	British Sky Broadcasting	00847, 01175, 01662, 01847
	Broco	00713
	BskyB	00847, 01175, 01662
	BT	00710, 01296
	Bubu Sat	00713
	Bush	01284, 01645, 01672, 01743, 01811
C	Canal	00853
	Canal Digital	00853, 01622
	Canal Satellite	00853, 01339
	Canal+	00853, 01339
	Centrex	01457
	CGV	01413, 01567
	Chaparral	00216
	Cherokee	00123, 00710
	Chess	00713, 01085, 01334, 01626
	Chili	01718
	CityCom	00299, 00394, 00818, 01075, 01176, 01232
	Classic	01672
	Clatronic	01413
	CNS	01367

	Comag	01232, 01366, 01412, 01413
	Condor	01700
	Conia	01695
	Contec	00394
	Continental Edison	01695
	Coship	01457
	Crossdigital	01109
	Crown	01284
	Cryptovision	00455, 00795
	CS	01631
	Cyfra+	01076
	Cyrus	00200
D	D-box	00723, 00873, 01114
	Daewoo	00713, 01111, 01296, 01743
	Delfa	00863
	Deltasat	01075
	Dgtec	01542, 01631, 01242
	Digenius	00299
	Digitality	01685
	Digifusion	01645, 01743
	Digihome	01284
	DigiLogic	01284
	DigiQuest	00863, 01300, 01457, 01473, 01631
	DigiSat	01232
	Digisky	01457
	DigitAll World	01227
	Digiturk	01076
	Digiwave	01631
	Dijam	01296
	DiPro	01367, 01543
	DirectTV	00099, 00247, 00392, 00566, 00639, 00724, 00749, 00819, 01076, 01108, 01109, 01142, 01377, 01392, 01414, 01442, 01609, 01639, 01640, 01749, 01856
	Discovery	00710
	Dish Network System	00775, 01505, 01775
	Dishpro	00775, 01505, 01775
	Distratel	01283, 01704
	DMT	01075
	DNT	00200
	Draco	01375
	Dream Multimedia	01237
	DSE	01375
	DSTV	00642, 00879, 01433
	Durabrand	01284
	DX Antenna	01530
	Echostar	00455, 00610, 00713, 00775, 00853, 00871, 01086, 01200, 01323, 01409, 01418, 01473, 01505, 01775
E	Edision	01631
	Einhell	00713

Elap	00713, 01567
Elsat	00713
Ehta	00200, 01659
Emme Esse	00871
Energy Sistem	01631
Engel	00713, 01251
EP Sat	00455
Esat	00879
Eurleult	00882
Eurocrypt	00455
EuroLine	01251
Europa	00863
Europhon	00299
Eurosky	00262, 00299
Eurostar	00818
Eutelsat	00713
Expressvu	00775, 01775
F Fenner	00713
Ferguson	00455, 01291, 01743
Finlandia	00455
Finlux	00455
Flair Mate	00713
FMD	01251, 01413, 01457
Force	01101
Fortec Star	01083
Foxtel	00455, 00497, 00795, 00879, 01162, 01176, 01356
Fracapro Planet	00871
Fracarro	00125, 00871
France Telecom	00871
Freesat	00882
FTE	00863
FTEmaximal	00713, 00863
Fuba	00173, 00262, 00299, 00394, 01214, 01251, 01801
Fugionkyo	00125
Funal	01377
G Galaxis	00853, 00863, 01101, 01111, 01557
Gardiner	00818
Garnet	01075
GbsAT	01214
GE	00392, 00566
Gecco	01412
General Instrument	00869
General Satellite	01176
GF Good Friends	01043
GF Star	01043
Globo	01251, 01334, 01412, 01429, 01626
GOD Digital	00200
GOI	00775, 01775
Gold Box	00853
Gold Vision	01631

Golden Interstar	01283
GoldStar	00394
Goodmans	00455, 01284, 01291
Gradiente	00887
Granada	00455
Grandin	01626
Grundig	00173, 00345, 00847, 00853, 00879, 01284, 01291
H Handan	01622
Hanseatic	01099, 01100
Hauppauge	01672
HB	01214, 01801
HDT	01159
Hills	01232
Hirschmann	00125, 00173, 00299, 00710, 00882, 01085, 01111, 01232, 01412
Hisense	01535
Hitachi	00455, 00749, 00819, 01250, 01284, 01518, 01523, 01525
Homecast	01214, 01680, 01700
Hornet	01300
Houston	00775
HTS	00775, 01775
Hughes Network Systems	00749, 01142, 01442, 01749
Humax	00863, 01176, 01225, 01406, 01427, 01675, 01743, 01790, 01915
Huth	01075
Hyundai	01075, 01159
I iCan	01367
ID Digital	01176
ILLUSION sat	01557, 01631
iLo	01535
Imperial	01334, 01429, 01672
Indovision	00856, 00887
Ingelen	00882
Innova	00099
Interstar	01214
InVideo	00871
iSkyB	00887
Italtel	00871
ITT Nokia	00455, 00723, 00873
J Jeweworld	00642
Jaeger	01334
Jerrord	00869
Jiuzhou	01450
JOK	00710
JVC	00775, 01507, 01531, 01775
K K-SAT	00713
Kamm	00713
Kaon	01300
KaTelco	01111

Kathrein	00123, 00173, 00200, 00249, 00394, 00442, 00480, 00504, 00658, 00713, 00818, 01221, 01416, 01561, 01567
K Kennex	00125
Kenwood	00853
Klap	00710
Kocmoc TB	01333
Koscom	01043
Kosmos	00442, 01333
Kreiling	00249, 00658, 01626
Kreismeyer	00173
Kross	01695
L L&S Electronic	01043, 01334
Labgear	01296
LaSAT	00173, 00299
Lava	01631
Legend	01718
Legrand	01718
Lemon	01334
Lenco	00713
Lenox	01611
LG	01075, 01414
Lifesat	00299, 00713, 01043
Listo	01626
Lodos	01284
Logik	01284
Logix	01075
Lorenzen	00299
Luxor	00345, 00873
M M Electronic	00818
M vision	01557
Magnavox	00722, 00724
Manata	00710, 00713
Manhattan	00455, 00710, 01083
Marantz	00200
Maspro	00173, 00713, 01530
Master's	00394
Matsui	00173, 00710, 01284, 01743
Maximum	01075, 01334, 01685
McIntosh	00889
MDS	01225
Mediabox	00853
Mediacom	01206
MediaSat	00853, 01333
Medion	00299, 00713, 01043, 01075, 01232, 01334, 01412, 01626
Medison	00713
Mega	00200
Memorex	00724
Metronic	00713, 00818, 01283, 01334, 01375, 01704
Metz	00173
MICO	01811

Micro	00713
Micro Elektronik	00713
Micro Technology	00713
Micromaxx	00299
Microstar	01075
Microtec	00713
Mitsubishi	00455, 00749
Morgan's	00200, 00713, 01232, 01412
Motorola	00856, 00869, 01473
MTEC	01214
Muller	01695
Multibroadcast	00642, 00879
Multichoice	00642, 00879, 01333, 01433
Mx Onda	01659
Myriad	00200
Mysat	00713
MySky	01693, 01848, 01850
N NEC	01519
NEOTON	01334
Netgem	01322
Netsat	00099, 00887
Neuf TV	01322
Neuhaus	00713
Neuling	01232
Neusat	00713
Nevir	01659
Next Level	00869
Nikko	00200, 00713, 00723
Noda Electronic	01704
Nokia	00455, 00723, 00853, 00873, 01023, 01223, 01723
Nordmende	00455, 01611
O OctalTV	01505
Okano	00442
Omega	00887
Opentel	01232, 01412
Optex	00394, 00713, 01043, 01283, 01611, 01626
Optimus	00724
Optus	00879, 01356
Orbis	01232, 01334, 01412
Orbitech	01099, 01100
Origo	00497
OSAT	00345
P P/Sat	01232
Pace	00200, 00329, 00455, 00497, 00795, 00847, 00853, 00887, 01175, 01323, 01356, 01423, 01693, 01717, 01848, 01850
Pacific	01284, 01375
Packard Bell	01111
Packsat	00710
Palcom	00299, 01409
Panarex	01159

Panasat	00615, 00879, 01333, 01433
Panasonic	00247, 00455, 00701, 00847, 01304, 01404, 01508, 01526, 01527
Panda	00173, 00455
Pansat	01159
Patriot	00710
Paysat	00724
peeKTon	01457
Philips	00099, 00133, 00173, 00200, 00455, 00710, 00722, 00724, 00749, 00775, 00818, 00819, 00847, 00853, 01076, 01114, 01142, 01339, 01442, 01543, 01672, 01743, 01749
Phonotrend	00863, 01200
Pilotime	01339
Pino	01334
Pioneer	00329, 00853, 01308
Planet	00871
Plasmatic	00442
PMB	00713, 01611
Polytron	00394
Portland	01296
Preisner	00262, 01101, 01113, 01366
Premier	00723, 00853, 00873, 01429
Prima	00795
Primacom	01111
Primestar	00869
Profile	00710
Proline	01659
Promax	00455
Proscan	00392, 00566
Proton	01535
Q QNS	01367, 01402, 01404
Quadral	00710
Quelle	00299
R Radiola	00200
RadioShack	00566, 00775, 00869
Radix	00394, 00882, 01113, 01317
RCA	00143, 00392, 00566, 00775, 00855, 01142, 01291, 01392, 01442
Rebox	01214
Regal	01251
RFT	00200
Roadstar	00713, 00853
Rollmaster	01413
Rover	00713
Rownsonic	01567
S SAB	01251
Saba	00710, 00820
Sabre	00455
Sagem	00820, 01114, 01253, 01307, 01339, 01690

Samsung	00853, 00863, 01108, 01109, 01142, 01206, 01276, 01377, 01442, 01458, 01570, 01609, 01700, 01916
Sat Control	01300
Sat Team	00713
SAT+	01409
Satec	00713
Satelco	01232
Satplus	01100
Satstation	01083
SatyCon	01631
Schaub Lorenz	01214
Schneider	00710, 01206, 01251
Schwaiger	00394, 00504, 00863, 01075, 01083, 01111, 01317, 01334, 01412, 01457
SCS	00299
Sedea Electronique	00125, 01206, 01283, 01626
SEG	01075, 01087, 01251, 01626
Seleco	00871
Septimo	01375
Serd	01412
Serino	00610
Servimat	01611
ServiSat	00713, 01251
Siemens	00173, 01334, 01429
Silva	00299
Skantin	00713
SKR	00713
SKY	00099, 00847, 00856, 00887, 01014, 01175, 01662, 01693, 01847, 01848, 01850
SKY Italia	00853, 01693, 01847, 01848
Sky Television	01014
Sky XL	01251, 01412
Sky+	01175
Skymaster	00713, 01075, 01085, 01200, 01334, 01409, 01567, 01611
Skymax	00200
Skyplus	01232, 01334, 01412
SkySat	00713
Skyvision	01334
SL	00299, 01672
SM Electronic	00713, 01200, 01409
Smart	00713, 00882, 01101, 01113, 01232, 01404, 01413, 01631
Sony	00455, 00639, 00847, 00853, 01524, 01558, 01639, 01640
Star	00887
Star Choice	00869
Star Trak	00772, 00869
Starland	00713
Starlite	00200
Stream	01847, 01848

Strong	00125, 00713, 00820, 00853, 00879, 01159, 01284, 01300, 01409, 01626
Sunkai	00123
Sunny	01300
Sunsat	00713
Sunstar	00642
Supernova	00887
Supratech	01413
SVA	01455
Systec	01334
Tantec	00455
Tarbs	01225
Tatung	00455
TBoston	01659
Teac	01225, 01227, 01251, 01322
Tecatel	01200
TechniSat	00262, 00455, 00863, 01099, 01100, 01195, 01197, 01322
Technomate	01283, 01610
Technosonic	01672
Technotrend	01429
Techwood	01284, 01626
TELE System	01251, 01409, 01611, 01801
Teleciel	01043
TeleClub	01367
Telefunken	00710
Teleka	00262, 00442
Telestar	01099, 01100, 01251, 01334, 01610, 01626
Telesystem	01801
Televés	00455, 01214, 01300, 01334
Televisa	00887
Telewire	01232
Tevion	00713, 01409, 01622, 01672
Thomson	00392, 00455, 00566, 00710, 00713, 00820, 00847, 00853, 01046, 01175, 01291, 01339, 01534, 01543, 01662
Thorn	00455
Tiny	01672
Tioko	00394
Tividi	01429
Tivo	01142, 01442
Tokai	00200
Tonna	00455, 00713, 01611
Topfield	01206, 01208, 01545, 01783
Toshiba	00455, 00749, 00790, 01284, 01285, 01501, 01516, 01530, 01749
TPS	00820, 01253, 01307
Triax	00200, 00713, 00853, 01113, 01227, 01251, 01291, 01296, 01611, 01626
Trio	01075
TT-micro	01429

Turnsat	00713
Twinner	00713, 01611
UEC	00879, 01162, 01333, 01356
UltimateTV	01392, 01640
Uniden	00722, 00724
Unisat	00200
United	01251
Universum	00173, 00299, 01087, 01099, 01251
US Digital	01535
USDTV	01535
Variosat	00173
Ventana	00200
Vestel	01251
VH Sat	00299
Viasat	01682
ViewSat	01232
Visionic	00125, 01283
VisionNet	01557
Visiosat	00142, 00710, 00713, 01413, 01457, 01718
Viva	00856
Vivid	01162
Voom	00869
VTech	00818
Wavelength	01232, 01413
Wewa	00455
Wharfedale	01284
Winbox	01801
Wintel	00299
Wisi	00173, 00299, 00455
Worldsat	00123, 00710, 01214, 01251, 01543
Xcom	00123
XMS	01075
Xsat	00123, 00713, 00847, 01214, 01323
Xtreme	01300
Yakumo	01413
Yamada	01718
Yes	00887
Zehnder	00394, 00504, 00818, 01075, 01232, 01251, 01334, 01412, 01413
Zenith	00856, 01856
Zeta Technology	00200
Zodiac	01801

SAT/PVR Combination ※1

A @sat	01300
Allvision	01412
Amstrad	01175
Atsat	01300
B B@ytronic	01412

Bell ExpressVu	00775
British Sky Broadcasting	01175
BskyB	01175, 01662
Bush	01645
Canal Satellite	01339
Comag	01412
Digifusion	01645
DigiQuest	01300
Digiturk	01076
DirecTV	00099, 00392, 00639, 01076, 01142, 01377, 01392, 01442, 01640
Dish Network System	00775, 01505
Dishpro	00775, 01505
DMT	01075
Dream Multimedia	01237
Echostar	00610, 00775, 01505
Expressvu	00775
Foxtel	01356
GbSAT	01214
Gecco	01412
Globo	01412
HDT	01159
Hirschmann	01412
Homecast	01680
Hughes Network Systems	01142, 01442
Humax	01176, 01427, 01675
Huth	01075
Hyundai	01075, 01159
Kaon	01300
Kathrein	00249, 00658, 01221, 01561
LG	01075
Maximum	01334
Mediacom	01206
Medion	01412
Microstar	01075
Morgan's	01412
Motorola	00869
MTEC	01214
Multichoice	01333
MySky	01693, 01848, 01850
NEOTION	01334
Nokia	01023
Opentel	01412
Orbis	01412
Pace	01175, 01356, 01423, 01850
Panasonic	01304
Philips	00099, 01142, 01442
Pilotime	01339
Proscan	00392
Radix	01317

RCA	01392
Rebox	01214
Sagem	01253, 01307
Samsung	01206, 01442, 01570, 01609
Sat Control	01300
Schneider	01206
Schwaiger	01075, 01412
Sedea Electronique	01206
Serd	01412
SKY	01175, 01693, 01848, 01850
SKY Italia	01848
Sky XL	01412
Skymaster	01075
Skyplus	01334, 01412
Sony	00639, 01640
Star Choice	00869
Strong	01300
Sunny	01300
TechniSat	01195, 01197
Thomson	01175, 01534, 01662
Tivo	01142, 01442
Topfield	01206, 01783
TPS	01253, 01307
Xtreme	01300
Zehnder	01075, 01412

SAT/PVR Combination ※3

D DirecTV	20739
H Hughes Network Systems	20739
P Philips	20739
S Samsung	20739
T Tivo	20739

Television ※2

I 888	10264
A A-Mark	10009, 10047, 10054
A.R. Systems	10037, 10352, 10374, 10455, 10556
Accent	10009, 10037
Accuscan	10047
Accuscreen	10001
Acoustic Research	11269
Acoustic Solutions	11523
Action	10030, 10650
Acura	10009
Addison	10092, 10108, 10653
ADL	11217
Admiral	10017, 10047, 10051, 10054, 10093, 10163, 10180, 10264, 10418, 10463
Advent	10761, 10783, 10815, 10817, 10842, 10876, 11933

Adventuri	10000
Adyson	10217
AEG	11163, 11556
Agashi	10217, 10264
Agnia	10150
Aiko	10009, 10035, 10037, 10092, 10217, 10264, 10361, 10371, 10433
Aim	10037, 10455, 10706, 10805
Aiwa	10264, 10701, 11904, 11911
Akai	10000, 10009, 10030, 10035, 10037, 10060, 10145, 10163, 10178, 10208, 10217, 10218, 10264, 10361, 10371, 10433, 10480, 10548, 10556, 10602, 10606, 10631, 10648, 10672, 10702, 10714, 10715, 10812, 11207, 11537, 11675, 11676, 11903
Akashi	10009, 10860
Akiba	10037, 10218, 10455
Akira	10418
Akito	10037
Akura	10009, 10037, 10163, 10171, 10218, 10264, 10668, 10714, 11037, 11498, 11556, 11982
Alaron	10170
Alba	10009, 10036, 10037, 10073, 10163, 10218, 10352, 10370, 10371, 10418, 10443, 10487, 10668, 10714, 11037
Albatron	10700, 10843
Alfide	10672
All-Tel	10865, 11269
Alleron	10030, 10170
Allorgan	10217
Allstar	10037
Ambassador	10150
America Action	10180
American High	10000, 10060
Amplivision	10217, 10370
Amstrad	10000, 10009, 10011, 10037, 10163, 10171, 10218, 10264, 10362, 10371, 10433, 10648, 11037, 11982
Amtron	10000, 10180
Anam	10009, 10037, 10180, 10250, 10700, 10881
Anam National	10037, 10250, 10650
Andersson	11149, 11163
Anglo	10009, 10264
Anhua	10051
Anitech	10009, 10037, 10264
Ansonic	10009, 10037, 10163, 10370, 10374, 10668
AOC	10009, 10030, 10060, 10092, 10093, 10108, 10178, 10180, 10451
Aolimpik	10264
Apex Digital	10156, 10748, 10765, 10767, 10879, 11217, 11943

AR	10352, 10556
Arc En Ciel	10109
Arcam	10217
Ardem	10037, 10714
Aristocrat	10163
Aristona	10037, 10556
ART	11037
Arthur Martin	10163
ASA	10070, 10346
Asberg	10037
Asora	10009
Astra	10037
Asuka	10217, 10218, 10264
ATD	10698
Atlantic	10001, 10037
Atori	10009
Auchan	10163
Audinac	10180
Audiosonic	10009, 10037, 10109, 10217, 10218, 10264, 10370, 10374, 10486, 10714, 10715, 10820, 10865
Audioton	10217, 10264, 10370, 10486
Audiovox	10092, 10180, 10451, 10623, 10802, 10875, 11937, 11951, 11952
Audioworld	10698
Aumark	10060
Autovox	10217
Aventura	10171
AVP	10000
Awa	10009, 10011, 10036, 10108, 10217, 10264, 10374, 10451, 10606
Axon	11937, 11958
Axxent	10009
Baier	10876
Baihe	10009, 10264
Baile	10001, 10009, 10374, 10661
Baird	10037, 10073, 10109, 10208, 10217, 10343, 11196
Bang & Olufsen	10565
Baohuashi	10264
Baosheng	10009, 10817
Barco	10163, 10556
Basic Line	10009, 10037, 10163, 10217, 10218, 10374, 10455, 10556, 10668, 11037, 11163
Bastide	10217
Bauer	10805
Baumann Meyer	11267
Baur	10037, 10195, 10361, 10455, 10512
Baysonic	10180
Bazin	10217
Beaumont	10017, 10030, 10178

Beijing	10001, 10009, 10208, 10226, 10264, 10374, 10661, 10812, 10817, 10821
Beko	10037, 10195, 10370, 10418, 10486, 10606, 10714, 10715, 10808, 11037
Belcor	10030
Bell & Howell	10017, 10057, 10093, 10154
Belson	10698
Belstar	11037
BenQ	11032, 11756
Beon	10037, 10163, 10218, 10418
Berthen	10668
Best	10370
Bestar	10037, 10370, 10374
Bestar-Daewoo	10374
Binatone	10217
Black Diamond	10614, 10820, 10821, 11037, 11163, 11909
Blackway	10218
Blaupunkt	10036, 10170, 10195, 10200, 10327, 10455
Blue Sky	10037, 10218, 10455, 10487, 10499, 10556, 10668, 10714, 10715, 11037, 11363
Boots	10009, 10217
BPL	10037, 10208
Bradford	10180
Brandt	10109, 10287, 10335, 10560, 10625, 10714
Brinkmann	10037, 10418, 10486, 10668
Brionvega	10037, 10362
Britannia	10217
Brockwood	10030, 10178
Broksonic	10180, 10236, 10463, 11911, 11938
Brother	10264
BSR	10163
BTC	10218
Bush	10009, 10036, 10037, 10163, 10208, 10217, 10218, 10264, 10335, 10361, 10371, 10374, 10487, 10556, 10614, 10661, 10668, 10698, 10714, 10778, 11037, 11556, 11900, 11982
Caihong	10009, 10817
Cailing	10748
Candle	10030
Canton	10218
Capehart	10017, 10030, 10036, 10092, 10178
Capetronic	10030
Capsonic	10264
Carad	10610, 10668, 11037
Carena	10037, 10455
Carnivale	10030
Carrefour	10036, 10037, 10070
Carver	10054, 10170
Cascade	10009, 10037

Casio	10037
Cathay	10037, 10218
CCE	10037, 10217
Celebrity	10000
Celera	10765
Celestial	10767, 10819, 10820, 10821
Centrex	10780
Centrum	11037
Centurion	10037
CGE	10074, 10163, 10370, 10418
Changcheng	10001, 10009, 10051, 10264, 10374, 10661, 10817
Changfei	10009, 10374, 10817
Changfeng	10264, 10817
Changhai	10009, 10817
Changhong	10009, 10156, 10264, 10508, 10765, 10767, 10783, 10817, 10819, 10820, 10821, 11008, 11156
Chengdu	10009, 10817
Ching Tai	10009, 10092
Chun Yun	10000, 10009, 10092, 10180, 10700, 10843
Chunfeng	10009, 10264
Chung Hsin	10036, 10053, 10108, 10180
Chunsun	10009, 10817
Cimline	10009, 10218
Cinema	10672
Cineral	10092, 10451
Cinex	10648, 11556
Citek	10047
Citizen	10000, 10001, 10030, 10035, 10054, 10060, 10092, 10171, 10180, 10451, 10463
City	10009
Clarion	10180
Clarivox	10037, 10070, 10418
Classic	10030, 10092, 10499
Clatronic	10009, 10037, 10217, 10218, 10264, 10370, 10371, 10714
Clayton	11037
CMS Hightec	10217
Colortyme	10017, 10030, 10047, 10054, 10060, 10178
Commercial Solutions	10047, 11447
Concorde	10009
Condor	10009, 10037, 10264, 10370, 10418
Conia	10820, 10821, 11498
Conic	10178
Conrac	10808
Conrowa	10009, 10145, 10156, 10264, 10698, 11156
Contec	10009, 10036, 10037, 10180
Continental Edison	10109, 10287, 10487
Cosmel	10009, 10037
Craig	10171, 10180

Crosley	10000, 10030, 10054, 10074, 10163, 10171, 10180, 10370
Crown	10009, 10037, 10053, 10093, 10180, 10208, 10370, 10418, 10486, 10487, 10606, 10672, 10712, 10714, 10715, 11037
Crown Mustang	10672
CS Electronics	10218
CTX	11756
Curtis Mathes	10000, 10030, 10035, 10037, 10047, 10051, 10054, 10060, 10093, 10145, 10154, 10166, 10178, 10180, 10451, 10702, 11147, 11347
CXC	10180
Cybertron	10218
Cytronix	11298
D-Vision	10037, 10556, 11982
Daewoo	10009, 10030, 10036, 10037, 10092, 10108, 10109, 10154, 10170, 10178, 10180, 10217, 10218, 10264, 10374, 10451, 10499, 10556, 10623, 10634, 10661, 10672, 10700, 10778, 10860, 10865, 10876, 10880, 11661, 11755, 11756, 11909
Dainichi	10218
Daitsu	11267
Dansai	10009, 10035, 10036, 10037, 10208, 10217
Dantax	10370, 10486, 10714, 10715
Datsura	10208
Dawa	10009, 10037
Daytek	10672, 11207
Dayton	10009, 10092, 11207
Daytron	10009, 10030, 10036, 10037, 10092, 10178, 10180, 10374
Dayu	10374, 10661
De Graaf	10163, 10208, 10548
Decca	10037, 10217
Degraff	10163, 10208
Deitron	10374
Dell	11080
Denko	10264
Denon	10145, 10511
Denver	10037, 10597
Desmet	10009, 10037
Diamant	10037
Diamond	10009, 10371, 10672, 10698, 10706, 10820, 10860
Digatron	10037
Digihome	11149
Digiline	10037, 10668
Digital Life	10872
Digitex	10820
Digitor	10037
Digix Media	10880
Dixi	10009, 10037, 10217
DL	10587, 10780, 10872, 11363

Domeos	10668
Domland	10394
Dongda	10009
Donghai	10009
Dream Vision	11164
DSE	10698, 10820, 11556
DTS	10009
Dual	10037, 10217, 10343, 10352, 10394, 10778, 11037, 11137, 11149
Dual Tec	10217
Dumont	10017, 10070, 10178, 10180, 10217
Durabrand	10171, 10178, 10180, 10463, 10334, 11463
Dux	10037
Dwin	10093
Dynatech	10217
Dynatron	10037
Dynex	11463
Easy Living	11248
Eaton	10060
Ecco	10773
ECE	10037
Edison-Minerva	10487
Elbe	10037, 10217, 10218, 10362, 10610
Elcit	10163
Electroband	10000
Electrograph	11755
Electrohome	10000, 10030, 10073, 10150, 10154, 10178, 10463
Elekta	10009, 10264
Efunk	11037, 11208
ELG	10037
Elin	10009, 10037, 10361, 10548
Elite	10037, 10218
Elta	10009, 10264
Emerald	10178
Emerson	10017, 10036, 10037, 10047, 10070, 10073, 10150, 10154, 10170, 10171, 10178, 10180, 10195, 10236, 10361, 10370, 10371, 10451, 10463, 10486, 10623, 10668, 10714, 11909, 11911, 11944
Envision	10030, 10813
Enzer	10860
Erae	11371
Erres	10037
ESA	10171, 10812, 11944
ESC	10037, 10217
Ether	10009, 10030
Etron	10001, 10009, 10163, 10820
Eurofeel	10217, 10264
Euroman	10037, 10217, 10264, 10370
Europa	10037

Europhon	10037, 10109, 10217
Evesham	11248
Evolution	11756
Expert	10163
Exquisit	10037
Feilang	10009
Feilu	10009, 10817
Feiyan	10264
Feliyue	10009, 10817
Fenner	10009, 10374
Fer0	10335
Ferguson	10037, 10053, 10073, 10109, 10195, 10287, 10335, 10343, 10443, 10548, 10560, 10625, 11037
Fidelity	10037, 10163, 10171, 10217, 10264, 10361, 10371, 10512
Filsai	10217
Finlandia	10163, 10208, 10346, 10361, 10548
Finlux	10037, 10070, 10163, 10217, 10346, 10480, 10556, 10631, 10714, 10715, 10808, 11556
Firstar	10009, 10236
Firstline	10009, 10037, 10208, 10217, 10361, 10374, 10556, 10668, 10714, 10808, 11037, 11363, 11371
Fisher	10000, 10036, 10047, 10054, 10154, 10208, 10217, 10361, 10370
Flint	10037, 10218, 10264, 10455, 10610
Force	11149
Formenti	10037, 10163
Fortress	10093
Fraba	10037, 10370
Friac	10009, 10037, 10370, 10499, 10610
Frontech	10009, 10163, 10217, 10264
Fujimaro	10865, 11498
Fujitsu	10009, 10217, 10352, 10683, 10809, 10853
Fujitsu General	10009, 10217, 10683
Fujitsu Siemens	10808, 10809, 11163, 11298
Funai	10000, 10171, 10180, 10264, 10668, 11271, 11904
Furi	10145, 10264, 10817
Furichi	10860
Futronic	10264, 10860
Futurtech	10180
Galaxi	10037
Galaxis	10037, 10370
Ganxin	10817
Gateway	11755, 11756
GBC	10009, 10163, 10218, 10374
GE	10000, 10030, 10035, 10047, 10051, 10060, 10092, 10093, 10178, 10180, 10335, 10451, 10560, 10625, 11147, 11347, 11447, 11454, 11917, 11922

GEC	10037, 10163, 10217, 10361
Geloso	10009, 10163, 10374
Gemini	10047
General	10109, 10287
General Technic	10009
Genesis	10009, 10037
Genexxa	10009, 10037, 10163, 10218
Gericom	10808, 10865, 10880, 11217, 11298
Gevalt	11371
Giant	10009, 10217
Gibraltar	10000, 10017, 10030
Go Video	10060, 10886
Go Vision	11937
Goldfunk	10668
GoldStar	10001, 10009, 10030, 10036, 10037, 10047, 10054, 10073, 10109, 10154, 10163, 10178, 10217, 10361, 10455, 10606, 10714, 10715
Gooding	10487
Goodmans	10000, 10009, 10011, 10035, 10036, 10037, 10217, 10218, 10264, 10335, 10343, 10371, 10374, 10480, 10487, 10499, 10556, 10560, 10587, 10625, 10634, 10661, 10668, 10714, 10809, 10880, 11037, 11163, 11900, 11909
Gorenje	10370
GPM	10218
Gradiente	10037, 10053, 10170
Gratz	10163, 10361, 10371, 10487, 10714, 11163
Gran Prix	10648
Granada	10036, 10037, 10108, 10163, 10208, 10217, 10226, 10343, 10548, 10560
Grandin	10009, 10037, 10163, 10218, 10374, 10455, 10610, 10668, 10714, 10715, 10865, 10880, 11037, 11298
Gronic	10217
Grundig	10009, 10036, 10037, 10070, 10163, 10195, 10443, 10487, 10556, 10587, 10672, 10683, 10706, 11371
Grundy	10180, 10195
Grunkel	11163
Grunpy	10180
GVA	11363
H & B	10808
Haaz	10706
Haier	10037, 10508, 10587, 10698, 11017, 11034
Haihong	10009
Haiyan	10264, 10817
Halifax	10217, 10264
Hallmark	10178, 10180, 10236
Hampton	10217

Hanimex	10218
Hankook	10030, 10178, 10180
Hanseatic	10009, 10037, 10217, 10361, 10370, 10394, 10499, 10556, 10634, 10661, 10714, 10808
Hantarex	10009, 10037, 10865
Hantor	10037
Harley Davidson	10000, 10030, 10060, 10178, 10180, 11904
Harman/Kardon	10054
Harsper	10865
Harvard	10180
Harwa	10773, 11196, 11269
Harwood	10009, 10037, 10487
Hauppauge	10037
Havermy	10093
HCM	10009, 10037, 10217, 10218, 10264, 10418
Heathkit	10017
Helios	10865
Hello Kitty	10451
Hema	10009, 10217
Hewlett Packard	11494, 11502
Hifivox	10109
Highline	10037, 10264
Hikona	10218
Hikone	10218
Hinari	10009, 10036, 10037, 10163, 10208, 10218, 10264, 10352, 10443
Hisawa	10218, 10455, 10610, 10714
Hisense	10009, 10145, 10156, 10208, 10508, 10556, 10748, 10780, 10821, 10860, 11022, 11156, 11208, 11363
Hitachi	10000, 10009, 10017, 10030, 10035, 10036, 10037, 10047, 10051, 10054, 10092, 10108, 10109, 10145, 10150, 10156, 10163, 10178, 10217, 10343, 10480, 10481, 10499, 10508, 10548, 10578, 10634, 10744, 10877, 11037, 11137, 11145, 11149, 1156, 11225, 11256, 11576, 11904, 11960
Hitachi Fujian	10150, 10108, 10860
Hitec	10698
Hitsu	10009, 10218, 10455, 10610
Hoehner	10714, 10865, 11163, 11556
Home Electronics	10606
Hongmei	10009, 10093, 10264, 10817
Hongyan	10264, 10817
Hornbyphon	10037
Hoshai	10218, 10455
HP	11494, 11502
Hua Tun	10009
Huafa	10009, 10145
Huanghaimei	10009
Huanghe	10009, 10817

Huanglong	10009
Huangshan	10009, 10264, 10817
Huanyu	10217, 10264, 10374, 10817
Huaqiang	10264
Huari	10145, 10264
Hugoson	11217
Huodateji	10051
Hygashi	10217
Hyper	10009, 10217
Hypersonic	10361
Hypson	10037, 10217, 10264, 10455, 10486, 10556, 10668, 10714, 10715, 11037
Hyundai	10778, 10849, 10860, 10865, 10876, 11556
Iberia	10037
ICE	10037, 10217, 10218, 10264, 10371
ICeS	10218
Iiyama	10877, 11217
Ima	10178, 10180, 10236
Imperial	10037, 10074, 10370, 10418
Imperial Crown	10001, 10009, 10264, 10374, 10661
Indiana	10037
Infinity	10054
Infocus	11164
Ingelen	10163, 10487, 10610, 10714
Ingersol	10009
Inno Hit	10009, 10217, 10218, 11163
Innova	10037
Innowert	10865, 11298
Inotech	10773, 10820
Insignia	10171, 11517
Inteq	10017, 10145
Interbuy	10009, 10037, 10264
Interfunk	10037, 10109, 10163, 10200, 10327, 10361, 10512
Internal	10037, 11909
Intervision	10009, 10037, 10217, 10218, 10264, 10394, 10455, 10486, 10487
Irradio	10009, 10037, 10218, 10371
Isukai	10037, 10218, 10455
ITC	10217
ITS	10037, 10218, 10264, 10371
ITT	10163, 10208, 10346, 10361, 10480, 10548, 10610
ITT Nokia	10070, 10163, 10195, 10208, 10346, 10361, 10480, 10548, 10606, 10610
ITV	10037, 10264, 10374
IX	10877
JBL	10054
JCB	10000
JDV	11982
Jean	10009, 10036, 10051, 10092, 10156, 10236

JEC	10035
Jensen	10761, 10815, 10817, 11933
Jiahua	10051
JiaLiCai	10009, 10264
JIL	10030
Jinfeng	10051, 10208, 10226, 10817
Jinque	10009, 10264, 10817
Jinta	10009, 10264
Jinxing	10009, 10037, 10054, 10145, 10156, 10264, 10556, 10698, 10817, 10821, 11011
JMB	10443, 10499, 10556, 10634
JNC	10876
Jocel	10712
Johnson	10455
Jubilee	10556
Juhua	10264, 10817
Jutan	10030
JVC	10030, 10036, 10053, 10054, 10070, 10093, 10218, 10371, 10418, 10463, 10508, 10606, 10650, 10653, 10683, 10731, 11253, 11923
Kaige	10009, 10264, 10817
Kaisui	10009, 10037, 10217, 10218, 10455
Kambrook	10217
Kamp	10017, 10180, 10217
Kangli	10001, 10009, 10264, 10374, 10661, 10817
Kangyi	10009, 10264
Kapsch	10163, 10361
Karcher	10264, 10370, 10606, 10610, 10714, 10778, 11556
Kathrein	10556
Kawa	10371
Kawasho	10030
KB Aristocrat	10163
KDS	11498
KEC	10060, 10180
Kendo	10037, 10362, 10370, 10610, 10648, 11037
Kennedy	10163
Kennex	10668, 11037
Kenwood	10030, 10180
Khind	10706
KIC	10217
Kiota	10001, 10371, 10455
Kloto	10556, 10706
Kiton	10037, 10668
KLH	10156, 10180, 10765, 10767, 11962
KLL	10037
Kloss	10030
Kneissel	10037, 10362, 10370, 10374, 10499, 10556, 10610
Kotin	10036, 10053, 10108, 10150, 10180, 11240, 11331, 11610

Kolster	10037, 10218
Kongque	10009, 10264, 10817
Konichi	10009
Konig	10037
Konka	10037, 10180, 10218, 10371, 10418, 10587, 10641, 10714, 10817, 11084
Kontakt	10487
Korpel	10037
Korting	10370
Kosmos	10037
Kotron	11900
Koyoda	10009
Kreisen	10876
KTV	10030, 10180, 10217, 10463
Kuaile	10009, 10264
Kulun	10009
Kunlun	10051, 10208, 10226, 10264, 10374, 10661, 10817
Kyoshu	10418
Kyoto	10163, 10217
L&S Electronic	10714, 10808, 10865
Lark	10154
LaSAT	10486
Lavis	11037
Leader	10009
Lecson	10037
Legend	10009
Lenco	10037, 10374, 10587
Lenoir	10009
Lexsor	11196
Leyco	10037, 10264
LG	10001, 10009, 10030, 10037, 10054, 10060, 10108, 10109, 10163, 10178, 10217, 10361, 10370, 10556, 10698, 10700, 10714, 10715, 10856, 11265, 11637
Liesenk & Tter	10037
Liesenkotter	10037, 10327
Lifetec	10009, 10037, 10218, 10374, 10668, 10683, 10714, 11037, 11137
Lihua	10817
Lloyd's	10001, 10009, 10030, 10180, 10236, 11904
Local India TV	10009, 10208, 10602
Local Malaysia TV	10698
Lodds	11037, 11149
Loewe	10037, 10370, 10512, 10633, 10790
Logik	10001, 10009, 10011, 10060, 10180, 10236, 10371, 10698, 10773, 10880, 11037, 11217
Logix	10668
Longjiang	10264, 10817
Luker	11982

M Electronic

Luma	10009, 10163, 10362, 10374, 11037
Lumatron	10037, 10073, 10163, 10217, 10264, 10361, 10556
Lux May	10009, 10037
Luxor	10163, 10208, 10217, 10346, 10361, 10480, 10548, 10631, 11037, 11163
LXI	10000, 10001, 10017, 10030, 10035, 10036, 10037, 10047, 10051, 10053, 10054, 10060, 10093, 10154, 10156, 10166, 10171, 10178, 10208
M	10009, 10037, 10109, 10163, 10195, 10217, 10287, 10343, 10346, 10361, 10374, 10480, 10512, 10634, 10661, 10714
Madison	10037
MAG	11498
Magnadyne	10054, 10163
Magnafon	10073
Magnasonic	10000, 10030, 10054, 10092, 10093, 10109, 10156
Magnavox	10000, 10011, 10030, 10035, 10036, 10037, 10047, 10051, 10054, 10060, 10092, 10154, 10171, 10180, 10250, 10706, 10780, 10802, 11254, 11454, 11755, 11904, 11944
Magnum	10037, 10648, 10714, 10715
Majestic	10017
Mandor	10264
Manesth	10035, 10037, 10217, 10264
Manhattan	10037, 10668, 10778, 10876, 11037, 11267
Marantz	10030, 10037, 10054, 10556, 10704, 10855, 11454
Mark	10009, 10037, 10217, 10374, 10714, 10715
Master's	10499
Mastro	10053, 10698, 10706, 10780, 11556
Masuda	10009, 10037, 10217, 10218, 10264, 10371
Matsui	10009, 10011, 10035, 10036, 10037, 10163, 10195, 10208, 10217, 10335, 10352, 10371, 10433, 10443, 10455, 10487, 10556, 10714, 10744, 11037
Matsushita	10051, 10250, 10650
Maxdorf	10773
Maxent	11755, 11756
Maxim	11556, 11982
MCE	10009
Meck	10698
Mediator	10037, 10556
Medion	10037, 10512, 10556, 10668, 10698, 10714, 10808, 10880, 11037, 11137, 11248, 11900
Megapower	10700
Megas	10610
Megatron	10009, 10047, 10145, 10178
MEI	11037

Meile	10264, 10817
Memorex	10009, 10030, 10035, 10037, 10060, 10150, 10154, 10178, 10180, 10195, 10250, 10463, 10872, 11037, 11911
Memphis	10009
Mercury	10001, 10009, 10037, 10060
Mermaid	10037
Metronic	10625
Metz	10037, 10195, 10367, 10388, 10447, 10587, 10668, 10746, 11163
MGA	10030, 10150, 10178, 10218, 10374
MGN Technology	10178
Micro Genius	10150
Micromax	10037, 10668, 10714, 10808, 11037
Microstar	10808
Microtek	10820, 10860
Midland	10017, 10047, 10051
Mikomi	11037, 11149
Minato	10037, 10556
Minerva	10070, 10108, 10195, 10487
Minoka	10037
Mirror	11900
Mitsubishi	10011, 10030, 10035, 10037, 10093, 10108, 10150, 10154, 10178, 10180, 10195, 10236, 10250, 10512, 10556, 10817, 10836, 11037, 11250, 11917
Mivar	10217
Monaco	10009
Monivision	10700, 10843
Morgan's	10037
Motorola	10051, 10054, 10093, 10150
MTC	10011, 10030, 10060, 10092, 10180, 10370, 10512
MTlogic	10714
Mudan	10009, 10051, 10208, 10226, 10264, 10817
Multitec	10037, 10486, 10668, 11037, 11556
Multitech	10009, 10037, 10180, 10217, 10264, 10370, 10486
Murphy	10163
Musikland	10218
Mx Onda	11498
Myryad	10556
NAD	10037, 10156, 10166, 10178, 10361, 10866, 11156
Nai'ko	10037, 10606, 11982
Nakimura	10037, 10374
Nanbao	10009, 10264
Nansheng	10264, 10817
Narita	11982
NAT	10226
National	10051, 10208, 10226, 10508

NEC

Neckermann	10037, 10200, 10327, 10370, 10418, 10556
NEI	10037, 10163, 10371
Neon	11267
Neovia	10865, 10876, 11371
Netsat	10037
NetTV	11755
Neufunk	10009, 10037, 10218, 10556, 10610, 10714
New Tech	10009, 10037, 10217, 10343, 10556
New World	10218
Newave	10009, 10092, 10093, 10178
Nikkai	10009, 10035, 10036, 10037, 10163, 10217, 10218, 10264
Nikkei	10714
Nikko	10030, 10092, 10178
Nikkodo	10030, 10092, 10178
Nishi	10030
Noblisko	10070
Nogamatic	10109
Nokia	10163, 10208, 10346, 10361, 10374, 10480, 10548, 10606, 10610, 10631
Norcent	10748, 10824
Nordic	10217
Nordmende	10037, 10109, 10195, 10287, 10343, 10560, 10714
Normerel	10037
Novatronic	10037, 10374
NTC	10092
Nu-Tec	10455, 10698, 10820, 10821
Nyon	10000
Oceanic	10163, 10208, 10361, 10548
Odeon	10264
Okano	10009, 10037, 10264, 10370
Olevia	11144, 11240, 11331, 11610
Omega	10264
Omni	10698, 10748, 10780, 10872
Onida	10053, 11253
Onimax	10714
Onwa	10180, 10218, 10371, 10433, 10602
Opera	10037
Optimus	10030, 10093, 10150, 10154, 10166, 10178, 10180, 10250, 10650
Optoma	10887
Optonica	10093
Orbit	10037
Orcom	11504

Orion	10011, 10017, 10037, 10178, 10180, 10236, 10264, 10433, 10463, 10556, 10714, 10880, 11196, 11463, 11911
Orline	10037, 10218
Ormond	10668, 11037
Osaki	10037, 10217, 10218, 10264, 10374, 10556
Osio	10037
Oso	10218
Osume	10036, 10037, 10218
Otic	11498
Otto Versand	10036, 10037, 10093, 10109, 10195, 10217, 10226, 10343, 10361, 10152, 10556
P Pace	10092
Pacific	10037, 10443, 10556, 10714, 11037, 11137
Palladium	10037, 10163, 10200, 10217, 10327, 10370, 10418, 10556, 10714, 11137
Palsonic	10001, 10037, 10217, 10218, 10264, 10418, 10698, 10773, 10778, 11196, 11269, 11904
Panama	10009, 10037, 10217, 10264
Panashiba	10001
Panasonic	10000, 10030, 10035, 10037, 10051, 10054, 10108, 10156, 10163, 10208, 10236, 10250, 10361, 10367, 10508, 10548, 10650, 10853, 11271, 11291, 11310, 11480, 11941, 11946, 11947
Panavision	10037
Panda	10009, 10051, 10208, 10226, 10264, 10508, 10698, 10706, 10780, 10817, 10821
Pathe Cinema	10163
Pathe Marconi	10109
Pausa	10009
Paxonic	10030, 10060
PCE	10060, 10156
Penney	10000, 10030, 10035, 10036, 10037, 10047, 10051, 10060, 10070, 10108, 10156, 10178, 10250, 11347
Perdio	10037, 10163
Perfekt	10037
Petters	11523
Philco	10030, 10037, 10054, 10074, 10145, 10163, 10178, 10180, 10370, 10418, 10451, 10463, 11661
Philharmonic	10217
Philips	10000, 10009, 10017, 10030, 10037, 10051, 10054, 10092, 10108, 10171, 10178, 10200, 10343, 10361, 10374, 10512, 10556, 10690, 11254, 11454, 11756, 11961
Phocus	10714
Phoenix	10037, 10163, 10370, 10486
Phonola	10037, 10556

Pilot	10011, 10030, 10051, 10060, 10178, 10706
Pioneer	10011, 10037, 10109, 10163, 10166, 10170, 10287, 10361, 10370, 10486, 10512, 10679, 10760, 10866, 11260
Pionier	10370, 10486, 11556
Plantron	10009, 10037, 10264
Playsonic	10037, 10217, 10714, 10715
Polaroid	10765, 10865, 11276, 11316, 11341, 11498, 11523, 11962
Poppy	10009
Portland	10092, 10374, 10451
Powerpoint	10037, 10487, 10698
Prandoni-Prince	10361
Precision	10180, 10217, 10236
Premier	10009, 10264
President	10860
Prima	10009, 10264, 10761, 10783, 10815, 10817, 11269, 11933
Princeton	10700
Prinston	11037
Prinz	10361
Prism	10051, 10250
Profex	10009, 10163, 10361
Profi	10009
Profillo	11556
Profitronic	10037
Proline	10037, 10073, 10625, 10634, 11037
Proscan	10047, 11347, 11447, 11922
Proscoc	10156
Prosonic	10037, 10217, 10370, 10371, 10374, 10668, 10714
Protec	10009, 10037, 10217, 10264
Protech	10009, 10037, 10217, 10264, 10418, 10486, 10668, 11037
Proton	10001, 10009, 10030, 10178
Proview	11498
ProVision	10037, 10556, 10714, 11037
Pulsar	10017, 10092
Pulser	10092, 10178
Pvision	10876
Pye	10037, 10374, 10556
Pymi	10009
Q Qingdao	10051, 10208, 10226, 10264, 10817
Quadral	10051, 10218
Quartz	10150, 10178
Quasar	10009, 10035, 10051, 10250, 10650, 10865
Quelle	10011, 10037, 10070, 10074, 10109, 10195, 10200, 10327, 10361, 10512, 10668, 11037
Questa	10036
Questar	10036
R R-Line	10037
Rabbit	10047

Radialva	10163, 10218
Radiola	10037, 10217, 10556
Radiomarelli	10037
RadioShack	10030, 10037, 10047, 10150, 10154, 10178, 10180, 11904
Radiotone	10009, 10037, 10264, 10370, 10418, 10648, 10668, 11037
Rank	10070
Rank Arena	10036, 10602
RBM	10070
RCA	10000, 10030, 10047, 10051, 10054, 10090, 10092, 10093, 10178, 10560, 10625, 10679, 11047, 11147, 11247, 11347, 11447, 11454, 11547, 11917, 11322, 11948, 11953, 11958
Realistic	10030, 10047, 10150, 10154, 10178, 10180
RealTV	11267
Reality	11267
Recor	10037, 10418
Rectiligne	10037
Rediffusion	10036, 10163, 10346, 10361, 10548
Redstar	10037
Reflex	10037, 10668, 11037
Relisys	10865, 10876, 10877, 11207
Remotec	10037, 10093, 10145, 10171, 10250
Reoc	10714
Revoc	10037
Rex	10163, 10264
RFT	10037, 10264
Rinex	10773
Roadstar	10009, 10037, 10218, 10264, 10418, 10668, 10714, 11037, 11900
Rolson	11371
Rover	10036, 10877
Rowa	10009, 10037, 10264, 10587, 10698, 10712, 10748, 10817
Royal Lux	10335, 10370
Runco	10017, 10030, 10060
Ruyi	10817
S S-Media	11217
Saba	10109, 10163, 10250, 10287, 10335, 10343, 10361, 10498, 10548, 10560, 10625, 10714
Sagem	10455, 10610, 10618
Saige	10009, 10817
Saisho	10009, 10011, 10163, 10217, 10264
Saivod	10037, 10668, 10712, 11037, 11163, 11556, 11982
Sakai	10163
Sakyno	10455
Salora	10163, 10208, 10361, 10480, 10548, 10631
Salsa	10335

Sampo	10009, 10030, 10036, 10047, 10092, 10093, 10154, 10171, 10178, 10650, 10700, 11755, 11756
Samsung	10009, 10017, 10030, 10035, 10036, 10037, 10047, 10054, 10060, 10090, 10092, 10093, 10154, 10156, 10163, 10178, 10208, 10217, 10226, 10264, 10382, 10370, 10371, 10556, 10587, 10618, 10702, 10718, 10765, 10812, 10814, 10817, 10821, 11060, 11249, 11312, 11903, 11959
Sandra	10217
Sanjian	10264
Sanky	10030, 10060
Sansui	10030, 10037, 10060, 10371, 10455, 10463, 10602, 10706, 10714, 10861, 11371, 11537, 11904, 11911
Santon	10009
Sanyo	10000, 10009, 10011, 10036, 10037, 10047, 10054, 10088, 10108, 10145, 10154, 10156, 10163, 10170, 10171, 10180, 10208, 10217, 10264, 10370, 10463, 10508, 10704, 11037, 11208, 11755
Sanyong	10037
Sanyuan	10009, 10093, 10817
Saville	10060
SBR	10037, 10556
Sceptre	11217
Schaub Lorenz	10361, 10374, 10486, 10548, 10606, 10714, 11267
Schneider	10037, 10070, 10163, 10217, 10218, 10343, 10352, 10361, 10371, 10394, 10556, 10648, 10668, 10714, 11037, 11137, 11904, 11982
Scotch	10178
Scotland	10163
Scott	10030, 10178, 10180, 10236
Sears	10000, 10001, 10017, 10030, 10035, 10036, 10037, 10047, 10051, 10053, 10054, 10060, 10093, 10154, 10156, 10166, 10171, 10178, 10208, 11904
Seaway	10634
Seelver	11037
SEG	10009, 10036, 10037, 10217, 10218, 10264, 10362, 10487, 10668, 11037, 11163
SEI	10037, 10163
Sei-Sinudyne	10037
Seleco	10163, 10346, 10362, 10371
Semivox	10180
Semp	10156
Sencora	10009
Sentra	10035
Serino	10093, 10455, 10610
Shancha	10264, 10817

Shanghai	10009, 10208, 10226, 10264, 10817
Shaofeng	10145, 10817
Sharp	10009, 10030, 10036, 10053, 10054, 10093, 10180, 10200, 10650, 10653, 10668, 11193, 11393, 11917
Shen Ying	10009, 10092
Shencai	10009, 10145, 10264
Sheng Chia	10009, 10093, 10236
Shenyang	10009, 10264, 10817
Sherwood	10009
Shintoshi	10037
Shivaki	10037, 10178, 10374, 10443, 10556
Show	10009, 10418
Siarem	10163
Siemens	10037, 10145, 10195, 10200, 10327
Siera	10037, 10556
Siesta	10370
Signature	10030, 10047, 10093
Silva	10037, 10361, 10648
Silva Schneider	10037, 11556
Silvano	10587
Silver	10036, 10361, 10455, 10715
SilverCrest	11037
Simpson	10011, 10030, 10178
Singer	10009, 10037, 10060, 10092, 10335, 10371, 10433, 11537
Sinotec	10773
Sinudyne	10037, 10163, 10361
Skantic	10163
SKY	10037, 10880, 11504
Sky Brazil	10880
Sky-North	10037
Skygiant	10180
Skyworth	10009, 10037, 10264, 10698, 10748, 10805, 10817, 11115
Sliding	10865, 10880
SLX	10668
Smaragd	10487
Soemtron	10865, 11298
Solar Drape	10000
Solavox	10037, 10163, 10361, 10548
Sole	10813
Sonawa	10218
Songba	10009
Soniko	10037
Sonitron	10208, 10217, 10370
Senneclair	10037
Sonoko	10009, 10037, 10217, 10264
Senolor	10163, 10208, 10361, 10548
Sontec	10009, 10037, 10370

Sony	10000, 10011, 10017, 10036, 10037, 10053, 10074, 10150, 10154, 10353, 10650, 11100, 11505, 11651, 11751, 11904
Sound & Vision	10218, 10374
Soundesign	10178, 10180
Soundwave	10037, 10418, 10715
Sova	11952
Sowa	10036, 10051, 10060, 10092, 10156, 10178, 10226
Soyea	10773
Spectra	10009
Spectravision	10156, 10178
Spectroniq	11498
Squareview	10171
SR2000	10154, 10171
Ssangyong	10009
SSS	10180
Staksonic	10009
Standard	10009, 10037, 10217, 10218, 10374, 11037
Standard Components	10009, 10218
Starlite	10009, 10037, 10163, 10180, 10236, 10264
Stenway	10218
Stern	10163, 10264
Stevison	11982
Strato	10009, 10037, 10264
Strong	11149, 11163
Studio Experience	10843
Stylandia	10217
Sunkai	10218, 10455, 10487, 10610, 10865
Sunstar	10009, 10037, 10264, 10371
Sunwatt	10455
Sunwood	10037
Superla	10217
Superscan	10093, 10864, 11944
Supersonic	10009, 10208, 10455, 10805
SuperTech	10009, 10037, 10218, 10556
Supra	10009, 10178, 10374
Supreme	10000
Susumu	10218, 10287, 10335
Sutron	10009
SV2000	10054
SVA	10587, 10748, 10865, 10871, 10872
Svasa	10208, 10455
Swisstec	10880, 11504
Sydney	10000, 10030, 10036, 10037, 10047, 10051, 10054, 10092, 10154, 10171, 10178, 10876, 11271, 11864, 11904, 11944
Symphonic	10000, 10171, 10178, 10180, 11904, 11944
Synco	10000, 10036, 10060, 10092, 10093, 10178, 10451

T

Syntax	11144, 11240, 11331, 11610
Sysline	10037
T+A	10447
Tacico	10009, 10092, 10178
Tai Yi	10009
Taishan	10009, 10374, 10817
Tandberg	10109, 10361, 10367
Tandy	10093, 10163, 10217, 10218
Targa	11267, 11371
Tashiko	10036, 10092, 10163, 10170, 10217, 10650
Tatung	10000, 10009, 10011, 10036, 10037, 10051, 10054, 10060, 10154, 10156, 10217, 11156, 11248, 11254, 11371, 11556, 11756
TCL	10698, 10706, 11027, 11537
TCM	10714, 10808
Teac	10009, 10037, 10154, 10170, 10171, 10178, 10217, 10264, 10418, 10455, 10512, 10668, 10698, 10706, 10712, 10714, 11037, 11149, 11755
Tec	10009, 10037, 10163, 10217, 10335
Tech Line	10037, 10668, 11163
Techica	10218
Technica	11982
Technics	10051, 10054, 10226, 10250, 10556, 10650
TechniSat	10556, 11267
Technisson	10714
Technosonic	10499, 10556, 10880
Technovox	10030, 10217
Techview	10847
Techwood	10051, 10060, 10250, 11163
Technimagen	10556
Teco	10009, 10036, 10051, 10092, 10093, 10178, 10218, 10264, 10653, 11040
Tedelux	10009, 10208, 10217, 10418, 10606, 10698, 11537
Teiron	10009
Tek	10820
Teknika	10054, 10060, 10092, 10150, 10178, 10180, 10463
TELE System	10876
Teleavia	10287, 10343
Telecolor	10017
Telecor	10037, 10163, 10217, 10218, 10394
Telefunken	10037, 10073, 10074, 10109, 10287, 10335, 10343, 10346, 10486, 10498, 10580, 10587, 10625, 10698, 10702, 10712, 10714, 10819, 10820, 10821, 11504
Telefusion	10037
Telegazi	10037, 10163, 10218, 10264
Telemeister	10037
Telesonic	10037

Telestar	10009, 10037, 10556
Teletech	10009, 10037, 10668, 11037
Teleton	10036, 10217
Televideon	10163
Televue	10037
Tempest	10009, 10264, 10455
Tennessee	10037
Tensai	10009, 10037, 10217, 10218, 10371, 10374, 10715, 11037
Tenson	10009
Tera	10030, 10092
Tevion	10037, 10556, 10648, 10668, 10714, 10808, 11037, 11137, 11248, 11298, 11498, 11556
Textet	10009, 10217, 10218, 10374
Texla	10780
ThemeScene	10887
Thomas	10001, 10047, 10178, 11904
Thomson	10037, 10047, 10109, 10287, 10335, 10343, 10560, 10625, 11447
Thorn	10035, 10036, 10037, 10073, 10074, 10109, 10163, 10264, 10335, 10343, 10361, 10499, 10512
Thorn-Ferguson	10073, 10335, 10343, 10499
Tiane	10093, 10817
Tiny	11269
TMK	10178, 10180, 10236
TML	11756
TNCi	10017
Tobishi	10218
Tobo	10009, 10264, 10748
Tocom	10156
Tokai	10009, 10037, 10163, 10217, 10374, 10668, 11037
Tokaido	11037
Tokyo	10035
Tomashi	10218
Tongguang	10264
Tongtel	10587, 10780
Topline	10668, 11037
Toshiba	10009, 10011, 10035, 10036, 10060, 10070, 10109, 10145, 10150, 10154, 10156, 10166, 10195, 10217, 10264, 10508, 10618, 10650, 10718, 10821, 10845, 11037, 11145, 11156, 11163, 11164, 11256, 11265, 11356, 11508, 11556, 11656, 11945, 11971
Totevision	10051
Towada	10217
Toyoda	10009, 10264, 10371
Toyomenka	10178
Trakton	10217, 10264
TRANS-continents	10037, 10217, 10556, 10668, 10665, 11037

U

Transonic	10009, 10037, 10264, 10418, 10455, 10512, 10587, 10698, 10712, 10780
Triad	10218, 10556
Trident	10217
Trio	11498
Tristar	10218, 10264
Triumph	10037, 10346, 10556
Truetone	10051, 10250
Tuntex	10009, 10030, 10092
TVS	10463
TVTEXT 95	10556
Uher	10037, 10370, 10374, 10418, 10480, 10486
Ultra	10092
Ultravox	10037, 10163, 10374
Unic Line	10037, 10455
United	10037, 10587, 10714, 10715, 11037, 11982
Universal	10037, 10047
Universum	10009, 10011, 10036, 10037, 10070, 10074, 10109, 10170, 10195, 10200, 10217, 10264, 10327, 10346, 10361, 10362, 10370, 10418, 10480, 10512, 10618, 10631, 10668, 11037, 11163
Univox	10037, 10163
V	10864, 10885, 11755, 11756
V2max	10865
V7 Videoseven	10880, 11217, 11755
Vector Research	10030
Vestel	10037, 10217, 10668, 11037, 11163
Vexa	10009, 10037
Victor	10036, 10053, 10250, 10650, 10653
Videcon	10508
Videologic	10218
Videologique	10217, 10218
Videomac	10009
VideoSystem	10037
Videotechnic	10217, 10374
Videoton	10163
Vidikron	10054
Vidtech	10036, 10178
Viewpia	10876
Viewsonic	10857, 10864, 10885, 11330, 11578, 11627, 11755
Viking	10060
Viore	11207
Vision	10037, 10217, 10264
Vizio	10864, 10885, 11755, 11756, 11758
Vortec	10037
Voxson	10037, 10163, 10178, 10418
Waltham	10037, 10109, 10217, 10418, 10443, 10668, 11037

W

Wards	10000, 10001, 10017, 10030, 10035, 10037, 10047, 10051, 10054, 10060, 10093, 10154, 10156, 10166, 10178, 10180, 10195, 10236, 10866, 11147, 11156, 11347
Warumaia	10374, 10661
Watson	10009, 10037, 10163, 10218, 10394, 10668, 10714, 11037
Watt Radio	10163
Waycon	10156
Wega	10036, 10037
Wegavox	10009
Weipai	10009
Welltech	10714
Weltblick	10217
Welton	10178
Wellstar	11037
Westinghouse	10000, 10451, 10885, 10889, 11282, 11577
Wharfedale	10037, 10556, 10860, 10861, 11556
White Westinghouse	10037, 10236, 10451, 10463, 10623, 10889, 11909
Windsor	10668, 11037
Windy Sam	10556
Wintel	10714
World	10180, 10236, 10451, 10463, 11282, 11577
World-of-Vision	10865, 10877, 10880, 11217, 11298
Worldview	10455
Xenius	10634, 10661
Xiahua	10009, 10264, 10698, 10773, 10817
Xianghai	10009
Xiangyang	10264
Xiangyu	10009
Xihu	10264, 10817
Xingfu	10009
Xinghai	10264
XLogic	10698, 10860
Xococo	11064
Xoro	11196, 11217
XR-1000	10154, 10171, 10180
Xrypton	10037
Yamaha	10030, 10650, 11576
Yamishi	10037, 10217, 10218, 10455
Yapshe	10250
Yingge	10009
Yokan	10037
Yoko	10009, 10037, 10217, 10218, 10264, 10370
Yonggu	10009
Yor	10030, 10218
Youlanasi	10817
Yousida	10009
Yuhang	10009

Z	Zanussi	10163, 10217
		10000, 10017, 10030, 10037, 10047, 10092, 10093, 10145, 10171, 10178, 10463, 10812, 11145, 11265, 11904, 11909, 11911
	Zenith	
	ZhuHai	10009, 10374

TV/DVD Combination ※2

A	Advent	11933
	Akai	11675
	Akura	11982
	Alba	11037
	Amstrad	11982
	Apex Digital	11943
	Audiovox	11937, 11951, 11952
	Axion	11937, 11958
B	Black Diamond	11037
	Blue Sky	11037
	Bush	10698, 11037, 11556, 11900, 11982
C	Centrum	11037
	Crown	11037
D	D-Vision	11982
	Denver	10587
E	Efunck	11037
F	Ferguson	11037
	Finlux	11556
G	Goodmans	10587, 11037, 11900
H	Hitachi	11037, 11960
J	JDV	11982
	Jensen	11933
K	KLH	11962
	Kotron	11900
L	Lenco	10587
	Logik	11037
	Luker	11982
	Luxor	11037
M	Matsui	11037
	Maxim	11982
	Medion	11900
	Mirror	11900
N	Naiko	11982
	Narita	11982
P	Panasonic	11941
	Philips	10556, 11454, 11961
	Polaroid	11523, 11962
	Powerpoint	10698
	Prima	11933
R	RCA	11948, 11958
	Roadstar	11900
S	Saivod	11982
	Samsung	11903

	Schneider	11982
	SEG	11037
	Sova	11952
	Stevison	11982
	Sylvania	10171, 11864
T	Teac	10698
	Technica	11982
	Telefunken	10698
	Thomson	10625
	Transonic	10587
U	United	10587, 11037, 11982
V	Vestel	11037

TV/DVD Combination ※4

A	Akai	30695
	Akura	31367
	Alba	30695, 30884
	Amstrad	31367
	Apex Digital	30830
B	Black Diamond	30713, 30884
	Blue Sky	30713, 30884
	Broksonic	30695
	Bush	30713, 30884, 31367
C	Centrum	30713
	Citizen	30695
	Crown	30713
D	D-Vision	31367
	DMTech	31271
E	Efunck	30713, 30884
	Emerson	30675, 31268
	ESA	31268
F	Ferguson	30695, 30713, 30884
	Funai	31268
G	Goodmans	30713
	Grandin	30713
	Grundig	30539
H	Hitachi	30713, 30884, 31247
I	Insignia	31268
J	JDV	31367
	JNC	31271
K	Konka	31192
L	Logik	30713, 30884
	Luker	31367
	Luxor	30713
M	Magnavox	31268
	Matsui	30713, 30884
	Maxim	31367
N	Naiko	31367
	Narita	31367
	Neovia	31271

O	Orion	30695
P	Pacific	30695
	Panasonic	31490
	Philips	30539, 30854, 31260
R	RCA	31022
S	Saivod	31367
	Samsung	30899
	Sansui	30695
	Schneider	31367
	SEG	30713, 30884
	Sliding	31115
	Stevison	31367
	Sylvania	30630, 30675, 31268, 32194
T	Technica	31367
	Thomson	30551
	Toshiba	30695
U	United	30713, 30884, 31367
	Universum	30713
V	Vestel	30884

TV/VCR Combination ※2

A	Aiwa	11904, 11911
	America Action	10180
	Amstrad	10171
	Audiovox	10180
B	Beko	10486
	Black Diamond	11909
	Broksonic	10463, 11911
C	Curtis Mathes	10051
D	Daewoo	11909
E	Emerson	10236, 10463, 11909, 11911
F	Ferguson	10073, 10625
	Fidelity	10171
	Funai	11904
G	GE	10047, 10051, 10093, 11917, 11922
	GoldStar	10037
	Goodmans	10374, 11909
	Grundig	10037, 10195, 10556
H	Harley Davidson	11904
	Hinari	10036
	Hitachi	11904
I	Internal	11909
J	JVC	11923
L	LG	10178
	Lloyd's	11904
M	Magnavox	10054, 11904
	Memorex	10250
	Mitsubishi	10093, 10556, 11917
O	Orion	10463, 11911
P	Palsonic	11904

	Panasonic	10051, 10250
	Penney	10051
	Philips	10037, 10556
Q	Quasar	10051, 10250
R	Radiola	10556
	RadioShack	11904
	RCA	10047, 10051, 10093, 11917, 11922
S	Saba	10625
	Samsung	11959
	Sansui	10463, 11904, 11911
	Schneider	10037, 10556, 11904
	Sears	11904
	Sharp	10093, 11917
	Siemens	10037
	Sony	10000, 11505, 11904
	Sylvania	10054
	Symphonic	11904
T	Teac	10171, 10178
	Technics	10556
	Telefunken	10074
	Thomas	11904
	Thomson	10625
	Toshiba	11971
W	White Westinghouse	11909
Z	Zenith	11904, 11909, 11911

TV/VCR Combination ※3

A	Aiwa	20000, 20352, 20479, 20742, 21137
	Akai	20352
	Alba	20352
	America Action	20278
	Amstrad	20000
	Audiovox	20278
B	Beko	20104
	Bestar	20278
	Blue Sky	20278, 20352, 20742
	BPL	20046
	Broksonic	20002, 20479, 21479
	Bush	20352, 20742
C	Citizen	20278, 21278
	Curtis Mathes	20035, 21035
D	Daewoo	20278, 20637, 21278
	Dantax	20352
E	Emerson	20002, 20278, 20479, 20637, 21278, 21479
F	Ferguson	20000, 20278
	Fidelity	20000
	Firstline	20278
	Funai	20000
G	GE	20035, 20048, 20060, 20240, 20807, 21035, 21060

	GoldStar	20037, 20480, 21237
	Goodmans	20278, 20352, 20637
	Grandin	20278, 20742
	Grundig	20081, 20352, 20742
H	Hanimex	20352
	Harley Davidson	20000
	Hinari	20352
	Hitachi	20000
	Hypson	20037
I	Internal	20278, 20637
J	JBL	20278
	JMB	20352
K	Kambrook	20037
	Kneissel	20278, 20352
L	LG	20037, 20480, 21237
	Lloyd's	20000
	Loewe	20037
M	Magnasonic	20278, 21278
	Magnavox	20000, 20081, 21781
	Magnin	20240
	Matsui	20352, 20742
	Medion	20352
	Memorex	20037, 20162, 21162, 21237, 21262
	MGA	20240
	Mitsubishi	20043, 20048, 20081, 20807
O	Optimus	20162, 21162, 21262
	Orion	20002, 20352, 20479, 20742, 21479
P	Pace	20352
	Pacific	20742
	Palsonic	20000
	Panasonic	20035, 20162, 21035, 21162, 21262
	Penney	20035, 20037, 20240, 21035, 21237
	Philips	20081
	Portland	20637
Q	Quasar	20035, 20162, 21035, 21162
R	Radiola	20081
	RadioShack	20000
	RCA	20035, 20048, 20060, 20240, 20807, 21035, 21060
S	Saba	20320
	Samsung	20240, 20432, 21014
	Sansui	20000, 20479, 21479
	Sanyo	20240
	Saville	20352
	Schneider	20000, 20081
	Sears	20000, 20037, 21237
	SEG	20637
	Sharp	20037, 20048, 20807
	Shivaki	20037
	Siemens	20081
	Sinudyne	20352

Sony	20000, 20032, 21232
Supra	20348
Sylvania	20081, 21781
Symphonic	20000
T Tatung	20352
Teac	20000, 20037, 20637, 20642
Technics	20081
Technosonic	20352
Telefunken	20278
Thomas	20000
Thomson	20278
Toshiba	20352, 20432, 20845, 21145
U United	20742
W White	
Westinghouse	20278, 20637
Z Zenith	20000, 20479, 20637, 21479

TV/VCR/DVD Combination ※2

A Akai	11903
B Brooksonic	11938
E Emerson	11944
ESA	11944
M Magnavox	11944
P Panasonic	11946, 11947
R RCA	11953
S Sharp	11917
Sylvania	11944
Symphonic	11944
T Toshiba	11945

TV/VCR/DVD Combination ※3

S Sharp	20807
----------------	-------

TV/VCR/DVD Combination ※4

A Akai	30899
E Emerson	30821
ESA	30821
M Magnavox	30821
P Panasonic	31362, 31462
R RCA	31132
S Sharp	30630
Superscan	30821
Sylvania	30821
Symphonic	30821
T Toshiba	31045

VCR ※3

A A-Mark	20000, 20037, 20046, 20240, 20278
ABS	21972

Accurian	20000
Admiral	20039, 20047, 20048, 20060, 20104, 20121, 20209, 20479
Adventura	20000, 20037, 20240
Aiko	20278
Aim	20278, 20348, 20642
Aiwa	20000, 20032, 20037, 20041, 20209, 20348, 20352, 20479, 20742, 21137
Akai	20037, 20041, 20106, 20240, 20315, 20348, 20352, 20642
Akura	20041
Alba	20000, 20081, 20209, 20278, 20315, 20348, 20352
Alienware	21972
Allegro	20039, 21137
Allorgan	20240
Allstar	20081
America Action	20278
American High	20035, 20081
Amoisonic	20479
Amstrad	20000, 20278
Anam	20037, 20162, 20226, 20240, 20278, 20480
Anam National	20162, 20226, 21162, 21562
Ansonic	20000
Aristona	20081
ASA	20037, 20081
Asha	20240
Astra	20035, 20240
Asuka	20000, 20037, 20081
Audiolab	20081
Audiosonic	20278
Audiovox	20037, 20278
Avis	20000
AVP	20000, 20352
Awa	20037, 20043, 20278, 20642

B

Baird	20000, 20041, 20046, 20104, 20106, 20278
Basic Line	20046, 20104, 20278
Beaumont	20240
Beko	20104
Bell & Howell	20000, 20035, 20039, 20046, 20048, 20104, 20479
Bestar	20278
Black Diamond	20642
Black Panther	20278
Blaupunkt	20081, 20162, 20226
Blue Sky	20037, 20209, 20278, 20348, 20352, 20480, 20642, 20742, 21137
BPL	20046
Brandt	20041, 20320
Brandt Electronique	20041
Brinkmann	20209, 20348
Broksonic	20002, 20121, 20184, 20209, 20348, 20479, 21479

C

Bush	20000, 20081, 20209, 20278, 20315, 20348, 20352, 20642, 20742
Calix	20037
Candle	20037
Canon	20035
Capehart	20002
Carena	20081, 20209
Carrefour	20045
Carrera	20240
Carver	20035, 20081
Casio	20000
Cathay	20278
CCE	20278
CGE	20000, 20041
Changhong	20048, 20081
Cimline	20209
Cineral	20278
CineVision	21137
Citizen	20000, 20035, 20037, 20209, 20240, 20278, 20479, 21278
Classic	20037
Clatronic	20000, 21593
Colortyme	20035, 20045, 20060, 20278
Colt	20000
Combitech	20352
Condor	20278
Craig	20037, 20047, 20240
Criterion	20000
Crosley	20000, 20035, 20081
Crown	20037, 20278, 20480
Curtis Mathes	20000, 20035, 20041, 20060, 20162, 20240, 20278, 20432, 21035
Cybernex	20240
CyberPower	21972
Cyrus	20081
D Daewoo	20037, 20045, 20046, 20104, 20209, 20278, 20352, 20637, 20642, 21137, 21278
Dansai	20278
Dantax	20352
Daytron	20037, 20278
De Graaf	20042, 20046, 20048, 20081, 20104
Decca	20000, 20041, 20067, 20081, 20209, 20352
Degraff	20042, 20048, 20081, 20104
Detroit	20278
Dell	21972
Denon	200842, 20081
Derwent	20041
Diamant	20037
Diamond	20348
Digitur	20642
DirecTV	20739

E

Domland	20209
DSE	20642
Dual	20000, 20041, 20081, 20278, 20348
Dumont	20000, 20081, 20104
Durabrand	20039, 20642, 21593
Dynatech	20000, 20240
Fibe	20278
Electrohome	20000, 20037, 20043, 20060, 20209, 20240
Electrohome	20037
Elin	20240
Elta	20278
Emerald	20121, 20184
Emerex	20032
Emerson	20000, 20002, 20035, 20037, 20039, 20043, 20045, 20121, 20184, 20209, 20240, 20278, 20348, 20479, 20637, 21278, 21479, 21593
ESA	21137
ESC	20240, 20278
EuroLine	21593
F Ferguson	20000, 20041, 20278, 20320, 20348
Fidelity	20000, 20240, 20352, 20432
Finlandia	20000, 20037, 20042, 20043, 20046, 20048, 20081, 20104, 20106, 20226
Finlux	20000, 20042, 20081, 20104
Firstline	20037, 20042, 20043, 20045, 20209, 20278, 20348, 20480, 21137
Fisher	20000, 20039, 20046, 20047, 20104
Flint	20209, 20348
Fuji	20033, 20035
Fujitsu	20000, 20037, 20045
Fujitsu General	20037
Funai	20000, 20037, 20278, 21593
G Galaxi	20000
Galaxis	20278
Garrard	20000
Gateway	21972
GE	20000, 20035, 20048, 20060, 20226, 20240, 20320, 20807, 21035, 21080
GEC	20081
Gemini	20060
General	20045
General Technic	20348
Genexa	20000, 20037, 20104, 20278
Go Video	20240, 20432, 20614, 21137
GoldStar	20000, 20035, 20037, 20039, 20209, 20225, 20226, 20278, 20480, 21137, 21237
Goodmans	20000, 20037, 20081, 20209, 20240, 20278, 20348, 20352, 20637, 20642, 20742

H

GPX	20037
Gradiente	20000
Graetz	20041, 20104, 20240
Granada	20000, 20035, 20037, 20042, 20046, 20048, 20081, 20104, 20226, 20240
Grandin	20000, 20037, 20209, 20278, 20742
Grundig	20081, 20226, 20320, 20348, 20352, 20742
H Haaz	20348
Hanimex	20352
Hanseatic	20037, 20081, 20209
Haojie	20240
Harley Davidson	20000
Harman/Kardon	20081
Headquarter	20046
Hewlett Packard	21972
HI-Q	20000, 20035, 20047
Hinani	20041, 20209, 20240, 20278, 20352
Hisawa	20209, 20352
Hischito	20045
Hitachi	20000, 20035, 20037, 20041, 20042, 20045, 20046, 20081, 20089, 20240
Hoeher	20278, 20642
Hornophon	20081
Howard Computers	21972
HP	21972
Hughes Network Systems	20042, 20739
Humax	20739
Hush	21972
Hypson	20000, 20037, 20209, 20278, 20352, 20480
Hytak	20000, 20047
I iBUYPOWER	21972
Imperial	20000
Ingersol	20209, 20240
Instant Replay	20035, 20226
Interbuy	20037
Interfunk	20081, 20104
Internal	20278, 20637
International	20037, 20278, 20642
Intervision	20000, 20037, 20209, 20278, 20348
Irradio	20037, 20081, 21137
ITT	20041, 20046, 20104, 20106, 20240
ITT Nokia	20041, 20104, 20106, 20240
ITV	20037, 20278
J Janeil	20240
JBL	20278
Jensen	20041, 20067
JMB	20209, 20348, 20352, 20742
Joyce	20000

JVC	20041, 20045, 20067, 20081, 20184, 21162
K Kambrook	20037
Karcher	20081, 20278, 20642
KEC	20037, 20278
Kendo	20037, 20106, 20209, 20278, 20315, 20348, 20642
Kenwood	20041, 20046, 20067
KIC	20000
Kimari	20047
Kneissel	20037, 20209, 20278, 20348, 20352
Kodak	20035, 20037
Kolin	20041, 20043
Kolster	20209
KTV	20000
Kuba	20047
Kuba Electronic	20047
L Lenco	20278
LG	20000, 20037, 20042, 20045, 20209, 20225, 20240, 20278, 20480, 21137, 21237
Lifetec	20209, 20348
Linksys	21972
Lloyd's	20000, 20240
Loewe	20037, 20081, 20162, 21062, 21262, 21562
Logik	20000, 20106, 20209, 20240
Lumatron	20278, 21137
Lunatron	21137
Luxor	20043, 20046, 20047, 20048, 20104, 20106, 20315
LXI	20000, 20037, 20042, 20067
M M Electronic	20000, 20037, 20240
Magnadyne	20081
Magnasonic	20000, 20037, 20240, 20278, 21278
Magnavox	20000, 20035, 20037, 20039, 20048, 20081, 10226, 20240, 20618, 20642, 24593, 21781
Magnin	20240
Magnum	20642
Manesth	20045, 20081, 20209
Marantz	20035, 20081, 20209
Mark	20000, 20278
Marta	20037
Mastec	20642
Master's	20278
Matsui	20037, 20209, 20240, 20278, 20348, 20352, 20742
Matsushita	20035, 20081, 20162, 20226, 21162
Media Center PC	21972
Mediator	20081
Medion	20209, 20348, 20352, 20642
MEI	20035

Memorex	20000, 20035, 20037, 20039, 20046, 20047, 20048, 20104, 20162, 20209, 20240, 20278, 20348, 20479, 21162, 21237, 21262
Metronic	20081
Metz	20037, 20081, 20162, 20226, 20836, 21062, 21162, 21262, 21562
MGA	20043, 20060, 20240
MGN Technology	20240
Micormay	20348
Micromaxx	20209
Microsoft	21972
Midland	20240
Migros	20000
Mind	21972
Minolta	20042
Mitsubishi	20000, 20041, 20042, 20043, 20047, 20048, 20060, 20067, 20081, 20480, 20642, 20807
Motorola	20035, 20048
MTC	20000, 20240
MTX	20000
Multitec	20037
Multitech	20000, 20039
Murphy	20000
Myryad	20081
NAD	20104, 20240
Naiko	20348, 20642
NAP	20039
National	20226
Nebula Electronics	20033
NEC	20035, 20037, 20041, 20048, 20067, 20104, 20278, 21137, 21278
Neckermann	20041, 20081
Nesco	20000
Neufunk	20209
Newave	20037
Nikkai	20278
Nikko	20037, 20278
Nikkodo	20037, 20278
Nishi	20240
Niveus Media	21972
Noblex	20240
Nokia	20041, 20042, 20046, 20048, 20081, 20104, 20106, 20240, 20278, 20315
Nordmende	20041, 20067, 20320
Northgate	21972
Nu-Tec	20209
O Oceanic	20000, 20041, 20046, 20048, 20081, 20104, 20106
Okano	20209, 20278, 20315, 20348
Olympus	20035, 20104, 20162, 20226
Onimax	20642
Onkyo	20222

Optimus	20000, 20035, 20037, 20047, 20048, 20104, 20162, 20240, 20432, 21062, 21162, 21262
Orion	20000, 20002, 20104, 20121, 20184, 20209, 20240, 20278, 20348, 20352, 20479, 20742, 21479
Orson	20000
Osaki	20000, 20037
Otake	20209
Otto Versand	20081
P Pace	20352
Pacific	20000, 20348, 20642, 20742
Packard Bell	21972
Palladium	20037, 20041, 20209, 20348
Palsonic	20000, 20642
Panama	20035
Panasonic	20000, 20035, 20162, 20225, 20226, 20614, 20616, 20836, 21035, 21062, 21162, 21262, 21562
Pathe Cinema	20043
Pathe Marconi	20041
Penney	20000, 20035, 20037, 20042, 20047, 20067, 20081, 20162, 20240, 21035, 21237
Pentax	20042
Perdio	20000, 20209
Philco	20000, 20035, 20081, 20209, 20226, 20479
Philips	20000, 20035, 20045, 20048, 20081, 20162, 20209, 20226, 20616, 20618, 20739, 21081, 21181
Phoenix	20278
Phonola	20081
Pilot	20037
Pioneer	20042, 20067, 20081, 20162
Polk Audio	20081
Portland	20278, 20637
Presidian	21593
Prinz	20000
Profitronic	20081, 20240
Proline	20000, 20278, 20320, 20642
Proscan	20060, 21060
Proscoc	20278
Prosonic	20209, 20278
Protec	20000
Protech	20081
ProVision	20278
Pulsar	20039, 20240, 20278
Pulser	20240
Pye	20000, 20081
Q Qisheng	20060
Quarter	20046
Quartz	20035, 20046, 20047
Quasar	20002, 20035, 20162, 20226, 20278, 21035, 21162

Quelle	20081
R Radialva	20037, 20048, 20081
Radiola	20081
Radionette	20037, 21137
RadioShack	20000, 20035, 20037, 20046, 20047, 20048, 20104, 20162, 20240, 21162
Radix	20037
Randex	20037
Rank	20041
Rank Arena	20041
RCA	20000, 20035, 20042, 20045, 20048, 20060, 20106, 20226, 20240, 20320, 20807, 20880, 21035, 21060
Realistic	20000, 20035, 20037, 20046, 20047, 20048, 20104, 20121, 20162, 20240, 20278, 21162
Reoc	20348
ReplayTV	20614, 20616
Rex	20041
Ricavision	21972
Rio	21137
Roadstar	20037, 20081, 20240, 20278, 20742
Runco	20039
Saba	20041, 20278, 20320
Saisho	20209, 20348
Salora	20043, 20046, 20104, 20106
Sampo	20037, 20048
Samsung	20000, 20045, 20060, 20240, 20432, 20739, 21014
Samtron	20240
Sarky	20039, 20048
Sansei	20048
Sansui	20000, 20002, 20041, 20067, 20106, 20209, 20240, 20348, 20479, 21479
Sanyo	20000, 20046, 20047, 20048, 20067, 20104, 20240, 20348, 20479, 21137
Saville	20240, 20278, 20352
SBR	20081
ScanSonic	20240
Schaub Lorenz	20000, 20041, 20104, 20106, 20315, 20348
Schneider	20000, 20037, 20042, 20081, 20240, 20278, 20348, 20352, 20642, 21137
Scott	20043, 20045, 20121, 20184
Sears	20000, 20033, 20035, 20037, 20039, 20041, 20042, 20043, 20045, 20046, 20047, 20048, 20060, 20067, 20104, 20162, 20209, 21237
Seaway	20278
SEG	20081, 20240, 20278, 20637, 20642
SEI	20081
Sei-Sinudyne	20081

Seleco	20037, 20041
Semp	20045
Sentra	20278
Sharp	20000, 20032, 20037, 20047, 20048, 20209, 20807
Shinco	20000
Shintom	20000, 20039, 20104, 20240
Shivaki	20037
Shogun	20240
Siemens	20037, 20046, 20081, 20104, 20320
Siera	20081
Signature	20000, 20035, 20037, 20046, 20048, 20060, 20479
Silva	20037
Silver	20278
SilverCrest	20642
Singer	20037, 20045, 20240, 20348
Sinudyne	20081, 20209, 20352
Smaragd	20348
Sonic Blue	20614, 20616, 21137
Sonographe	20046
Sonorol	20046, 20048
Sontec	20037, 20278
Sonwa	20642
Sony	20000, 20032, 20033, 20035, 20046, 20047, 20048, 20067, 20106, 20226, 20636, 21232, 21972
Soundmaster	20000
Soundwave	20037, 20209, 20348
Stack 9	21972
Standard	20278
Stern	20278
STS	20042
Sunkai	20209, 20278, 20348
Sunstar	20000
Suntronic	20000
Supra	20037, 20278, 20348
Susumu	20037
SV2000	20000
SVA	20000
Sylvania	20000, 20035, 20043, 20081, 21593, 21781
Symphonic	20000, 20002, 20240, 21593
Systemax	21972
T T+A	20162
Tagar Systems	21972
Taisho	20209
Tandberg	20278
Tandy	20000, 20104
Tashiko	20000, 20037, 20048, 20081, 20240
Tatung	20000, 20041, 20043, 20045, 20048, 20067, 20081, 20209, 20348, 20352

Ichibo	20348
TCM	20348
Teac	20000, 20037, 20041, 20067, 20278, 20637, 20642, 21593
Technics	20000, 20035, 20037, 20081, 2162, 20226, 21162
TechniSat	20348
Technosonic	20352
Teco	20035, 20037, 20041, 20048
Tedalex	20037, 20209, 20348, 20642
Teknika	20000, 20035, 20037
Teleavia	20041
Telecorder	20240
Telefunken	20041, 20209, 20278, 20320, 20642
Telerent	20226
Telestar	20037
Teletex	20000, 20278
Tensai	20000, 20037, 20278
Tevion	20209, 20348, 20479, 20642
Textet	20278
Thomas	20000, 20002
Thomson	20041, 20060, 20067, 20278, 20320
Thorn	20037, 20041, 20104, 20320
Tisonic	20278
Tivo	20618, 20636, 20739, 21996
TMK	20000, 20240
TNIX	20037
Tocom	20240
Tokai	20037, 20041, 20104
Topline	20348
Toshiba	20000, 20041, 20042, 20043, 20045, 20067, 20081, 20209, 20240, 20352, 20432, 20742, 20845, 21008, 21145, 21972, 21996
Tosonic	20278
Totevision	20037, 20240
Touch	21972
Toyoda	20278
Tradex	20081
Triad	20278
Trix	20037
Uher	20240
Ultra	20045, 20278
Ultravox	20278
Unitech	20240
United	20348, 20742, 21593
Universum	20000, 20037, 20081, 20104, 20106, 20209, 20240, 20348, 21137
Vector	20045
Vector Research	20184
Victor	20041, 20067
Video Concepts	20045

Video Technic	20000
Videomagic	20037
Videosonic	20000, 20240
Viewsonic	21972
Villain	20000
Voodoo	21972
Wards	20000, 20033, 20035, 20037, 20039, 20041, 20042, 20043, 20045, 20046, 20047, 20048, 20060, 20081, 20240, 20479
Watson	20081, 20352, 20642
Weltblick	20037
Wharfedale	20642
White	20000, 20209, 20278, 20479, 20637
Westinghouse	20637
World	20002, 20209, 20348, 20479
XR-1000	20000, 20035, 20240
Yamaha	20041
Yamishi	20278
Yoko	20037, 20240
Zenith	20000, 20033, 20037, 20039, 20041, 20209, 20278, 20479, 20637, 21137, 21479
ZT Group	21972
ZX	20209, 20348, 20352

PVR ✖3

ABS	21972
Alienware	21972
CyberPower	21972
Dell	21972
DirecTV	20739
Gateway	21972
Go Video	20614
Hewlett Packard	21972
Howard Computers	21972
HP	21972
Hughes Network Systems	20739
Humax	20739
Hush	21972
iBUYPOWER	21972
Linksys	21972
Media Center PC	21972
Microsoft	21972
Mind	21972
Niveus Media	21972
Northgate	21972
Panasonic	20614, 20616
Philips	20618, 20739
RCA	20880
ReplayTV	20614, 20616
Samsung	20739
Sonic Blue	20614, 20616

Sony	20636, 21972
Stack 9	21972
Systemax	21972
Tagar Systems	21972
Tivo	20618, 20636, 20739
Toshiba	21008, 21972, 21996
Touch	21972
Viewsonic	21972
Voodoo	21972
ZT Group	21972

DVD ✖4

3D LAB	30503, 30539
4Kus	31158
A-Trend	30714
Accurian	30675
Acoustic Solutions	30713, 30730, 31228
AEG	30770, 30788, 30790, 31233, 31923
AFK	31051, 31152, 31923
Aim	30672, 30699, 30833
Airis	30672, 31005, 31224, 31250, 31321, 31345
Arwa	30533, 30641
Akai	30690, 30695, 30705, 30770, 30788, 30790, 30839, 30884, 30898, 30899, 31115, 31205, 31233, 31695
Akashi	30838
AKI	31005
Akira	30699, 31321
Akura	30898, 31051, 31140, 31233, 31367
Alba	30639, 30672, 30695, 30699, 30713, 30717, 30730, 30783, 30884, 31140, 31530, 31695
Alco	30790
Alize	31151
All-Tel	31451
Allegro	30869
Altacom	31224
Amitech	30770, 30850
Amoi	30852
Amphion Media Works	30872
Amstrad	30713, 30770, 31151, 31367
AMW	30872
Anam	31913
Ansonic	30759, 30774, 30831
Apex Digital	30533, 30672, 30717, 30755, 30794, 30796, 30797, 30830, 31004, 31020, 31056, 31061
Arena	31115
Aristona	30539, 30646
Arrgo	31023
ASCOMTEC	31923

Asono	31224
Aspire Digital	31168
Atacom	31224
Audiosonic	30690, 31923
Audiovox	30717, 30790
AudioWorld	30790
Autovox	30713
Auvio	30843
Awa	30730, 30872
Axion	30730
Base	31451
Basic Line	30713
Baze	30898
BBK	30862, 31224
Beep	31163
Bellagio	31004
Belson	31086, 31923
Binatone	31923
Black Diamond	30713, 30833, 30884
Blaupunkt	30717
Blu sens	31233, 31321
Blue Nova International	31321
Blue Parade	30571
Blue Sky	30651, 30672, 30695, 30699, 30713, 30790, 30843, 30884, 31423
Boghe	31004
Boman	30783, 30898, 31005
Brainwave	30770, 31115
Brandt	30503, 30551, 30651
Broksonic	30695
Bush	30672, 30690, 30699, 30713, 30717, 30723, 30730, 30831, 30833, 30884, 31051, 31140, 31367, 31483, 31695, 31832
Byd:sign	30872
C-Tech	30798, 31152
California Audio Labs	30490
Cambridge Audio	30751, 31109
Cambridge Soundworks	30690
Campomatic Digital	31051
Cat	30699, 30789, 31421, 31923
CCE	30730
Celestial	31020
cello	31730
Centrex	30672, 31004
Centrum	30713, 30789, 31005, 31227, 31923
CGV	30751, 31115
Changhong	30627, 31061
Cinea	30831, 30841
Cinetec	30713, 30872
cineULTRA	30699

CineVision	30833, 30869, 31483
Citizen	30695
Clairtone	30571
Classic	30730, 31730
Clatronic	30672, 30675, 30788, 31233
Clayton	30713
Coby	30730, 30852, 31086, 31321, 31923
Codex	31233
Commax	31321
Conia	30672, 30852, 31321
Contel	30788
Continental Edison	30831, 30872
Craig	30831
Creative	30503, 30539
Crown	30690, 30713, 30770, 31115
Crypto	31228
Curtis Mathes	31087
Cybercom	30831
CyberHome	30714, 30816, 30874, 31023, 31024, 31117, 31129, 31502
Cytron	30651, 30705, 30774, 31347
D-Vision	31115, 31367
Daenylx	30872
Daewoo	30490, 30705, 30714, 30770, 30833, 30869, 30872, 31172, 31483, 31906
Dalton	31036
Dansai	30770, 30783, 31115, 31695
Dantax	30539, 30713, 30723, 30790
Daytek	30872, 31005
Dayton	30872
DCE	30831
Decca	30770, 31115
Denon	30490, 30634, 31634, [32134]*
Denver	30672, 30699, 30788, 30898, 31056, 31104, 31321, 31923
Desay	30843, 31212
Dgtec	30672
Diamond	30651, 30751, 30768, 30790
Dighome	30713
DigiLogic	30713
digiRED	30717
Digitech	31832
Digitor	30651, 30690, 30833, 31005, 31423
Digitrex	30672, 31004, 31056
DiK	30831
Dinamic	30788
Disney	30675, 30831, 31270
DiViDo	30705
DK Digital	30831
DMTech	30783, 31271
Dragon	30831

Adjusting the Backlight's Brightness

The display's brightness can be adjusted in 5 steps.
(Default: Step 3)

- 1** Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 2** Press **[CHANNEL +]** or **[CHANNEL -]**.
The display gets one step brighter when **[+]** is pressed.
The display gets one step darker when **[-]** is pressed.
- 3** Press **[RC SETUP]** to complete the setting.

Resetting the Main Remote Control Unit

Learning Function

[Resetting button by button]

- 1** Press **[MODE SELECTOR]** for the device you want to reset.
- 2** Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 3** Press **[9]**, **[7]** and **[6]**, in that order.
The signal transmission indicator flashes twice.
- 4** Press the button you want to reset twice.
The signal transmission indicator flashes twice.

[Resetting by device mode]

- 1** Press **[MODE SELECTOR]** for the device you want to reset.
- 2** Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 3** Press **[9]**, **[7]** and **[6]**, in that order.
The signal transmission indicator flashes twice.
- 4** Press **[MODE SELECTOR]** for the device you want to reset twice.
The signal transmission indicator flashes twice.

System Call Function

- 1** Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 2** Press **[9]**, **[7]** and **[8]**, in that order.
The signal transmission indicator flashes twice.
- 3** Press **[SYSTEM CALL]** (1, 2 or 3) you want to reset.
- 4** Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.

Punch-Through Function

- 1** Press **[MODE SELECTOR]** for the device you want to reset (TV or SAT/CBL).
- 2** Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 3** Press **[9]**, **[8]** and **[4]**, in that order.
The signal transmission indicator flashes twice.
- 4** Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.

All Settings

 
- 1** Press and hold in **[RC SETUP]** for at least 3 seconds.
The signal transmission indicator flashes twice.
- 2** Press **[9]**, **[8]** and **[1]**, in that order.
The signal transmission indicator flashes 4 times.
All the settings are restored to their defaults.

Sub Remote Control Unit (RC-1106)

The sub remote control unit (RC-1106) included with the AVR-2809CI can be used as the exclusive multi-zone remote control unit.

※ The following describes operation for the selected zone. (Use **[ZONE SELECT]** to switch zones.)

- Turning the multi-zone power on and off
- Selecting the input source to be played
- Adjusting and temporarily muting the multi-zone volume
- Listening to the tuner (TUNER, XM and SIRIUS)
- Operating an iPod (Note that the **[FAVORITES DIRECT PLAY]** button can only be used with the ASD-3N or ASD-3W.)

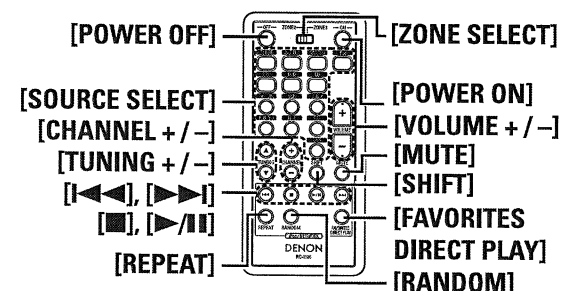

ZONE SELECT	Switching the zone to be operated
POWER OFF	Power off
POWER ON	Power on
SOURCE SELECT	Switching the input source
VOLUME + / -	Volume control
CHANNEL + / -	Preset channel + / -
TUNING + / -	Tuning + / -
MUTE	Muting
SHIFT	Switching the memory block
I<< I>>	Auto search (cue)
■	Stop
I>II	Play / Pause
REPEAT	1-track / All -track repeat play
RANDOM	1-track / album shuffle play

※ When using a control dock for iPod (ASD-1R or ASD-11R), **[FAVORITES DIRECT PLAY]** cannot be used.