

■ System code buttons

DENON remote-controllable audio components can be controlled using this unit's remote control unit. Note that some components, however, 'cannot be operated with this remote control unit

1 Set the slide switch to the position for the component to be operated (CD or DECK).

CD DECK

2 Use the buttons shown below to operate the component.
For details, refer to the respective component's manual.

a. For CD players

CD changer,
disc skip

Auto search
reverse (◀◀)

stop (■)

DISC SKIP+

DISC SKIP-

A/B

Play (▶)

Auto search
forward (▶▶)

Pause (||)

b. For tape decks (DECK)

Reverse play (◀)

Rewind (◀◀)

Stop (■)

DISC SKIP+


DISC SKIP-

A/B

Forward play (▶)

Fast-forward (▶▶)

Switching between decks
A and B for double decks (A/B)

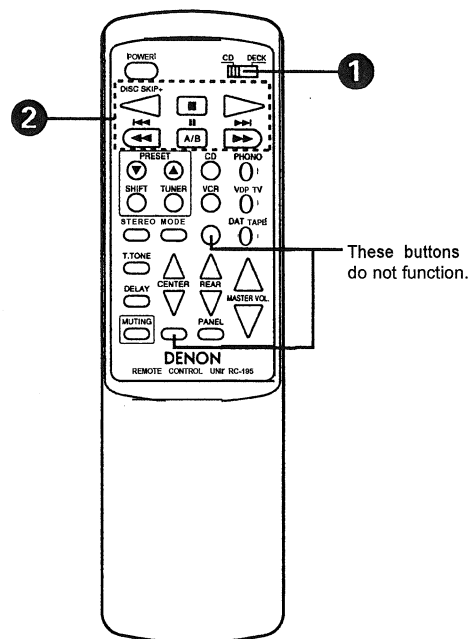

4 OPERATIONS

4-1 Preparations for playback

- 1 Check that all connections are proper.
- 2 Set to the minimum position.

 


- 3 Set to the center position.





- 4 Turn on the power.
Press the POWER button.


POWER
ON / STANDBY



Several seconds are required from the time the power switch is set to the "ON" position until sound is output. This is due to the built-in muting circuit that prevents noise when the power switch is turned on and standby.

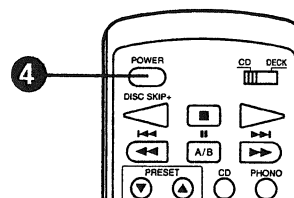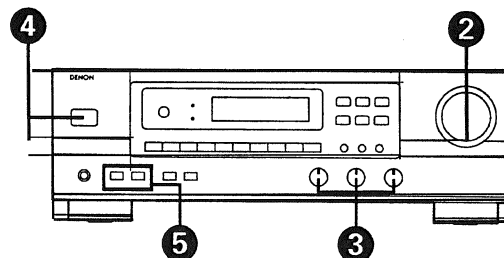


 - 5 Select the front speakers.
Press the speaker A or B switch to turn the speaker on




4-2 Playing the program source (Stereo playback)


- ① Select the source to be played

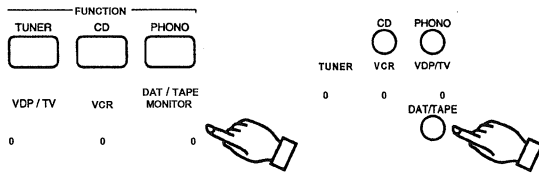

- ② Select the STEREO mode.

 


- ③ Adjust the MASTER VOLUME control.

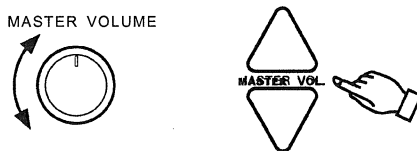

- ④ Adjust the front left/right BALANCE.


Turn the control counterclockwise to reduce the volume of the right channel, clockwise to reduce the volume of the left channel.

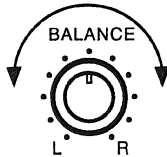

4-3 Simulcast playback

Use this switch to monitor a video source other than the audio source.

 - ① Press and hold the VIDEO SELECT button until the desired source appears on the display.



* Cancelling simulcast playback

- Press the VIDEO SELECT button once more
- Select the VIDEO function.


4-4 Using the muting function

Use this to turn off the audio output temporarily.



- ① Press the MUTING button.

* Cancelling MUTING mode.


Press the MUTING button again.

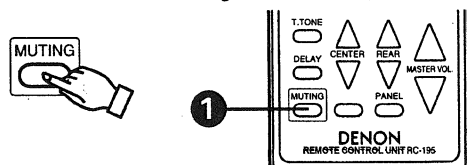


This function can only be set from the remote control unit. The STANDBY LED flashes when the muting function is set.

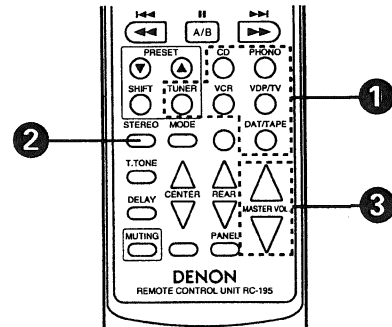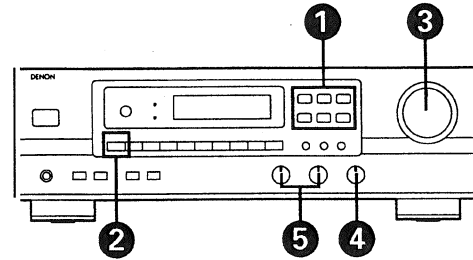


- ⑤ Adjust the BASS and TREBLE

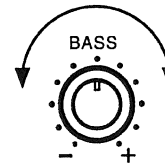

Turn the control clockwise to increase the bass, counterclockwise to decrease it.

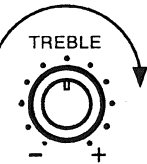

Turn the control clockwise to increase the treble, counterclockwise to decrease it.

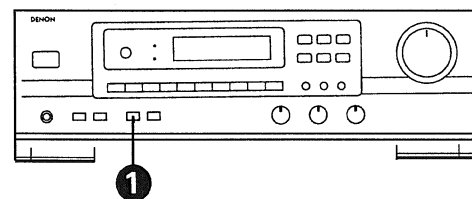

4-5 Listen with headphones

Connect the headphones to the PHONES jacks.

When listening with headphones privately, set A, B SPEAKER switches and the superwoofer's power switch to the OFF position and set the stereo surround mode.

NOTE:

To prevent hearing loss, do not raise the volume level excessively when using headphones.

