

ANALOG	Analog input selected.
COPY PROTECT.....	No digital recording can be made of the connected source. See "Digital Copies" on Page 6.
NOTFINALIZED	When opening the tray with an unfinalized disc inserted.
MAKE CD	Start of synchronized recording of a complete disc and Auto Finalize function selected.
RECORD DISC	Start of synchronized recording of a complete disc.
RECORD TRACK	Start of synchronized recording of a single track.
REC MANUAL	Manual start of recording selected.
□□ ▢	Level is being adjusted.
ERASE TRACK	When erasing one or more tracks.
ERASE DISC	When erasing a disc.
FINALIZE CD	When finalizing a disc.
FINALIZED	When trying to finalize an already finalized disc.
CHECK INPUT	When REC button is pressed while no digital source is detected.
□: □□ ERASE	Time countdown when erasing a track or a disc.
□: □□ FINAL	Time countdown when finalizing a disc.
□: □□ UNFINAL	Time countdown when unfinalizing a disc.
MONITOR MODE.....	Monitor mode (sample rate convertor) active.
PRESS RECORD.....	To start manual recording, finalizing or erasing.
START SOURCE.....	To start synchronised recording from a source.
FINALIZED CD	When trying to record on a finalized CD-R or a prerecorded CD.
UNFINALIZE	When trying to record on a finalized CD-RW.
PRESS ENTER	When a professional source is connected.
PROF SOURCE	When a professional source is connected.
USE REC MODE	Press the REC MODE button.
Play	
PROGRAM	Program mode selected.
ALBUM TITLE.....	Will be followed by album title.
TRACK TITLE	Will be followed by track title.
ALBUM ARTIST	Will be followed by artist name.
TRACK ARTIST	Will be followed by track artist name.

Others

NO AUDIO TR	When the recorder enters a data track during recording.
-------------------	---

INITIALIZING	During laser power calibration for unfinalized discs.
DISC RECOVER	During disc recovering after power failure.
OPC ERROR.....	OPC failure during OPC procedure (OPC = Optimum Power Calibration)
RECORD ERROR	An error has occurred during recording.
DISC ERROR.....	Recording or finalization is not possible due to a disc fault.
MEMORY FULL	When text memory is full. To add a to the list, first finalize or erase another disc from the list.
FINALIZE CD	

Menu messages

Menu messages


NO TRACKS	When attempting to edit text for a disc which has no tracks.
TEXT EDIT	When entering Text Edit mode.
ALBUM ARTIST	When editing or erasing an artist name.
ALBUM TITLE	When editing or erasing a title.
ARTIST TR □	When editing or erasing an artist name per track.
TITLE TR □	When editing or erasing a title per track.
TEXT ERASE.....	When entering Text Erase mode.
ALL TEXT.....	When entering All Text mode.
ERASE OK.....	When confirmation for erasing has to be given with ENTER button.
ERASE ALL OK	Confirmation for erasing the text of the entire album has to be made with the ENTER button.
ERASE MEMORY	When waiting for confirmation when erasing a disc.
MEMORY VIEW	When selecting text review per unfinalized disc in memory.
MEMORY EMPTY	When text memory review mode is selected while no text is in memory.
AUTO TRACK	When selecting auto track increment ON or OFF.
ON	Auto Track increment or Fade on.
OFF	Auto Track increment or Fade off.
SET BALANCE	When selecting Balance setting mode.
SET FADE	When selecting FADE adjustment.
FADE ON/OFF	When switching FADE on or off.
SET FADE IN	When setting the FADE IN time.
SET FADE OUT	When setting the FADE OUT time.
NO TEXT	No text stored for disc.

8 REMOTE CONTROL UNIT


Remote control unit can be used to control the CD recorder from a convenient distance.

(1) Inserting Batteries


1. Remove the battery cover on the back of the remote control unit.

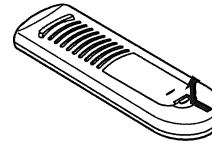

2. Insert two R03/AAA dry cell batteries with correct polarity as indicated inside the battery compartment.

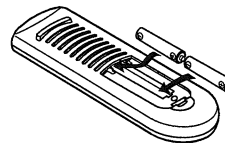


3. Replace the battery cover.

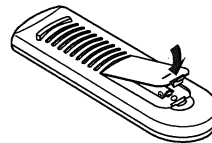

Notes On the Batteries

- The remote control unit uses R03/AAA dry cell batteries.
- The batteries will need to be replaced approximately once a year. Replacement may be necessary earlier depending on how much the remote control unit is used.
- If, in less than a year from the time new batteries were inserted, the remote control fails to operate the CD recorder from a near-by position, it is time to replace the batteries.
- The included battery is only for verifying operation. Replace it with a new battery as soon as possible.
- Insert the batteries properly, following the polarity diagram inside the battery compartment, in other words make sure (+) and (-) terminals are properly aligned.
- Batteries are prone to damage and leakage. Therefore:
 - Do not combine new batteries with used ones.
 - Do not combine different types of batteries.
 - Do not jumper opposite poles of the batteries, expose them to heat, break them open nor expose of them in open fire.
- If the remote control unit is not to be used for a long period of time, remove the batteries from the unit.
- If the batteries have leaked, remove any traces of battery fluid from the battery compartment, wiping thoroughly with a dry cloth. Then insert new batteries.

(2) Using the Remote Control Unit

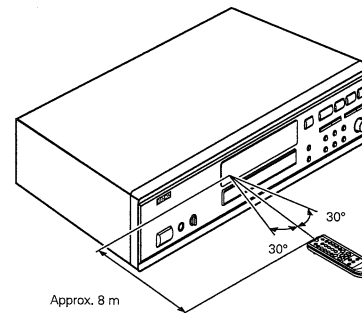


- Operate the remote control unit while pointing it towards the remote control sensor on the CD recorder (see left). When a remote control signal is received, the remote control indicator on front of the CD recorder lights briefly.
- The remote control unit can be used at a distance up to 8 meters in a straight line from the CD recorder. This distance decreases if there are obstructions blocking the signal path or when the remote control unit is operated at an angle from the remote control sensor.
- Operation is possible in a range of up to 30° left and right of the remote control sensor.

NOTES:

- The remote control may cease to function when the remote control is exposed to direct sunlight or strong artificial light.
- Do not press the operation buttons of the main unit and the remote control at the same time. Doing so will cause a malfunction.
- Batteries contain chemical substances, so they should be disposed of properly.


(3) Names and Functions of Remote Control Unit Buttons

★ Buttons without descriptions have the same function as those on the main unit.
See "PART NAMES AND FUNCTIONS" on Page 8.

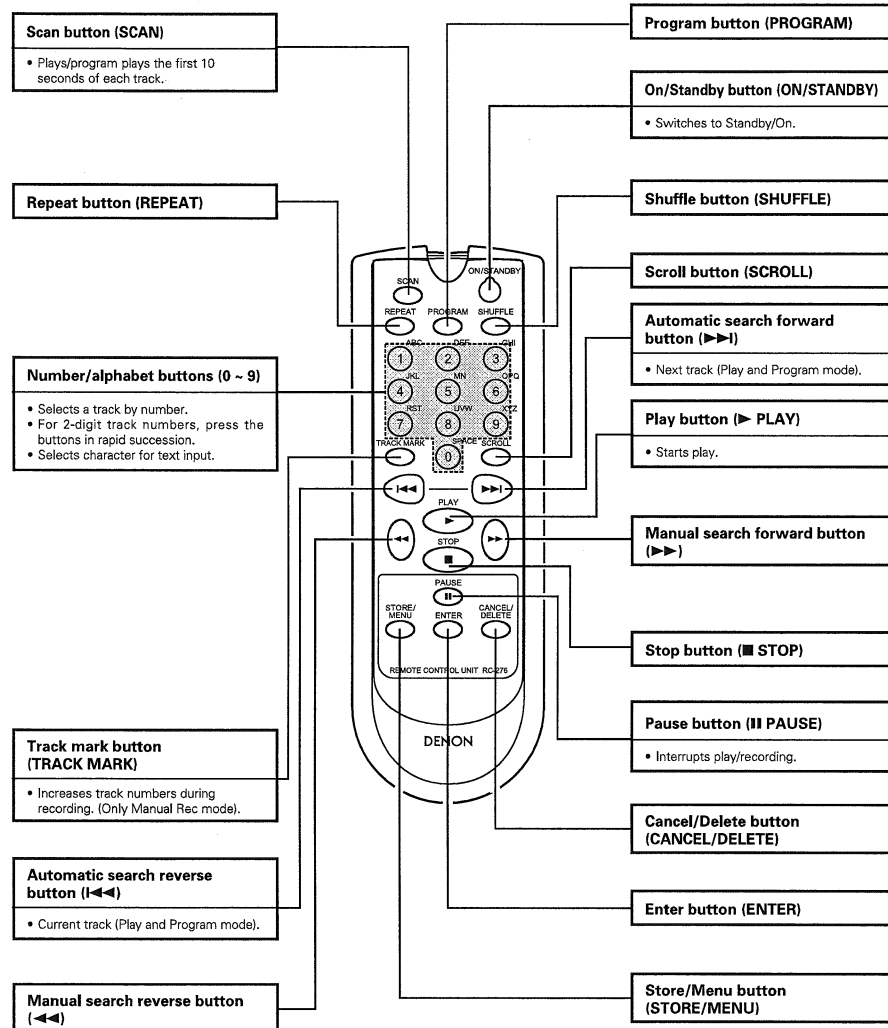

(4) Inserting Discs

- Press the OPEN/CLOSE button (▲) to open the disc tray.
 - "OPEN" lights up.
- Insert a CD, CD-R or CD-RW in the appropriate recess in the tray, label side up.
- Press the OPEN/CLOSE button (▲) to close the tray.
 - "CLOSE" lights up, followed by "READING" and the display will show the type of disc you inserted.
 - If you insert a blank or partly-recorded CD-R or unfinalized CD-RW, the CD recorder will calibrate the disc for optimum recording. During this process the display will first show "INITIALIZING" and then the number of audio tracks. Calibration can take up to 40 seconds.
 - If a CD-R/RW is finalized it will show "CD" on the display.
 - If CD-text is available the TITLE/ARTIST will scroll by.

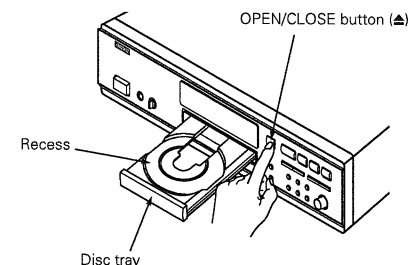

NOTES:

- If your finger should get caught in the disc tray when it closes, press the OPEN/CLOSE button (▲).
- Only Audio CDs will be accepted. If a non-audio disc is inserted, the display shows "WRONG DISC".
- For recording it is important that the blank disc is completely free from dust particles or scratches. See "Disc cleaning" on page 6.


9 RECORDING

Remarks About Recording

- To assure accurate recording, record with an ambient temperature of 30°C or less.
- Recording may stop if the unit is subject to shocks during recording. If recording stops, it may no longer be possible to use the disc normally. ("DISC ERROR")

Recording Modes

- ★ Your recorder offers several recording modes.
- ★ Pressing the REC MODE button will switch the recording mode as described below.

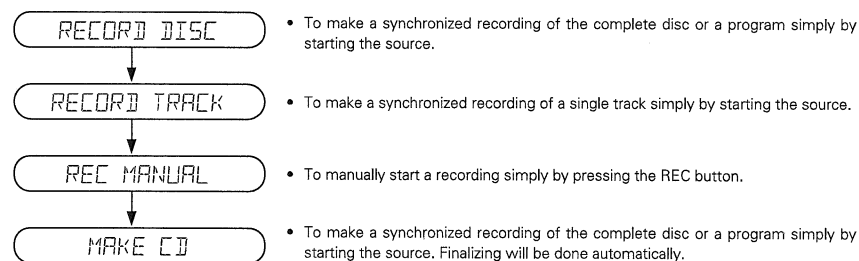

NOTE:

- Analog recording is not possible in the Make CD mode.

Some remarks on recording:

- When Auto track is ON (default setting), track numbers will automatically be increased during recording.
- By programming the source first, a compilation can be recorded.
- If a finalized CD-R disc is inserted in the CD recorder, "FINALIZED CD" will be displayed when the REC MODE button is pressed. Recording is not possible.
- If a finalized CD-RW disc is inserted in the CD recorder, "UNFINALIZE" and "PRESS ENTER" will be displayed when the REC MODE button is pressed. If ENTER button is pressed, the disc will be unfinalized.