6 REMOTE CONTROL UNIT


■ The DVD-1000 can be controlled from a distance using the included remote control unit (RC-543).

(1) Inserting Batteries


1 Remove the remote control unit's rear cover.



② Place two "AA" (R6P) batteries in the battery compartment in the direction indicated by the marks.

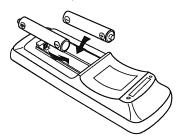

3 Close the rear cover.

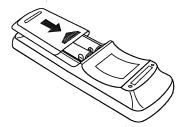


Cautions On Batteries

- Use "AA" (R6P) batteries in this remote control unit.
- Replace the batteries with new ones approximately once a year, though this depends on the frequency with which the remote control unit is used.
- If the remote control unit does not operate from close to the main unit, replace the batteries with new ones, even if less than a year has passed.
- The included battery is only for verifying operation.
 Replace it with a new battery as soon as possible.
- When inserting the batteries, be careful to do so in the proper direction, following the ⊕ and ⊖ marks in the remote control unit's battery compartment.
- To prevent damage or battery fluid leakage:

1801 40

- Do not use a new battery with an old one.
- Do not use two different types of batteries.
- Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- Remove the batteries when not planning to use the remote control unit for a long period of time.
- If the batteries should leak, carefully wipe off the fluid from the inside of the battery compartment, then insert new batteries.

(2) Using the Remote Control Unit

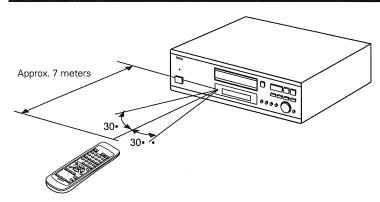

- When operating the remote control unit, point it at the remote control sensor as shown on the diagram.
- The remote control unit can be used from a direct distance of approximately 7 meters. This distance will be shorter, however, if there are obstacles in the way or if the remote control unit is not pointed directly at the remote control sensor.
- The remote control unit can be operated at a horizontal angle of up to 30° with respect to the remote control sensor.

NOTES:

- It may be difficult to operate the remote control unit if the remote control sensor is exposed to direct sunlight or strong artificial light.
- Do not press buttons on the main unit and on the remote control unit at the same time. Doing so will result in malfunction.

(3) Names and Functions of Remote Control Unit Buttons NTSC/PAL button (NTSC/PAL) Use this to switch the set's video output format (NTSC/PAL). **POWER button (POWER)** Press this to switch the power between on and standby. **OPEN/CLOSE** button (OPEN/CLOSE) **Number button** Use these to input numbers. **CLEAR button (CLEAR)** Use the +10 button to input numbers of 10 or over. Press this to clear numbers that you Example: To input 25 have input. SLOW/SEARCH button (SLOW/SEARCH) SKIP button (SKIP) PLAY button (PLAY) STOP button (STOP) H4 PH 44 STILL/PAUSE button TITLE button (TITLE) (STILL/PAUSE) **Cursor buttons/SELECT button MENU button (MENU)** (Cursor/SELECT) Use the ▲ and ▼ buttons to select in the vertical direction. **RETURN button (RETURN)** Use the ◀ and ▶ buttons to select in the horizontal direction. Press this to return to the previous Press the SELECT button to select the menu screen. item selected with the cursor buttons. ANGLE button (ANGLE) **DISPLAY button (DISPLAY)** Press this to switch the angle. Press this to display the ON-SCREEN. DENON REMOTE CONTROL UNIT PROG/DIRECT button SUBTITLE button (SUBTITLE) (PROG/DIRECT) Press this to switch the DVD's subtitle Press this to switch between the language. normal play, programmed play. **AUDIO button (AUDIO) CALL button (CALL)** For DVDs, press this to switch the Press this to check the program audio language. For video CDs, press contents. this to switch the channel between "LR", "L" and "R". RANDOM button (RANDOM) SET UP button (SET UP) Press this to play the tracks on the video or music CD in random order. **REPEAT button (REPEAT)** A-B REPEAT button Press this to play tracks repeatedly. (A-B REPEAT) Use this to repeat sections between two specific points.