 


6 REMOTE CONTROL UNIT

 
■ The DVD-3800 can be controlled from a distance using the included remote control unit (RC-553).

(1) Inserting Batteries


① Remove the remote control unit's rear cover.

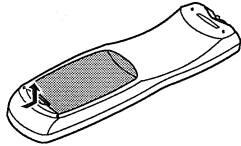

② Place two R6P/AA batteries in the battery compartment in the direction indicated by the marks.

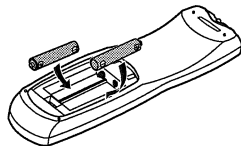


③ Close the rear cover.

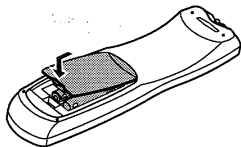 

Cautions On Batteries

- Use R6P/AA batteries in this remote control unit.
- Replace the batteries with new ones approximately once a year, though this depends on the frequency with which the remote control unit is used.
- If the remote control unit does not operate from close to the main unit, replace the batteries with new ones, even if less than a year has passed.
- The included battery is only for verifying operation. Replace it with a new battery as soon as possible.
- When inserting the batteries, be careful to do so in the proper direction, following the ⊕ and ⊖ marks in the remote control unit's battery compartment.
- To prevent damage or battery fluid leakage:
 - Do not use a new battery with an old one.
 - Do not use two different types of batteries.
 - Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- Remove the batteries when not planning to use the remote control unit for a long period of time.
- If the batteries should leak, carefully wipe off the fluid from the inside of the battery compartment, then insert new batteries.

 (2) Using the Remote Control Unit

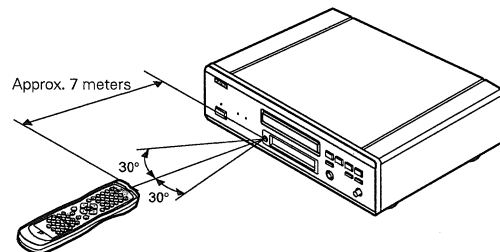

NOTES:

- It may be difficult to operate the remote control unit if the remote control sensor is exposed to direct sunlight or strong artificial light.
- Do not press buttons on the main unit and on the remote control unit at the same time. Doing so will result in malfunction.

(3) Names and Functions of Remote Control Unit Buttons

■ Button not explained here function in the same way as the corresponding buttons on the main unit.

1 POWER ON/POWER OFF buttons

Press this to switch the power between on and standby.

2 Number buttons

Use these to input numbers.
Use the +10 button to input numbers of 10 or over.
Example: To input 25

+10 - +10 - 5

3 TOP MENU button

The top menu stored on the disc is displayed.

4 Cursor buttons/ENTER button

Use the ▲ and ▼ buttons to select in the vertical direction.
Use the ◀ and ▶ buttons to select in the horizontal direction.
Press the ENTER button to select the item selected with the cursor buttons.

5 MENU button

The DVD menu stored on the disc is displayed.

6 STOP button (■)

7 SKIP buttons

8 ANGLE button

Press this to switch the angle.

9 SUBTITLE button

Press this to switch the DVD's subtitle language.

10 A-B repeat button (A-B)

Use this to repeat sections between two specific points.

11 REPEAT button

Press this to play tracks repeatedly.

12 SETUP button

Press this to display the default setting screen.

13 DIMMER button

Use this to adjust the brightness of the main unit's display. Can be switched in 4 steps, from OFF to always on.

14 ZOOM button

Press this to enlarge the image.

15 PICTURE ADJUST button (PIC. ADJ)

Press this to adjust the picture quality to suit your tastes.

16 NTSC/PAL button

Use this to switch the set's video output format (NTSC/PAL).

17 OPEN/CLOSE button

18 PROGRAM/DIRECT button (PROG/DIR)

Press this to switch between the normal play, programmed play.

19 CLEAR button

Press this to clear numbers that you have input.

20 V.S.S. button

Sets the virtual surround sound. (Functions when playing DVDs recorded in Dolby Digital with two or more channels.)

21 RETURN button

Press this to return to the previous menu screen.

22 DISPLAY button

Press this to display the ON-SCREEN.

23 CALL button

Press this to check the program contents.

24 PLAY button (▶)

25 STILL/PAUSE button (||)

26 SLOW/SEARCH buttons

27 SEARCH MODE button

Press this to change the search mode to search for groups or titles, tracks or chapters when selecting sections of discs directly using the number buttons.

28 AUDIO button

For DVDs, press this to switch the audio language. For video CDs, press this to switch the channel between "LR", "L" and "R".

29 RANDOM button

Press this to play the tracks on the video or music CD in random order.

30 MARKER button

Press this to mark places you want to see again.

31 PURE DIRECT MEMORY button (P.D. MEMORY)

Use this to make various settings to achieve higher quality sound.

32 PAGE - /PAGE + buttons

Use these to selected the desired still picture on DVD audio discs containing browseable still pictures.

