


Remote control unit


- For details on the functions of these parts, refer to the pages given in parentheses ()

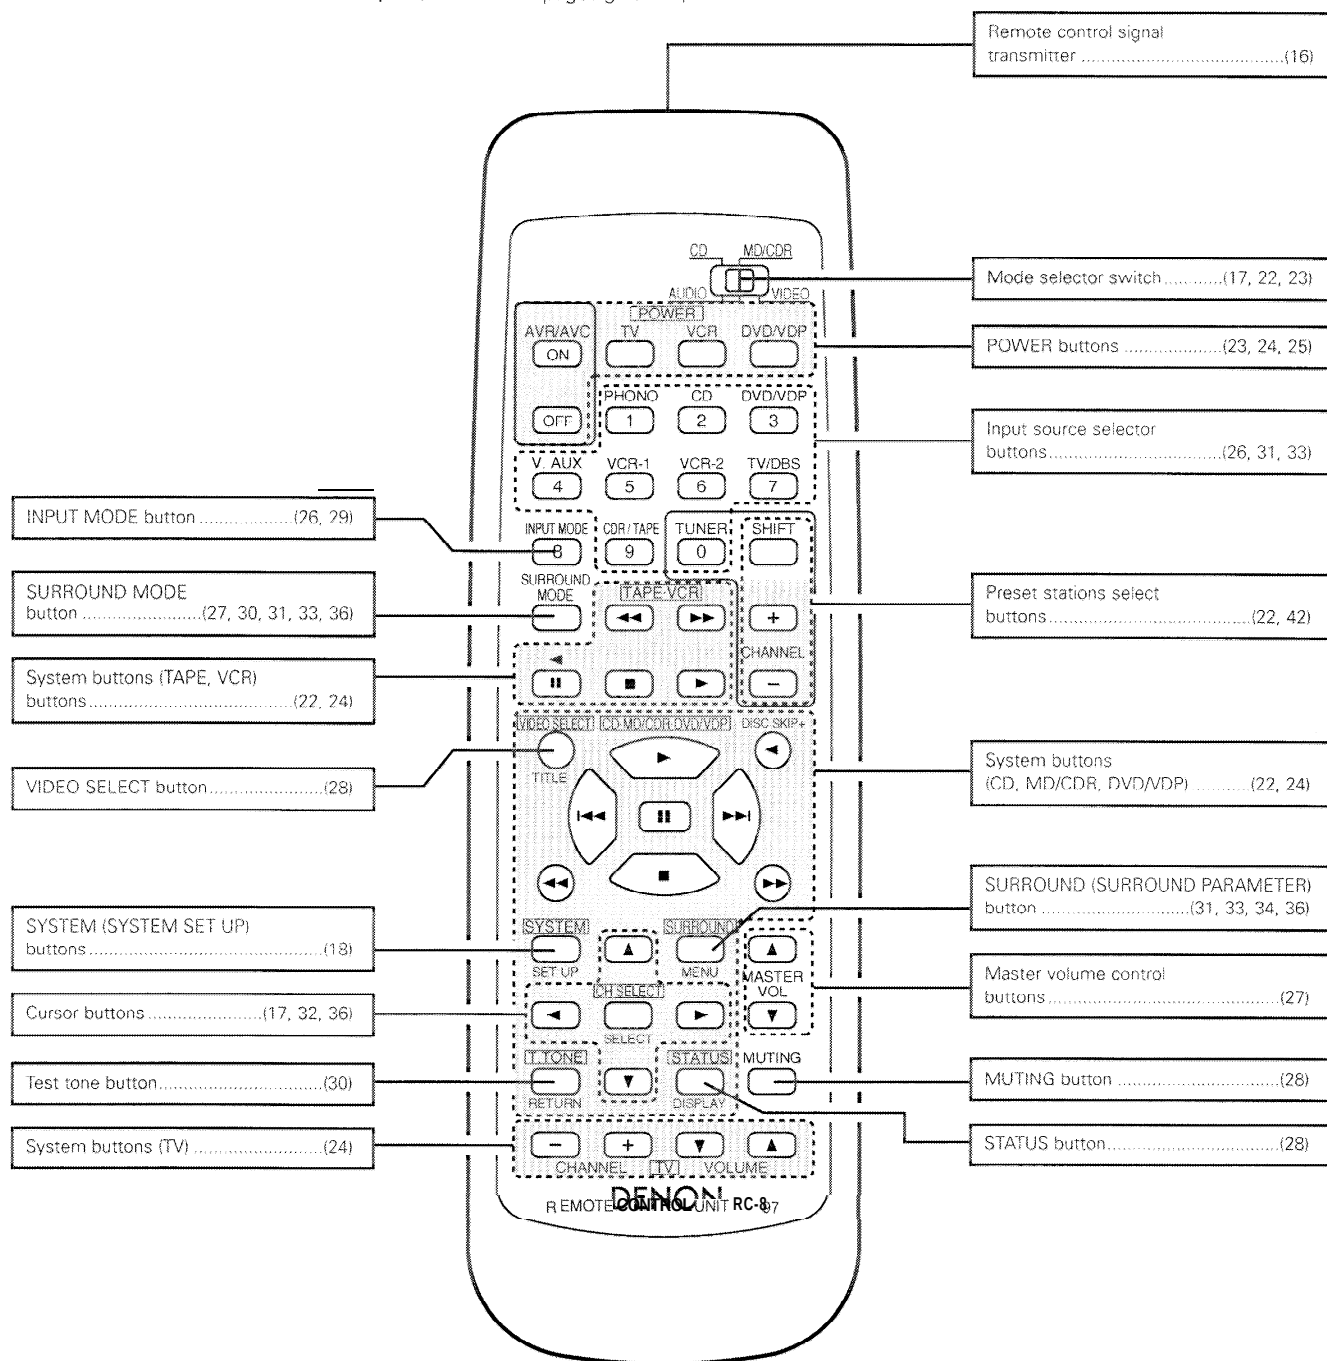


11 REMOTE CONTROL UNIT

Operating DENON audio components

DENON remote-controllable audio components can be controlled using this unit's remote control unit. Note that some components, however, cannot be operated with this remote control unit.

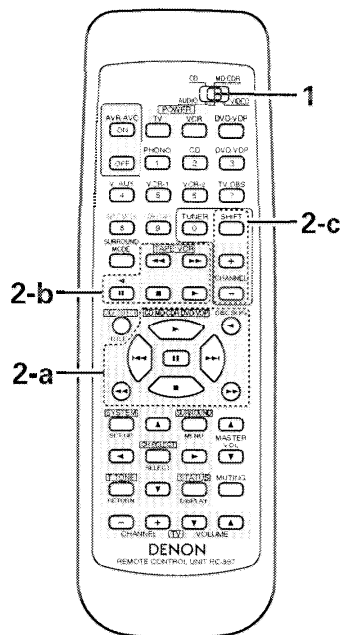


 1 Set the slide switch to the position for the component to be operated (CD or MD/CDR).




2 Use the buttons shown below to operate the audio component. For details, refer to the respective component's manual.

a. For CD player and MD/CD recorder

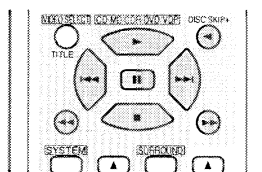


Manual search (reverse and forward)
Stop
Play
Au to search
Pause
DISC SKIP+ Switch discs (for CD changers only)

b. For tape deck (TAPE)

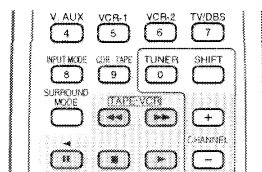

Rewind
Fast-forward
Stop
Forward play
Reverse play

c. For TUNER

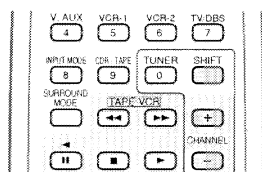

SHIFT Switch preset channel range
CHANNEL Preset channel up/down (+, -)

 
NOTE:

- Tape deck (TAPE) and 'tuner can be operated when the switch is at "AUDIO" position.

Preset memory (Audio component)

DENON components can be operated by setting the preset memory for MD or CDR. Operation is not possible for some models.

1 Set the slide switch to "MD/CDR"





2 Holding in the PLAY (▶) button, press the button for the components you want to set. (Refer to table '1'.)

Table 1: Combinations of Personal System Codes

	MASTER VOL	MASTER VOL
PLAY (▶)	MD	CDR


NOTE:

- The memory can only be preset for either the MD or the CDR.
- ※ Preset codes set upon shipment from the factory and when reset

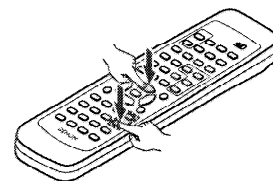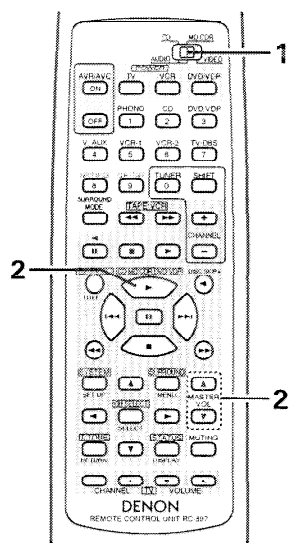


Preset memory (Video component)

DENON and other makes of components can be operated by setting the preset memory for your make of video component. This remote control unit can be used to operate components of other manufacturers without using the learning function by registering the manufacturer of the component as shown on the List of Preset Codes (pages 94, 95). Operation is not possible for some models.

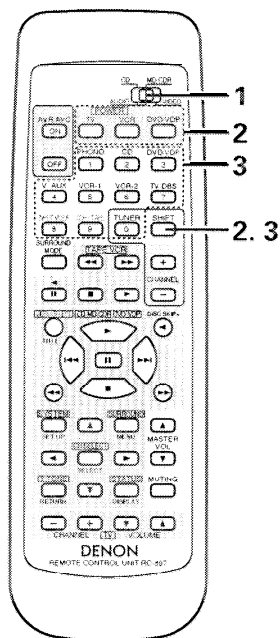


1 Set the slide switch to "VIDEO".

 


2 Holding in the SHIFT button ①, press the POWER button ② of the components (DVD/VCR, VCR or TV) you want to set.

※ Press and hold in the SHIFT button.

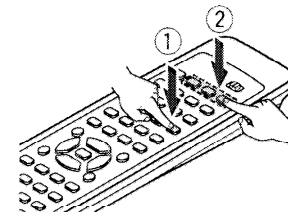

3 Holding in the SHIFT button ①, press the number buttons ② to input the preset code (consisting of 2-digit numbers) for the manufacturer of the component whose signals you want to store in the memory.

See the list on pages 94 and 95 for the preset codes (consisting of 2-digit numbers).

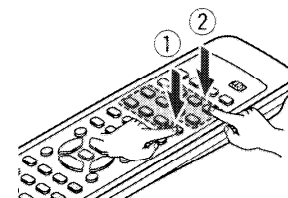


4 To continue registering other components, repeat steps 2 to 3

NOTES:

- The signals for the pressed buttons are emitted while setting the preset memory. To avoid accidental operation, cover the remote control unit's transmitting window while setting the preset memory.
- Some models and years of manufacture of components of the manufacturers listed on the List of Preset Codes cannot be used.
- The unit is equipped with several Types of remote control codes which depend on the manufacturer. If there is no operation, please change the preset code (a 2-digit number) and try again.


Operating a video component stored in the preset memory

 - 1 Set the slide switch to "VIDEO"



- 2 Operate the **video** component.
 - For details, refer to the component's operating instructions.
 - ※ Some models cannot be operated with this remote control unit.

a. For DVD player

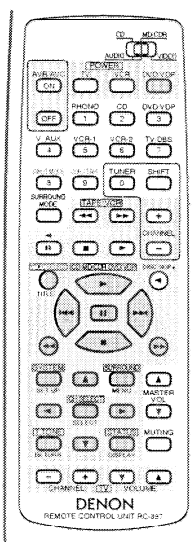


POWER	Turns power on and off
■	Stop
▶	Play
◀◀◀▶▶▶	Auto search (cue)
◀◀▶▶	Manual search (forward and reverse)
	Pause
TITLE	Call out title
MENU	Call out menu
DISPLAY	Switch display
SET UP	DVD setup
RETURN	Menu return
▲, ▼	Cursor up/down
◀, ▶	Cursor left/right
SELECT	Enter setting

NOTE:


Some manufacturers use different names for the DVD remote control buttons, so also refer to the instructions on remote control for that component.

b. For video disc player (VDP)

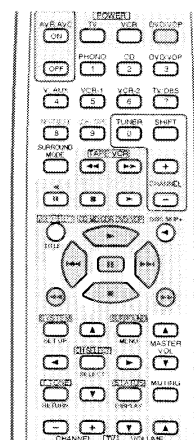


POWER	Power on/off
◀◀◀▶▶▶	Manual search (forward and reverse)
■	Stop
▶	Play
◀◀◀▶▶▶	Auto search (cue)
	Pause

c. For video deck (VCR)

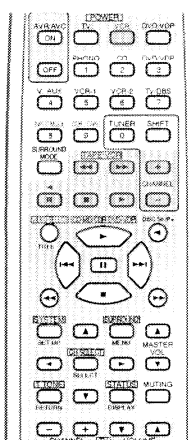

POWER	Power on/off
◀◀◀▶▶▶	Manual search (forward and reverse)
■	Stop
▶	Play
	Pause
CHANNEL	Switch channel (+, -)

d. For monitor TV

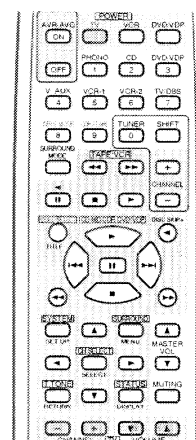

POWER	Power on/off
VOLUME	Volume up/down (▲, ▼)
CHANNEL	Switch channel (+, -)

NOTE: The TV can be operated when the switch is at any position