


Remote control unit

- For details on the functions of these parts, refer to the pages given in parentheses ().

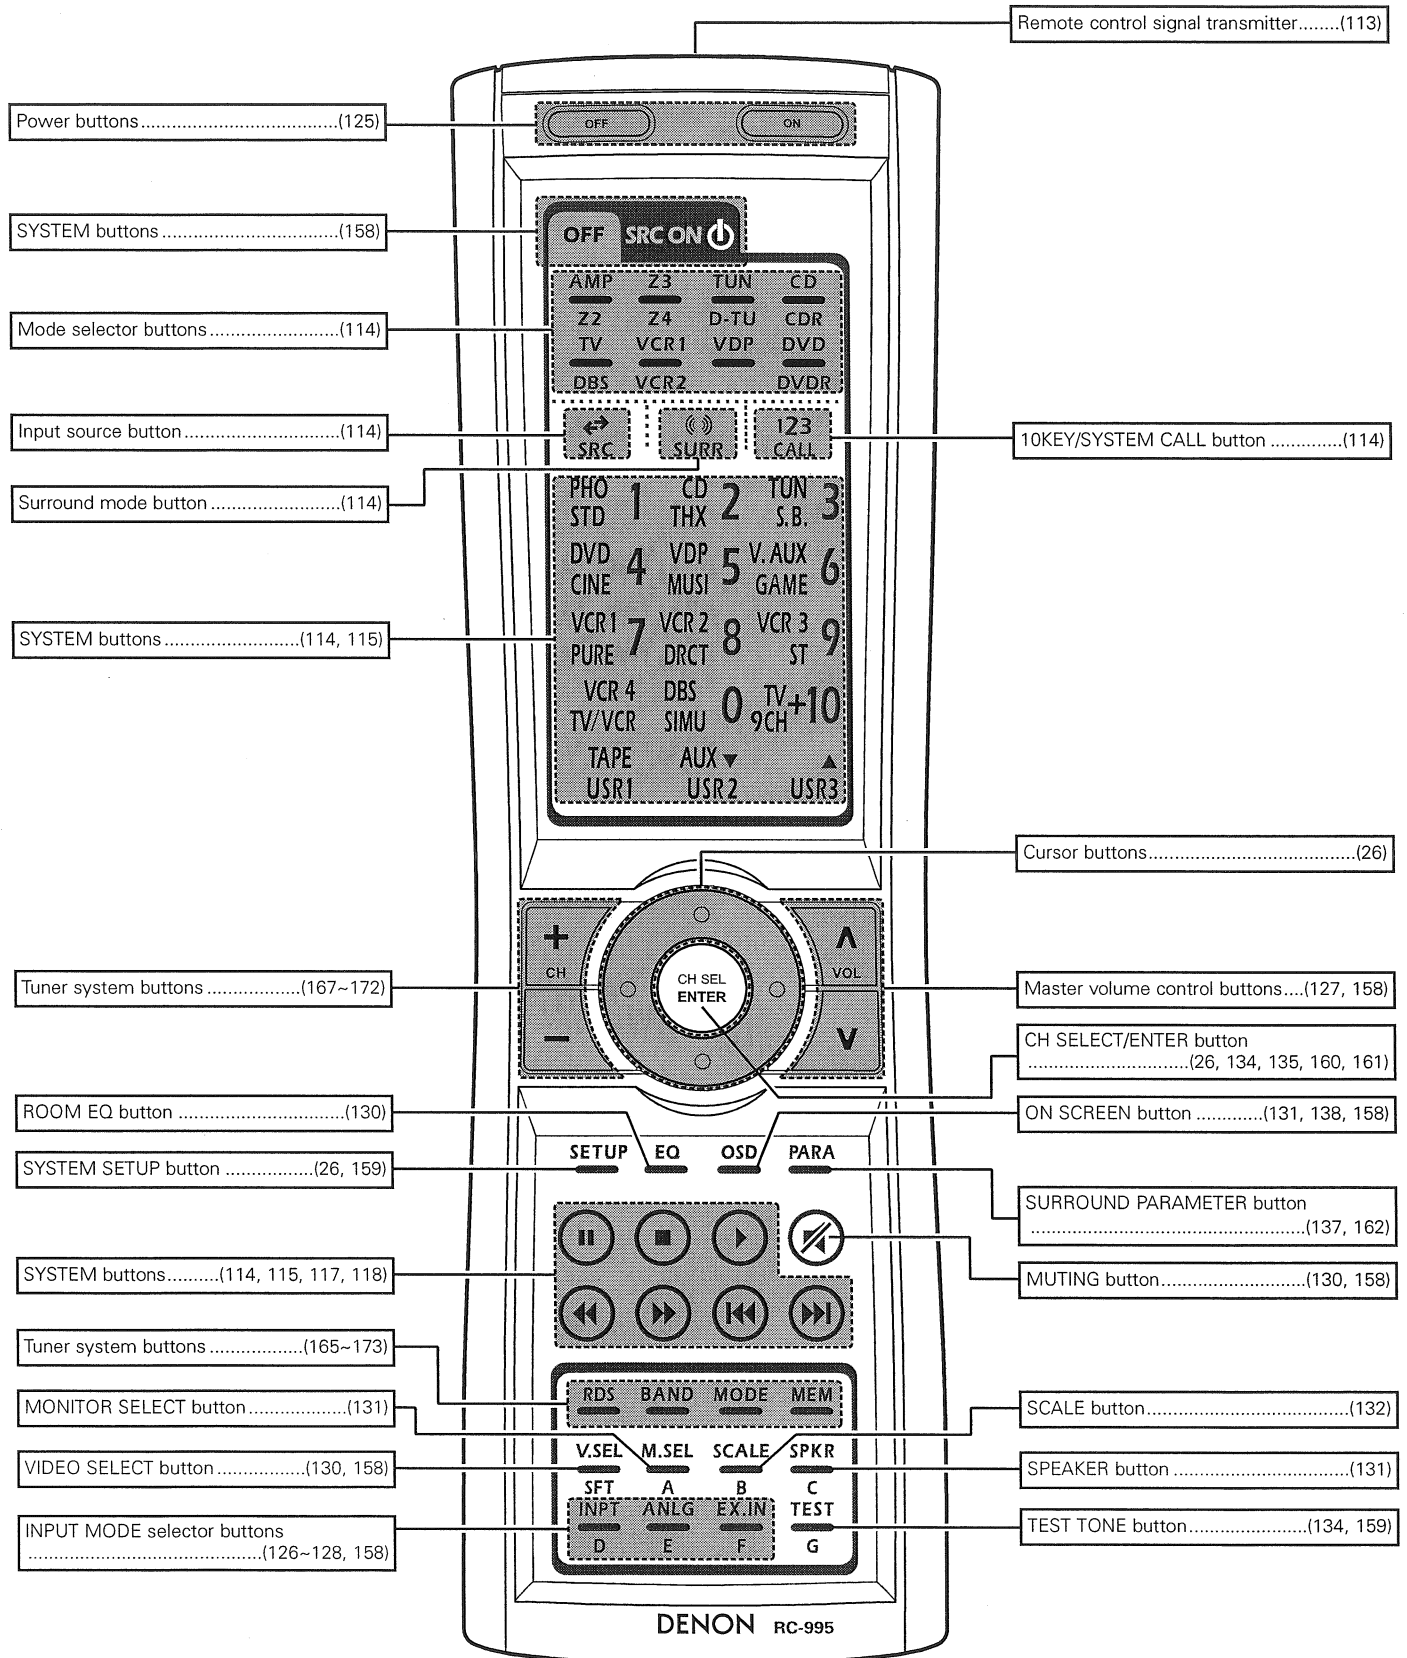


8 REMOTE CONTROL UNIT


- The included Remote control unit (RC-995) can be used to operate not only the AVR-5805 but other remote control compatible DENON components as well. In addition, the memory contains the control signals for other Remote control units, so it can be used to operate non-Denon remote control compatible products.

Inserting the Batteries


- ① Remove the Remote control unit's rear cover.

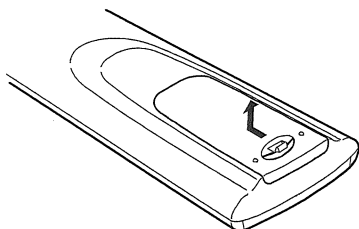

- ② Set three R03/AAA batteries in the battery compartment in the indicated direction.

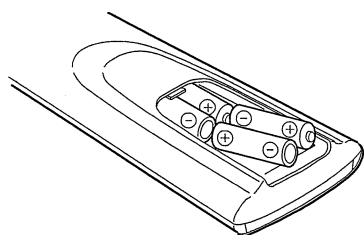


- ③ Put the rear cover back on.

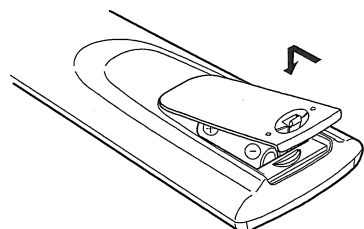

Notes on Batteries

- Use R03/AAA alkaline batteries in the Remote control unit.
- Replace the batteries with new ones if the set does not operate even when the Remote control unit is operated nearby the set. (The included battery is only for verifying operation.)
- When inserting the batteries, be sure to do so in the proper direction, following the "⊕" and "⊖" marks in the battery compartment.
- To prevent damage or leakage of battery fluid:
 - Do not use a new battery together with an old one.
 - Do not use two different types of batteries.
- Do not short-circuit, disassemble, heat or dispose of batteries in flames.
- Remove the batteries from the Remote control unit when you do not plan to use it for an extended period of time.
- If the battery fluid should leak, carefully wipe the fluid off the inside of the battery compartment and insert new batteries.
- When replacing the batteries, have the new batteries ready and insert them as quickly as possible.

Using the Remote Control Unit

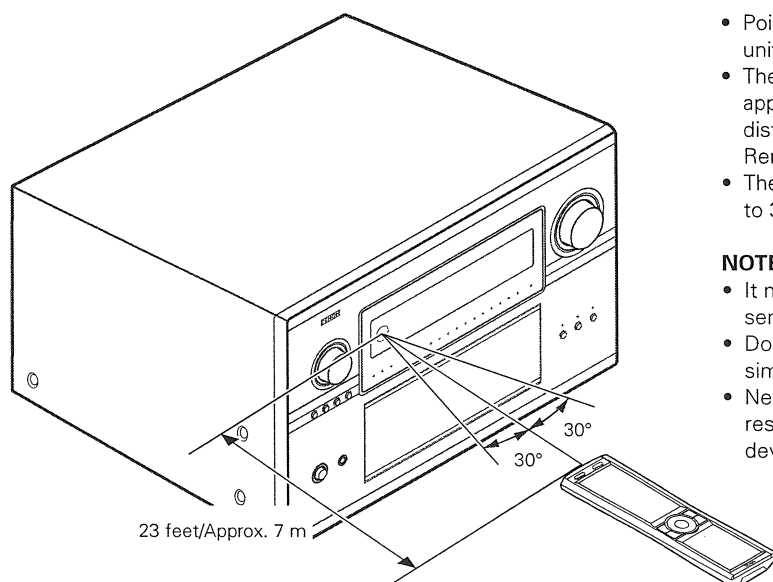

- Point the Remote control unit at the remote sensor on the Main unit as shown on the diagram.
- The Remote control unit can be used from a straight distance of approximately 23 feet/7 meters from the Main unit, but this distance will be shorter if there are obstacles in the way or if the Remote control unit is not pointed directly at the remote sensor.
- The Remote control unit can be operated at a horizontal angle of up to 30 degrees with respect to the remote sensor.

NOTES:

- It may be difficult to operate the Remote control unit if the remote sensor is exposed to direct sunlight or strong artificial light.
- Do not press buttons on the Main unit and Remote control unit simultaneously. Doing so may result in malfunction.
- Neon signs or other devices emitting pulse-type noise nearby may result in malfunction, so keep the set as far away from such devices as possible.


Operating DENON audio components

- 1 Use the mode selector buttons to select the component you want to operate.

※ The function switches as shown below each time one of the mode buttons is pressed.

AMP/Z2 : AMP, ZONE2
Z3/Z4 : ZONE3, ZONE4
TUN/D-TU : TUNER, D-TUNER*
CD/CDR : CD, CDR
TV/DBS : TV, DBS
VCR1/VCR2 : VCR1, VCR2
VDP : VDP
DVD/DVDR : DVD, DVDR

* This mode is for future use.

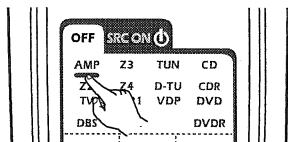

Example : Select "AMP" mode.

Select "ZONE2" mode.

AMP


22

2 Operate the audio component.

- For details, refer to the component's operating instructions.
- ※ It may not be possible to operate some models.


3 [SOURCE MENU]
• Operate the source.

- Operate the source.

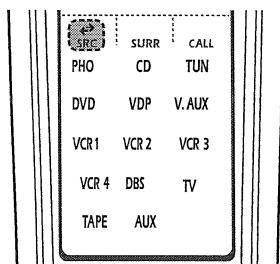



[SURROUND MENU]

- Operate the surround mode.

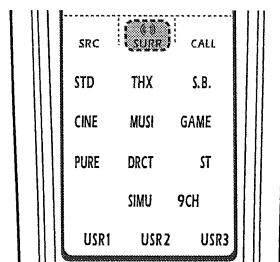


[10KEY / SYSTEM CALL MENU]

- Operate the 10KEY or SYSTEM CALL mode.

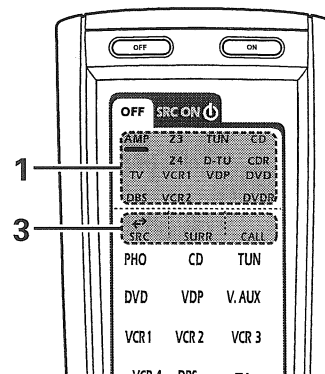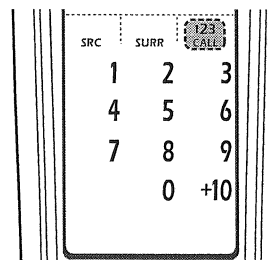


1. CD player (CD) system buttons

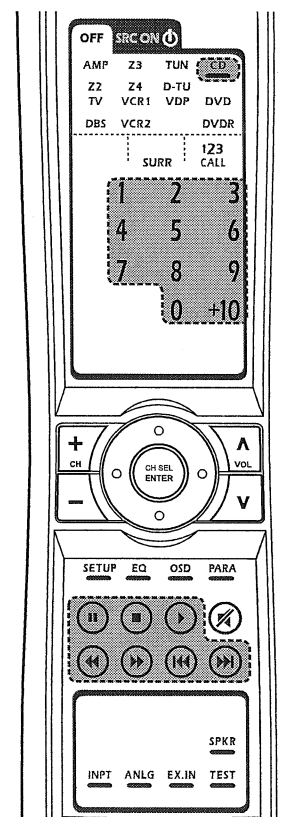


-  : Manual search
(forward and reverse)
-  : Stop
-  : Play
-  : Auto search
(to beginning of track)
-  : Pause
- 0~9, +10 : 10 Key

2. CD recorder (CDR), MD recorder (MD), Tape deck (TAPE) system buttons

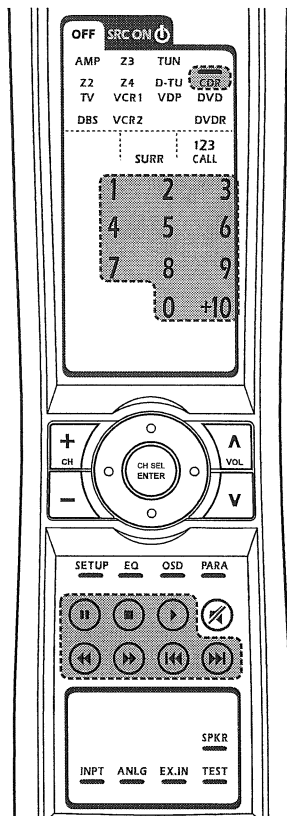

- ◀▶ : Manual search (forward and reverse)
- : Stop
- ▶ : Play
- ◀▶▶▶ : Auto search (to beginning of track)
- || : Pause
- 0~9, +10 : 10 Key

3. Tuner system buttons

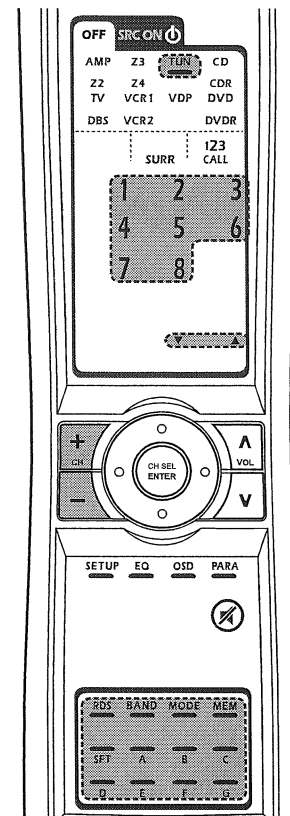

- TUNING ▲, ▼ : Tuning up/down
- BAND : Switch between AM and FM bands
- MODE : Switch between AUTO and MANUAL
- MEM : Preset memory
- SFT : Switch preset channel range
- CHANNEL +, - : Preset channel up/down
- CH A~G : Preset channel range
- 1~8 : Preset channel
- RDS : RDS search

※ The preset codes of an MD or tape player can be recorded in the CDR mode so that the MD or tape player can be operated. (See page 116)

It is only possible to set the preset memory for one player (CDR, MD or TAPE).

Preset memory

The included Remote control unit can be used to operate devices of different brands by registering the preset number corresponding to the brand of your device.

For some models the Remote control unit or the device may not operate properly. In this case, use the learning function (page 119) to store your device's remote control signals in the included Remote control unit.


For instructions on resetting the preset memory, see page 123.

- 1 Press the power ON button and the OFF button at the same time.




- 2 Press the "1" button to select preset memory.


- Setup List
 - 1: Preset memory
 - 2: Learning setup
 - 3: System call
 - 4: Punch through
 - 5: Light setup
 - 6: Reset

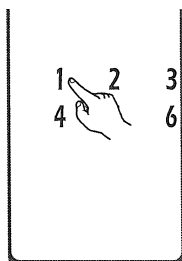

- 3 Press the Mode button for the component you want to preset, then press ENTER button.

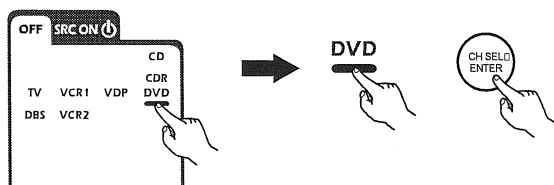

- 4 Referring to the included List of Preset Codes, use the number buttons to input the preset code (a 4-digit number) for the manufacturer of the component whose signals you want to store in the memory.

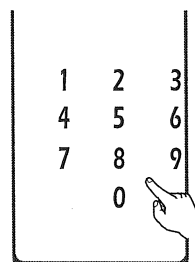


- 5 "OK" is displayed when the signals are registered and the mode is terminated.
"FAIL" is displayed when the signals are not registered, repeat steps 1 to 5.

- 6 To store the codes of another component in the memory, repeat steps 1 to 5.

NOTES:

- Depending on the model and year of manufacture, this function cannot be used for some models, even if the your device is listed on the included list of preset codes.
- Some manufacturers use more than one type of remote control code. Refer to the included list of preset codes to change the number and check it out.

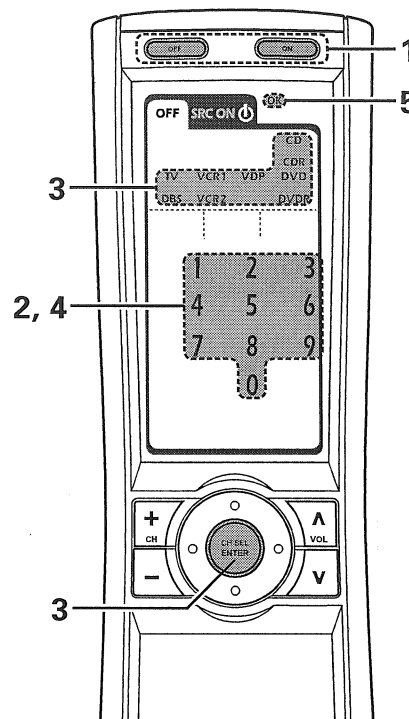


The preset codes are as follows upon shipment from the factory and after resetting:

TV, VCR1HITACHI
CD, CDR, VDP, DVD, DVDRDENON
VCR2, DBS.....SONY

DVD preset codes	0000 (default)	0517
DENON Model No.	DVD-555	DVD-800
	DVD-755	DVD-1600
	DVD-900	DVD-2000
	DVD-910	DVD-2500
	DVD-955	DVD-3000
	DVD-1000	DVD-3300
	DVD-1200	
	DVD-1500	
	DVD-1710	
	DVD-1910	
	DVD-2200	
	DVD-2800	
	DVD-2800II	
	DVD-2900	
	DVD-2910	
	DVD-3800	
	DVD-3910	
	DVD-5900	
	DVD-9000	
	DVM-715	
	DVM-1800	
	DVM-1805	
	DVM-1815	
	DVM-2815	
	DVM-4800	


Operating a component stored in the preset memory

- 1 Press the mode selector button for the component you want to operate.

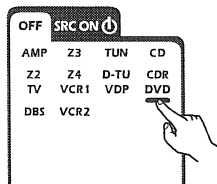

NOTE:


- For the DVD player remote control buttons, function names may differ according to manufacturer. Compare with the remote control operation of the various components.

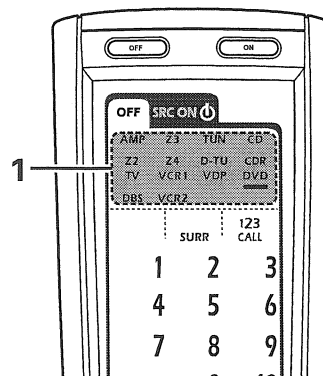


- 2 Operate the component.
 - For details, refer to the component's operating instructions.
 - * Some models cannot be operated with this Remote control unit.

1. DVD player (DVD), DVD recorder (DVD R) system buttons

- SRC ON : Power on
 OFF : Power off
 (DENON DVD only)
 <<, >> : Manual search
 (forward and reverse)
 ■ : Stop
 ▶ : Play
 <<<, >>> : Auto search
 (to beginning of track)
 || : Pause
 SETUP : Setup
 TOP : Top menu
 MENU : Menu
 RTN : Return
 ▲, ▼, ◀, ▶ : Cursor up, down, left and right
 ENTER : Enter
 AUD : Switch the audio language
 DISP : Display
 SUB : Switch the subtitle
 AGL : Switch the angle
 0~9, +10 : 10 key

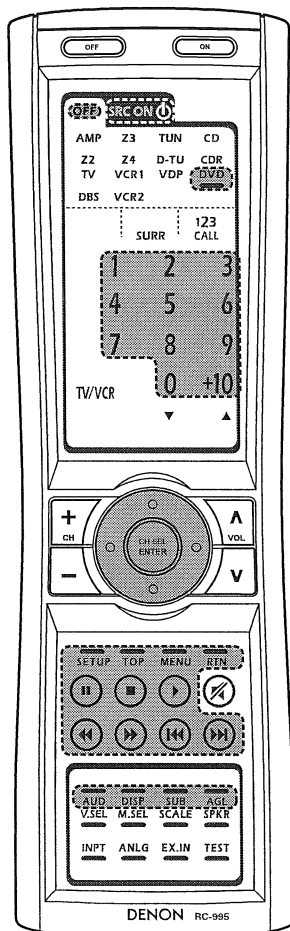


2. Video disc player (VDP) system buttons

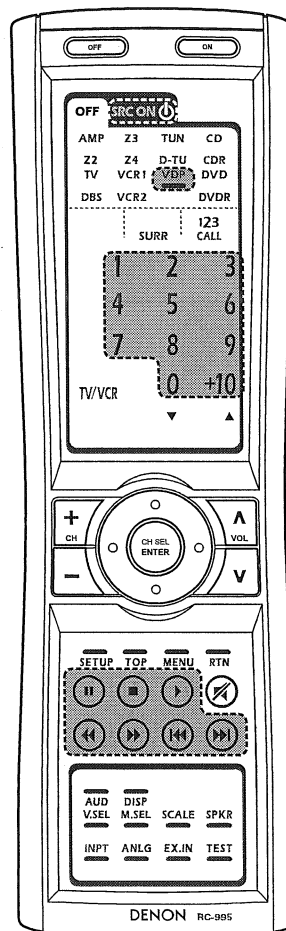


- SRC ON : Power on/Standby
 <<, >> : Manual search (forward and reverse)
 ■ : Stop
 ▶ : Play
 <<<, >>> : Auto search (cue)
 || : Pause
 0~9, +10 : 10 key

3. Video deck (VCR-1/VCR-2) system buttons

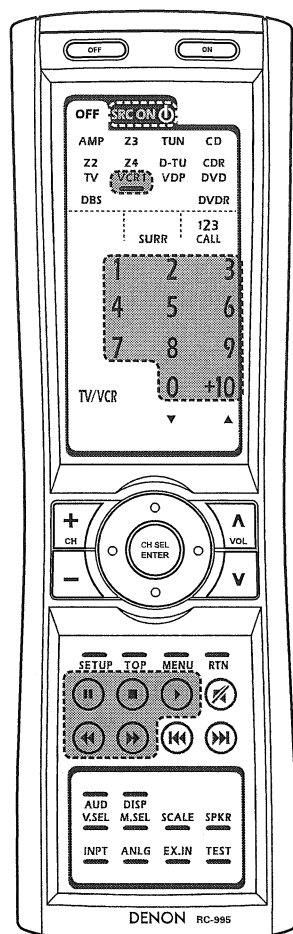

- SRC ON : Power on/Standby
- ◀▶ : Manual search (forward and reverse)
- : Stop
- ▶ : Play
- ⏸ : Pause
- 0~9, +10 : 10 key

4. Monitor TV (TV),digital broadcast satellite (DBS) tuner and cable (CABLE) system buttons

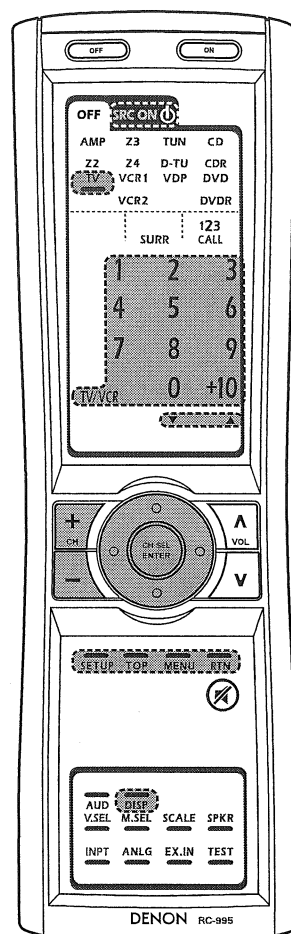

- SRC ON : Power on/standby
- SETUP : Setup
- TOP : Top menu
- MENU : Menu
- RTN : Return
- ▲, ▼, ◀, ▶ : Cursor up,down,left and right
- ENTER : Enter
- DISP : Switch display
- Channel +, - : Switch channels +,-
- 0~9, +10 : 10 key
- TV/VCR : Switch between TV and video player
- VOL ▲, ▼ : Volume up/down

※ The preset codes of cable box decoder can be recorded in the DBS mode so that the cable device can be operated. (See page 116)
It is only possible to set the preset memory for either the DBS or cable device.


Learning function

If an AV component is not a DENON product, or if it cannot be operated via codes provided in the AVR-5805 remote control's internal preset memory, or if its codes cannot be successfully learned by the AVR-5805 remote control, then you should use the remote control that was supplied with that AV component to operate the component.


- 1 Press the power ON button and the OFF button simultaneously.



- 2 Press the "2" button to select Learning setup.

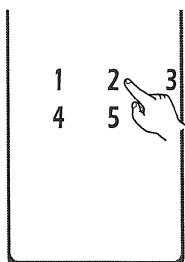


- 3 Press the Mode button for the component you want to learn, then press the ENTER button. Learning is not possible for the AMP, ZONE2, ZONE3 and ZONE4 modes.


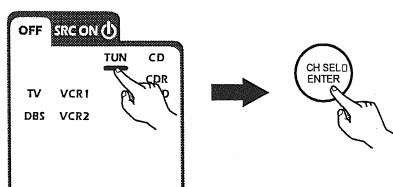


- 4 Buttons that allow learning will light. Press the button that you wish to be learned. **The display will go off and the unit will enter the learning standby mode.**

- To cancel, press the power ON button and the OFF button simultaneously.

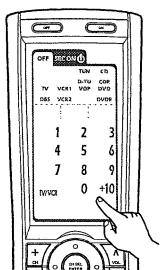


- 5 Point the Remote control units directly at each other and press and hold in the button on the other Remote control unit which you want to "learn".

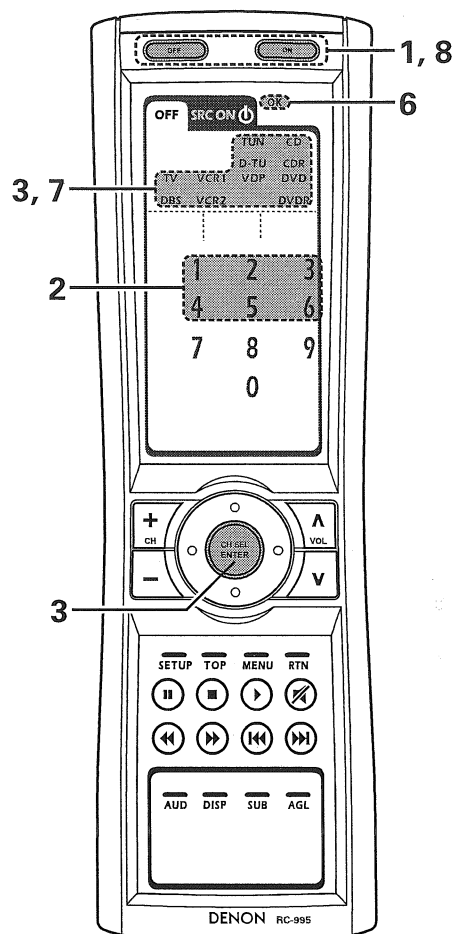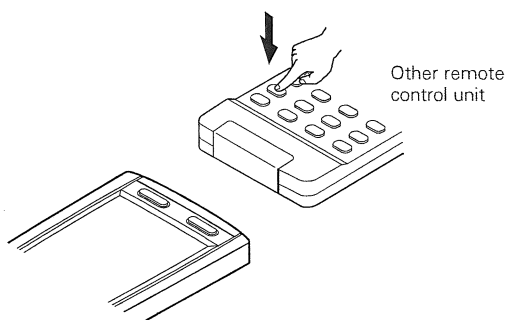

- 6 "OK" appears on the Remote control unit's display and learning is completed.

- Other keys can be "learned" by repeating steps 5 to 6.
- "FAIL" appears on the Remote control unit's display, repeating steps 4 to 6.

- 7 The mode can be switched by pressing a mode selector button. The "Buttons that allow learning" display reappears and the learning standby mode is set.

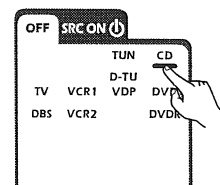

- 8 To cancel the learning mode, press the power ON button and the OFF button simultaneously again.



System call


The accessories Remote control unit is equipped with "system call" function allowing a series of remote control signals to be transmitted by pressing a single button.

This function can be used for example to turn on the amplifier's power, select the input source, turn on the monitor TV's power, turn on the source component's power and set the source to the play mode, all at the touch of a single button.

(1) System call buttons



Up to 12 signals each can be stored at the "CALL1" ~ "CALL6" buttons.

The System Call function can be used in the AMP, ZONE2, ZONE3 and ZONE4 modes.

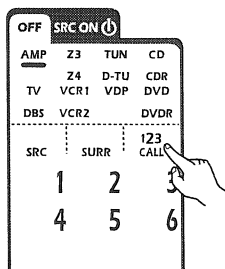


(2) Storing system call signals

  
- 1 Press the power ON button and the OFF button at the same time.



- 2 Press the "3" button to select system call setting.


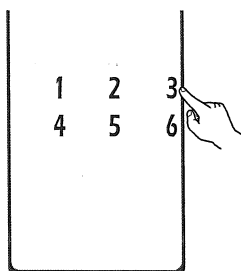


- 3 Press the Mode button for the component you want to register at the system call button, then press the ENTER button.

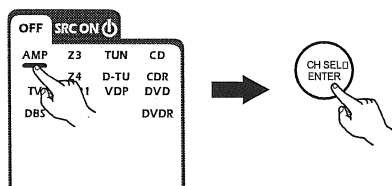

- 4 Press the button you want to register.


- 5 The mode can be switched by pressing a mode button.

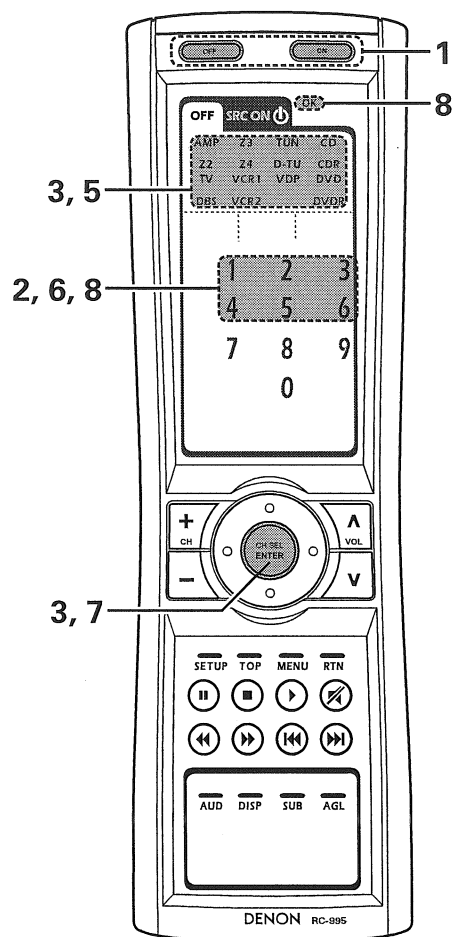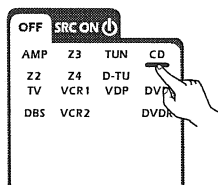

- 6 Repeat steps 4 and 5 to register the desired buttons. Up to 12 signals each can be stored at the CALL1~CALL6.

- 7 Press the ENTER button after the button registration is completed. There will be a changeover to the System Call registration screen.

- 8 Press buttons from "CALL 1" to "CALL 6" to register the System Call.
 - "OK" is displayed and the set returns to the normal operating mode.

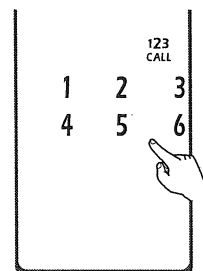

NOTES:

- The remote control signals of the buttons pressed while registering the system call signals are emitted, so be careful not to operate the components accidentally (cover the remote sensors, for example).
- If you exceed the number of signals that can be registered, there will be a changeover to the System Call registration screen.

(3) Using the system call function

- 1 Press the button at which the system call signals have been stored.
 - The stored signals are transmitted successively.

 
Punch Through

(1) Punch through button


Buttons used in the CD, CDR, DVD, DVDR, VDP, VCR1 and VCR2 modes can be assigned to the buttons which are not normally used in the AMP, ZONE2, ZONE3, ZONE4, TV and DBS modes. For example, when the CD mode is set to the punch through mode in the AMP mode, the CD mode's PLAY, STOP, MANUAL SEARCH, AUTO SEARCH and PAUSE buttons' signals are sent in the AMP mode.

(2) Making the punch through setting


- 1 Press the power ON button and the OFF button at the same time.





- 2 Press the "4" button to select punch through setting.

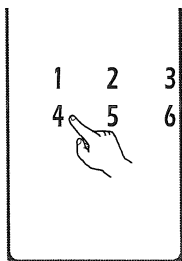

- 3 Press the mode button for the component you want to make the punch through setting, then press the ENTER button.

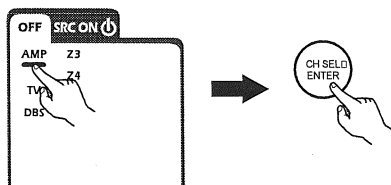

- 4 Press the mode button for the component you want to punch through, then press the ENTER button.
 - The punch through is set and the set returns to the normal operating mode.

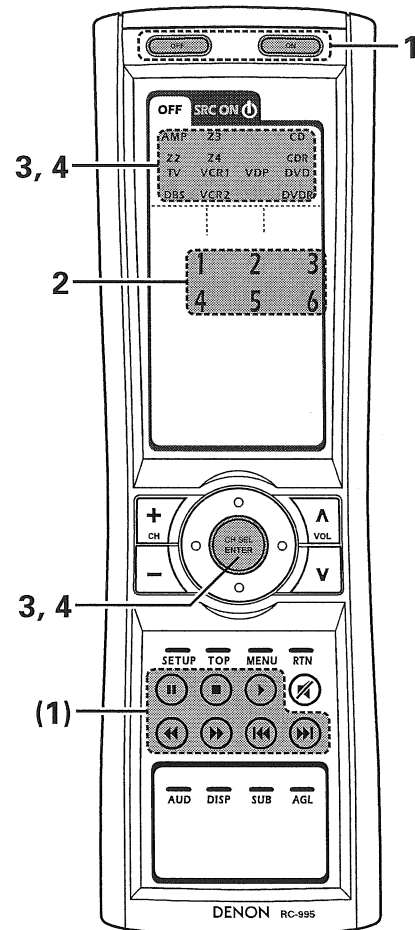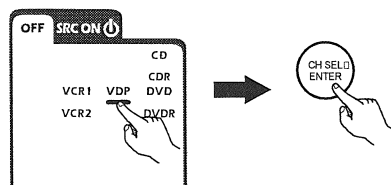


Resetting

(1) Resetting the preset memory

- 1 Press the power ON button and the OFF button at the same time.




- 2 Press the "6" button to select Resetting.

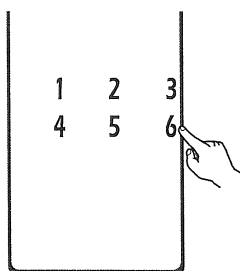


- 3 Press the "1" button to resetting the preset memory.

Resetting List


- 1: Resetting the preset memory
- 2: Resetting the "Learned" buttons
- 3: Resetting the system call
- 4: Resetting the punch through setting
- +10: All reset function (factory default)

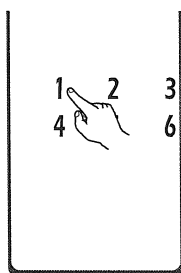


- 4 The mode buttons that were set in preset memory will all light.

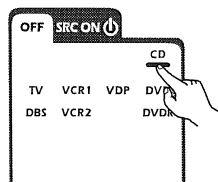

- 5 Press the mode button you want to resetting, then press the ENTER button.

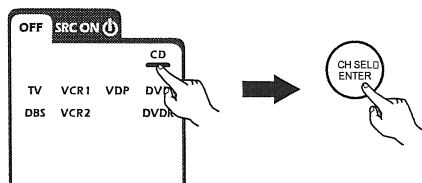

The set returns to the normal operating mode.

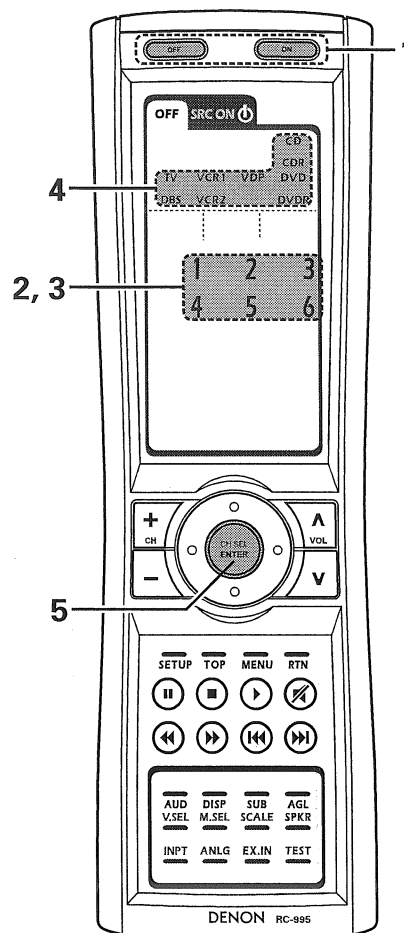

(2) Resetting "learned" buttons

- 1** Press the power ON button and the OFF button at the same time.
- 2** Press the "6" button to select resetting.
- 3** Press the "2" button to resetting the "learned" buttons.
- 4** The mode buttons will all light.
- 5** Press the mode button you want to resetting, then press the ENTER button.
The set returns to the normal operating mode.

(3) Resetting the system call buttons

- 1** Press the power ON button and the OFF button at the same time.
- 2** Press the "6" button to select resetting.
- 3** Press the "3" button to resetting the system call buttons.
- 4** All buttons of System Call will light.
- 5** Press the button you want to resetting, then press the ENTER button.
The set returns to the normal operating mode.

(4) Resetting the punch through setting

- 1** Press the power ON button and the OFF button at the same time.
- 2** Press the "6" button to select resetting.
- 3** Press the "4" button to resetting the "punch through" setting.
- 4** All punched through mode buttons will light.
- 5** Press the mode button you want to resetting, then press the ENTER button.
The set returns to the normal operating mode.

(5) All reset function


- 1** Press the power ON button and the OFF button at the same time.
- 2** Press the "6" button to select resetting.
- 3** Press the "+10" button to clear the entire system memory, which will restore the Remote control unit to the factory default settings. This operation will take approximately 20 seconds. Only use this if you wish to clear all customized settings and memories and restore the unit to its out-of-the-box factory default settings.

9 OPERATION


Operating the Remote control unit

1 Select "AMP" using the AMP/Z2 button.

2 [SOURCE MENU]
• Operate the source.

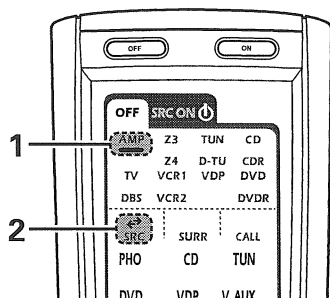

3 [SURROUND MENU]
• Operate the surround mode.

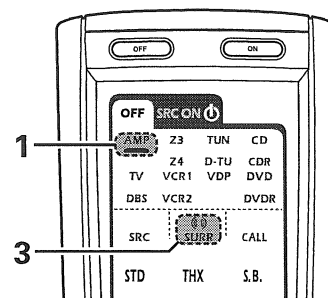

Before operating


1 Refer to "CONNECTIONS" (pages 9 to 21) and check that all connections are correct.

2 Press the POWER switch (button).



- **ON**
The power turns on and the power indicator lights.
Set the power switch to this position to turn the power on and off from the included Remote control unit.
- **OFF**
The power turns off and indicator is off.
In this position, the power cannot be turned on and off from the Remote control unit.

3 Turn on the power
Press the POWER ON/STANDBY switch (button).


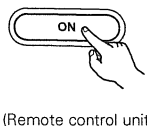


- When pressed, the power turns on and the display lights.
The sound is muted for several seconds, after which the unit operates normally.
- When pressed again, the power turns off, the standby mode is set and the display turns off.
- Whenever the ON/STANDBY button is in the STANDBY state, the apparatus is still connected to the AC line voltage. Please be sure to turn off the power switch or unplug the cord when you leave home for, say, a vacation.

4 Select "AMP" using the AMP/Z2 button.
(only when operating with the Remote control unit)



(Remote control unit)

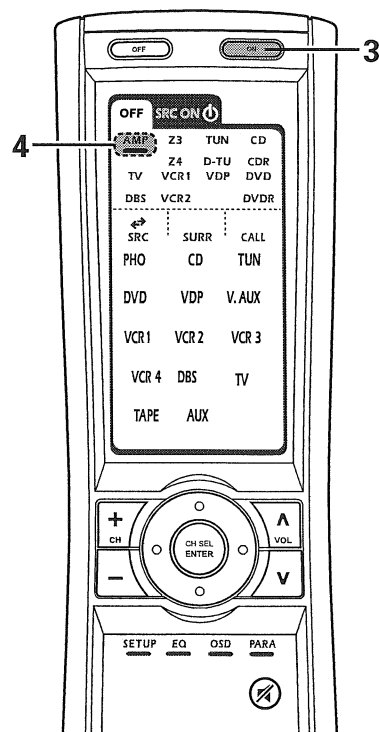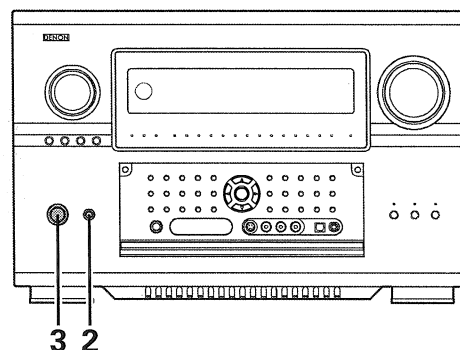

DENON

プリセットコード一覧表 / List of Preset Codes / Liste von voreingestellten Codes / Liste des codes pré-réglés / Lista dei codici pre-regolati / Lista de Códigos Pre-ajustados / Lijst van vooringestelde codes / Förteckning över förinställda koder / 預選代碼一覽表 / 预选代码一覽表

ケーブルのセットアップコード
SETUP CODES FOR CABLE
SETUP-CODES FÜR KABEL
CODES DE REGLAGE POUR CABLE
REGOLAZIONE CODICI PER CAVI
AJUSTAR CÓDIGOS PARA CABLE
INSTEELCODES VOOR KABEL
INSTÄLLNINGSKODER FÖR KABEL-TV-MOTTAGARE
纜設置代碼
线纜設置代碼

A

ABC..... 0030, 0035
Americast..... 0926

B

Bell South..... 0926
Birmingham Cable
Communications..... 0303
British Telecom..... 0030

C

Cable & Wireless..... 1095

D

Daeryung..... 0904, 1904, 0504, 0035
Director..... 0503

F

Filmnet..... 0470

G

General Instrument..... 0503, 0837, 0303, 0030
GoldStar..... 0171

H

Hamlin..... 0036, 0300

J

Jerrold..... 0503, 0837, 0303, 0030

L

LG..... 0171

M

MNet..... 0470
Memorex..... 0027
Motorola..... 0503, 0837, 0303, 1133

N

NTL.....1095
Noos.....0844

O

Ono.....1095

P

PVP Stereo Visual Matrix... .0030
Pace......0264, 1087, 1095
Panasonic......0027, 0035, 0134
Paragon......0027
Philips......0332, 0344
Pioneer......0904, 1904, 0171, 0560
Pulsar......0027

Q

Quasar......0027

R

Regal......0306, 0300
Runco......0027

S

Sagem......0844
Samsung......0027, 0171
Scientific Atlanta......0904, 1904, 0504, 0035
Sony......1033
Starcom......0030
Supercable......0303

T

TS......0030
Tele+1......0470
Telewest......1095
Torx......0030
Toshiba......0027
Trans PX......0303

U

United Cable......0030

Z

Zenith......0027, 0552, 0926

CD プレーヤーのセットアップコード
 SETUP CODES FOR CD PLAYERS
 SETUP-CODES FÜR CD-PLAYER
 CODES DE REGLAGE POUR LECTEURS CD
 REGOLAZIONE CODICI PER LETTORE CD
 AJUSTAR CÓDIGOS PARA LOS REPRODUCTORES DE CD
 INSTELCODES VOOR CD-SPELERS
 INSTÄLLNINGSKODER FÖR CD-SPELARE
 鐳射唱盤播放機設置代碼
 鐳射唱盤播放机设置代码

A

Aiwa 0184
 Arcam 0184
 Audio Research 0184
 AudioTon 0184
 Audiolab 0184
 Audiomeca 0184

C

Cairn 0184
 California Audio Labs. 0056
 Carver 0184, 0206
 Cyrus 0184

D

DKK 0027
 DMX Electronics 0184
 Denon 0000
 Dynamic Bass 0206

E

Emerson 0332

F

Fisher 0206

G

Genexxa 0059, 0332
 Goodmans 0332
 Grundig 0184

H

Harman/Kardon 0184, 0200
 Hitachi 0059

J

JVC 0099

K

Kenwood 0055, 0064
 Krell 0184

L

LXI 0332
 Linn 0184

M

MCS 0056
 Magnavox 0184, 0332
 Marantz 0056, 0184
 Matsui 0184
 Memorex 0332

Meridian 0184
 Micromega 0184
 Miro 0027
 Mission 0184
 Myryad 0184

N

NAD 0027
 NSM 0184
 Naim 0184

O

Optimus 0027, 0059, 0064, 0206, 0332

P

Panasonic 0056
 Philips 0184
 Pioneer 0059, 0332
 Polk Audio 0184
 Proton 0184

Q

QED 0184
 Quad 0184
 Quasar 0056

R

RCA 0059, 0206, 0332
 Realistic 0206
 Revox 0184
 Rotel 0184

S

SAE 0184
 Sansui 0184, 0332
 Sanyo 0206
 Scott 0332
 Sears 0332
 Sharp 0064
 Simaudio 0184
 Sonic Frontiers 0184
 Sony 0027
 Symphonic 0332

T

TAG McLaren 0184
 Tandy 0059
 Technics 0056
 Thorens 0184
 Thule 0184

U

Universum 0184

V

Victor 0099

W

Wards 0184

カセットプレーヤーのセットアップコード
 SETUP CODES FOR CASSETTE PLAYERS
 SETUP-CODES FÜR CASSETTEN-PLAYER
 CODES DE REGLAGE POUR LECTEURS DE CASSETTE
 REGOLAZIONE CODICI PER RIPRODUTTORE A CASSETTE
 AJUSTAR CÓDIGOS PARA REPRODUCTORES DE CASSETTE
 INSTELCODES VOOR CASSETTESPELERS
 INSTÄLLNINGSKODER FÖR KASSETTBANDSPELARE
 卡式錄音座設置代碼
 卡式录音座设置代码

LDのセットアップコード
 SETUP CODES FOR LASER DISC
 SETUP-CODES FÜR LASER-DISCS
 CODES DE REGLAGE POUR DISQUE LASER
 REGOLAZIONE CODICI PER DISCHI LASER
 AJUSTAR CÓDIGOS PARA DISCOS LASER
 INSTELCODES VOOR LASERDISC
 INSTÄLLNINGSKODER FÖR LASER DISC-SPELARE
 鐳射影碟播放機設置代碼
 鐳射影碟播放机设置代码

A
 Aiwa 0056

C
 Carver 0056

D
 Denon 0001

G
 Grundig 0056

H
 Harman/Kardon 0056

M
 Magnavox 0056
 Marantz 0056
 Myryad 0056

O
 Optimus 0054

P
 Philips 0056
 Pioneer 0054
 Polk Audio 0056

R
 RCA 0054
 Revox 0056

S
 Sansui 0056
 Sony 0270

T
 Thorens 0056

W
 Wards 0054

C
 Carver 0091

D
 Denon 0000, 0086

M
 Marantz 0091
 Mitsubishi 0086

N
 NAD 0086
 Nagsmi 0086

O
 Optimus 0086

P
 Philips 0091
 Pioneer 0086

S
 Salora 0091
 Sony 0228

T
 Telefunken 0086

DBSのセットアップコード
 SETUP CODES FOR DBS
 SETUP-CODES FÜR DIGITALEN SENDESATELLITEN-TUNER
 CODES DE REGLAGE POUR TUNER D'ÉMISSION PAR SATELLITE
 REGOLAZIONE CODICI PER SINTONIZZATORE VIA SATELLITE PER TRASMISSIONI DIGITALI
 AJUSTAR CÓDIGOS PARA SINTONIZADOR DE EMISIONES DIGITALES POR SATELITE
 INSTELCODES VOOR DIGITALE SATELLIETONTVANGER
 INSTÄLLNINGSKODER FÖR SATELLITMOTTAGARE
 數碼廣播衛星設置代碼
 数碼广播卫星设置代码

A

@sat 1327
 Absat 0150
 Alba 0482
 AlphaStar 0799
 Amstrad 0874
 Aston 0169, 1156
 Astro 0200
 Atsat 1327
 Avalon 0423

B

Blaupunkt 0200
 British Sky Broadcasting ... 0874, 1202

C

Canal Digital 0880
 Canal Satellite 0880
 Canal+ 0880
 Chaparral 0243
 Citycom 1203
 Connexions 0423
 Crossdigital 1136
 Cyrus 0227

D

D-box 0750, 1154
 DMT 1102
 DNT 0227, 0423
 Daeryung 0423
 Daewoo 1323
 Digenius 0326
 DirecTV 0419, 0593, 0666, 1169, 0274,
 0776, 1776, 0751, 0846, 1883,
 1103, 1136
 Dish Network System ... 1032, 0802
 DishPro 1032, 0802
 Distratel 0111
 Dream Multimedia 1264

E

Echostar 1032, 0802, 0194, 0423, 0637,
 0880, 0898, 1113
 Engel 1044
 Expressvu 0802

F

FTE 0890
 Finlux 0482
 Fracarro 0898

Fuba 0423

G

GE 0593
 GOI 0802
 Galaxis 0890, 1138
 General Instrument 0896
 Gold Box 0880
 Grundig 0200, 0874

H

HTS 0802
 Hirschmann 0200, 0423
 Hitachi 0846, 0482
 Hughes Network Systems .. 1169, 0776, 1776
 Humax 0890, 1203

I

InVideo 0898

J

JVC 0802

K

Kathrein 0150, 0200, 0227, 0276, 0685,
 1248
 Kreiselmeier 0200

L

Labgear 1323
 Logix 1044
 Lorenzen 0326

M

Magnavox 0751, 0749
 Manhattan 0482, 1044, 1110
 Marantz 0227
 MediaSat 0880
 Memorex 0751
 Metronic 0111
 Mitsubishi 0776
 Motorola 0896
 Myryad 0227

N

Next Level 0896
 Nokia 0482, 0750, 0778, 1154, 1250,
 1750

O

OctalTV 1032
 Orbitech 1127

P

Pace 0482, 0874, 1202, 1350
Panasonic 0274, 0728, 0874, 1347
Panda 0482
Paysat 0751
Philips 1169, 0776, 1776, 0751, 1103,
0749, 0160, 0227, 0482, 0880
Pioneer 0880
Promax 0482
Proscan 0419, 0593

R

RCA 0419, 0593, 0882, 0170
RFT 0227
RadioShack 0896
Radiola 0227
Radix 0423

S

SKY 0883, 0874, 1202
SM Electronic 1227
Sabre 0482
Sagem 0847, 1141, 1280
Samsung 1303, 1136, 1044, 1319
Sat Control 1327
Satstation 1110
Schwaiger 1138
Seemann 0423
Siemens 0200
Sony 0666, 1666, 0874
Star Choice 0896
Strong 1327

T

TPS 0847, 1280
Tantec 0482
TechniSat 1126, 1127
Telestar 1127
Thomson 0482, 0880, 1073, 1318
Topfield 1233
Toshiba 0776, 1776, 0817

U

UltimateTV 0419, 0666
Uniden 0751, 0749
Universum 0200

V

Ventana 0227

W

Wisi 0200, 0423, 0482

X

XSat 0150

Z

Zehnder 1102
Zenith 0883, 1883

テレビのセットアップコード
SETUP CODES FOR TELEVISION
SETUP-CODES FÜR FERNSEHGERÄTE
CODES DE REGLAGE POUR TELEVISION
REGOLAZIONE CODICI PER TELEVISIONE
AJUSTAR CÓDIGOS PARA TELEVISIÓN
INSTEELCODES VOOR TELEVISIE
INSTÄLLNINGSKODER FÖR TV-APPARATER

電視機設置代碼

电视机设置代码

A

AGB 0543
AOC 0478, 0120, 0207, 0087, 0057,
0205, 0036, 0119, 0135
ASA 0131
AWA 0036
Acura 0036
Addison 0119, 0135, 0680
Admiral 0120, 0490, 0190
Advent 0788
Aiko 0119
Akai 0839, 0729, 0057, 0036, 0235,
0388, 0543
Akura 0291
Alba 0036, 0064, 0398, 0695
America Action 0207
Ampro 0778
Amstrad 0198, 0036, 0064, 0398, 0439,
0460, 0543
Anam 0277, 0207, 0036
Anam National 0277, 0677
Anitech 0036
Apex Digital 0775, 0792, 0794
Audiosonic 0064, 0136
Audiovox 0478, 0207, 0119, 0650

B

Bang & Olufsen 0592
Basic Line 0036
Baur 0064, 0388, 0539
Baysonic 0207
Beaumark 0205
Beko 0397, 0513, 0741, 0742
Bell & Howell 0181
Beon 0064
Blaupunkt 0222
Blue Sky 0695, 1064
Bondstec 0274
Bradford 0207
Brandt 0136, 0362
Broksonic 0263, 0490
Bush 0036, 0064, 0398, 0401, 0695,
1064

C

CCE 0064
CGE 0274
CTC 0274

CXC..... 0207
 Candle..... 0057
 Carnivale..... 0057
 Carver..... 0081, 0197
 Cascade..... 0036
 Cathay..... 0064
 Celebrity..... 0027
 Celera..... 0792
 Centurion..... 0064
 Changhong..... 0792
 Ching Tai..... 0036, 0119
 Chun Yun..... 0027, 0207, 0036, 0119
 Chung Hsin..... 0207, 0080, 0135
 Cimline..... 0036
 Cinerla..... 0478, 0119
 Citizen..... 0087, 0057, 0119
 Clarion..... 0207
 Clarivox..... 0064
 Clatronic..... 0274, 0397
 Condor..... 0347, 0397
 Conrac..... 0835
 Contec..... 0207, 0036
 Craig..... 0207
 Crosley..... 0081
 Crown..... 0207, 0036, 0064, 0397, 0445
 Curtis Mathes..... 0074, 0081, 0181, 0478, 0120,
 0087, 0729, 0057, 0172, 0193,
 1174, 1374

D

Daewoo..... 0181, 0478, 0207, 0057, 0205,
 1688, 0036, 0064, 0119, 0135,
 0197, 0401, 0650, 0661
 Dansai..... 0064
 Dayton..... 0036
 De Graaf..... 0235, 0575
 Decca..... 0064, 0543
 Denon..... 0172
 Digatron..... 0064
 Dixi..... 0036, 0064
 Dumont..... 0044
 Dwin..... 0747, 0801

E

ECE..... 0064
 Elbe..... 0286
 Electroband..... 0027
 Elin..... 0064, 0575
 Elite..... 0347
 Elta..... 0036
 Emerson..... 0181, 0263, 0490, 0207, 0205,
 0388, 0650
 Envision..... 0057, 0840
 Epson..... 0860
 Erres..... 0064
 Ether..... 0057, 0036
 Etron..... 0036
 Europhon..... 0543

F

Ferguson..... 0064, 0100, 0136, 0265, 0314,
 0362, 0587
 Fidelity..... 0388
 Finlandia..... 0235, 0373
 Finlux..... 0064, 0131, 0132, 0373, 0543
 Firstar..... 0263, 0036
 Firstline..... 0036, 0274, 0695
 Fisher..... 0181, 0131, 0235, 0397
 Flint..... 0482
 Formenti..... 0064, 0347
 Fortress..... 0120
 Frontech..... 0190, 0274, 0291
 Fujitsu..... 0710, 0836
 Funai..... 0207, 0198, 0291
 Futuretech..... 0207

G

GE..... 0074, 0078, 0478, 0207, 0057,
 0205, 1481, 0119, 0587, 1174,
 1374
 GEC..... 0064, 0543
 Gateway..... 1782, 1783
 Geloso..... 0036
 Genexxa..... 0190
 Gibraltar..... 0044, 0057
 GoldStar..... 0181, 0057, 0205, 0064, 0136,
 0404
 Goodmans..... 0064, 0398, 0401, 0661
 Gorenje..... 0397
 Gradiente..... 0080, 0197
 Graetz..... 0190, 0388
 Granada..... 0064, 0235, 0366, 0543
 Grandin..... 0637
 Grundig..... 0064, 0222, 0514, 0583, 0614
 Grunpy..... 0207

H

HCM..... 0036, 0439
 Hallmark..... 0205
 Hankook..... 0207, 0057, 0205
 Hanseatic..... 0064, 0347, 0388, 0455, 0583
 Hantarex..... 0543
 Harman/Kardon..... 0081
 Harvard..... 0207
 Havermy..... 0120
 Hello Kitty..... 0478
 Hinari..... 0036, 0064
 Hisawa..... 0482
 Hitachi..... 0057, 0205, 1172, 0172, 1283,
 0036, 0119, 0132, 0136, 0190,
 0252, 0383, 0508, 0575, 0605
 Hua Tun..... 0036
 Huanyu..... 0401
 Hypson..... 0064, 0291

I

ICE..... 0291, 0398
 ITS..... 0398
 ITT..... 0190, 0388, 0575
 Imperial..... 0274, 0397, 0445

Indiana 0064
 Infinity 0081
 Ingelen 0190
 Inno Hit 0543
 Innova 0064
 Inteq 0044
 Interfunk 0064, 0190, 0274, 0388, 0539
 Intervision 0064, 0291, 0404

J

JBL 0081
 JCB 0027
 JVC 0490, 0080, 0398, 0680, 0710
 Jean 0183, 0078, 0263, 0036, 0119
 Jensen 0788

K

KEC 0207
 KTV 0207, 0057
 Kaisui 0036
 Kapsch 0190
 Karcher 0637
 Kathrein 0583
 Kendo 0064
 Kenwood 0057
 Kneissel 0286, 0462
 Kolin 0207, 0080, 0135
 Korpel 0064
 Koyoda 0036

L

L&S Electronic 0835
 LG 0087, 0057, 0205, 0064, 0135, 0741
 LXI 0074, 0081, 0181, 0183, 0205
 Leyco 0064, 0291
 Liesenk & Tter 0064
 Loewe 0539
 Luxor 0383, 0388

M

M Electronic 0036, 0064, 0131, 0132, 0136, 0190, 0314, 0373, 0401, 0507
 MGA 0177, 0057, 0205
 MTC 0087, 0057, 0539
 Magnadyne 0274, 0543
 Magnafon 0543
 Magnavox 0081, 0057, 1481, 1281
 Manesth 0291, 0347
 Marantz 0081, 0057, 0064, 0583
 Mark 0064
 Matsui 0036, 0064, 0235, 0398, 0514, 0543
 Matsushita 0277, 0677
 Mediator 0064
 Medion 0695, 0835, 1064
 Megatron 0205, 0172
 Memorex 0181, 0277, 0490, 0177, 0205, 0036, 1064
 Metz 0474
 Micromaxx 0835

Microstar 0835
 Midland 0074, 0044, 0078
 Minerva 0514
 Minoka 0439
 Mitsubishi 0181, 0277, 0120, 0263, 0207, 0177, 1277, 0057, 0205, 0135, 0539, 0863
 Mivar 0318, 0319, 0543, 0636
 Motorola 0120
 Multitech 0207, 0036
 Myryad 0583

N

NAD 0183, 0205, 0388, 0893
 NEC 0181, 0183, 0078, 0057, 0205, 0036, 0197, 0482, 0524, 1731
 NEI 0064
 NTC 0119
 Neckermann 0064, 0583
 Netsat 0064
 Newave 0120, 0205, 0036, 0119
 Nikkai 0064, 0291
 Nikko 0057, 0205, 0119
 Nokia 0388, 0500, 0507, 0575, 0658
 Norcent 0775, 0851
 Nordmende 0136, 0314, 0587

O

Oceanic 0190, 0388
 Onwa 0207, 0460
 Optimus 0181, 0277, 0193, 0677
 Optonica 0120
 Orion 0263, 0490, 0064, 0347, 0543
 Osaki 0291, 0439
 Otto Versand 0064, 0347, 0539, 0583

P

Palladium 0397, 0445
 Panama 0291
 Panasonic 0081, 0277, 0078, 0064, 0190, 0677, 1437
 Pathe Cinema 0265, 0347
 Pausa 0036
 Penney 0074, 0183, 0078, 0087, 0057, 0205, 1374
 Perdio 0347
 Philco 0081, 0490, 0207, 0057, 0205, 0172, 1688, 0064, 0274
 Philips 0081, 0027, 0078, 0057, 0205, 1481, 0064, 0119, 0135, 0401, 0583, 0717
 Phonola 0064
 Pilot 0057
 Pioneer 0193, 0136, 0190, 0314, 0706, 0787, 0893
 Portland 0119
 Prandoni-Prince 0543
 Prima 0788
 Prism 0078
 Profex 0036, 0388
 Proscan 0074

Protech 0036, 0064, 0274, 0291, 0445,
0695
Proton 0057, 0205, 0036
Pulsar 0044

Q

Quasar 0277, 0078, 0677
Quelle 0064, 0131, 0388, 0539

R

R-Line 0064
RCA 0074, 0027, 0057, 0205, 1474,
1481, 0117, 0119, 0706, 1074,
1174, 1274, 1374, 1574
RFT 0455
RadioShack 0074, 0181, 0207, 0057, 0205
Radiola 0064
Radiomarelli 0543
Realistic 0181, 0207, 0057, 0205
Rediffusion 0388
Reoc 0741
Revox 0064
Rex 0190, 0286, 0291
Roadstar 0036, 0291, 0445
Runco 0044, 0057, 0524, 0630

S

SBR 0064
SEG 0291, 0695
SEI 0543
SKY 0064
SSS 0207
Saba 0136, 0190, 0314, 0362
Saccs 0265
Sagem 0637
Saisho 0036, 0291, 0543
Salora 0190, 0383, 0388, 0575
Sambers 0543
Sampo 0181, 0120, 0057, 0205, 0198,
0036, 0119, 0677, 1782
Samsung 0181, 0087, 0839, 0729, 0057,
0205, 0036, 0064, 0117, 0119,
0291, 0397, 0583, 0614, 0645,
0793, 0841
Sansei 0478
Sansui 0490
Sanyo 0181, 0207, 0131, 0235, 0366,
0826
Schaub Lorenz 0388
Schneider 0064, 0274, 0398, 0695
Scotch 0205
Scott 0263, 0207, 0205
Sears 0074, 0081, 0181, 0183, 0205,
0198
Seleco 0190, 0286
Semivox 0207
Semp 0183
Sharp 0120, 0057, 0677
Shen Ying 0036, 0119
Sheng Chia 0120, 0263, 0036
Siarem 0543

Siemens 0064, 0222
Sinudyne 0543
Skantic 0383
Skygiant 0207
Skyworth 0064
Solavox 0190
Sonitron 0235
Sonoko 0036, 0064
Sonolor 0190, 0235
Sontec 0064
Sony 1127, 0027, 0677, 0861, 1532,
1678
Soundesign 0207, 0205
Soundwave 0064, 0445
Sowa 0183, 0078, 0087, 0205, 0119
Squareview 0198
Standard 0036
Starlite 0207
Stern 0190, 0286
Supreme 0027
Sylvania 0081, 0057, 0198
Symphonic 0207, 0198
Synco 0027, 0478, 0120, 0087, 0205,
0119
Sysline 0064

T

T + A 0474
TCM 0835
TMK 0205
TNCi 0044
TVS 0490
Tacico 0205, 0036, 0119
Tai Yi 0036
Tandy 0120, 0190
Tashiko 0119, 0677
Tatung 0081, 0181, 0183, 0078, 0087,
0036, 0064, 0543
Teac 0036, 0064, 0291, 0439, 0445,
0482, 0695, 1064
Tec 0274
Technema 0347
Technics 0277, 0078, 0677
Techwood 0078
Teco 0078, 0120, 0205, 0036, 0119,
0291, 0680
Teknika 0081, 0207, 0177, 0087, 0119
Telefunken 0729, 0136, 0289, 0362, 0652
Telemeister 0347
Teletech 0036
Tensai 0347
Tera 0057
Thomson 1474, 0136, 0314, 0587, 0652
Thorn 0064, 0131, 0388, 0539
Toshiba 0181, 0183, 0087, 1283, 0535,
0645, 0677, 0859, 1383, 1683,
1731
Triumph 0543
Tuntex 0057, 0036, 0119

U

Uher 0347
Universum 0064, 0131, 0132, 0291, 0373,
0397, 0519

V

Vector Research 0057
Vestel 0064
Victor 0277, 0080, 0677, 0680
Videosat 0274
Vidikron 0081
Vidtech 0205
ViewSonic 1782
Vision 0347
Voxson 0190

W

Waltham 0383
Wards 0081, 0057, 0205, 0893
Watson 0064, 0347
Waycon 0183
White Westinghouse 0490, 0064, 0347, 0650

Y

Yamaha 0057, 0796, 0860
Yapshe 0277
Yoko 0064, 0291

Z

Zenith 0044, 0490, 0205, 0119

VCRのセットアップコード
SETUP CODES FOR VCR
SETUP-CODES FÜR VIDEOGERÄTE
CODES DE REGLAGE POUR MAGNETOSCOPE
REGOLAZIONE CODICI PER VIDEOREGISTRATORE (VCR)
AJUSTAR CÓDIGOS PARA VCR
INSTELCODES VOOR VIDEORECORDER
INSTÄLLNINGSKODER FÖR VIDEOBANDSPELARE
録像機設置代碼
录像机设置代碼

A

ASA 0064, 0108
Admiral 0075
Adventura 0027
Aiko 0305
Aiwa 0064, 0027, 0334, 0375, 0379
Akai 0068, 0342
Akiba 0099
Alba 0099, 0305, 0342, 0379
America Action 0305
American High 0062
Amstrad 0027
Anam 0064, 0267, 0305, 0253, 0507
Anam National 0253, 1589
Anitech 0099
Asha 0267
Asuka 0064
Audiovox 0064, 0305

B

Baird 0027, 0131, 0068
Basic Line 0099, 0305
Beaumarck 0267
Bell & Howell 0131
Blaupunkt 0253
Brandt 0347
Brandt Electronic 0068
Broksonic 0211, 0375, 1506
Bush 0099, 0305, 0379

C

CCE 0099, 0305
CGE 0027
Calix 0064
Canon 0062
Carver 0108
Cimline 0099
Cineral 0305
Citizen 0064, 0305, 1305
Colt 0099
Combitech 0379
Craig 0064, 0074, 0267, 0099
Crown 0099, 0305
Curtis Mathes 0087, 0062, 0068, 1062
Cybernex 0267
Cyrus 0108

D

Daewoo 0072, 0131, 0305, 0669, 1305
 Dansai 0099
 De Graaf 0069
 Decca 0108, 0027
 Denon 0069
 Dual 0068
 Dumont 0108, 0027, 0131
 Dynatech 0027

E

ESC 0267, 0305
 Elcatech 0099
 Electrohome 0064
 Electrophonic 0064
 Emerex 0059
 Emerson 0062, 0064, 0211, 0267, 0072,
 0027, 0070, 0305, 1305, 1506

F

Ferguson 0068, 0347
 Fidelity 0027
 Finlandia 0108, 0131
 Finlux 0108, 0027, 0069, 0131
 Firstline 0064, 0072, 0070, 0099
 Fisher 0074, 0131
 Fuji 0062, 0060
 Fujitsu 0072, 0027
 Funai 0027

G

GE 0087, 0062, 0267, 0834, 1062,
 1087
 GEC 0108
 Garrard 0027
 General 0072
 Go Video 0459
 GoldHand 0099
 GoldStar 0064, 0252, 0507, 1264
 Goodmans 0064, 0027, 0099, 0305
 Gradiente 0027
 Graetz 0267, 0131, 0068
 Granada 0108, 0131
 Grandin 0064, 0027, 0099
 Grundig 0108, 0099, 0253, 0374

H

HCM 0099
 HI-Q 0074
 Hanseatic 0064
 Harley Davidson 0027
 Harman/Kardon 0108
 Harwood 0099
 Hinari 0267, 0099, 0379
 Hitachi 0064, 0267, 0027, 0069, 0068
 Hughes Network Systems 0069
 Hypson 0099

I

ITT 0267, 0131, 0068
 ITV 0064, 0305
 Imperial 0027

Interfunk 0108

J

JVC 0072, 0094, 0068
 Jensen 0068

K

KEC 0064, 0305
 KLH 0099
 Kaisui 0099
 Kenwood 0094, 0068
 Kodak 0062, 0064
 Kolin 0070, 0068
 Korpel 0099

L

LG 0064, 0072, 0069, 0507
 LXI 0064
 Lenco 0305
 Leyco 0099
 Lloyd's 0027
 Loewe 0064, 0108, 1589
 Logik 0267, 0099
 Luxor 0075, 0131, 0070

M

M Electronic 0027
 MEI 0062
 MGA 0267, 0070
 MGN Technology 0267
 MTC 0267, 0027
 Magnasonic 1305
 Magnavox 0062, 0066, 0108, 0027, 1808
 Magnin 0267
 Manesth 0072, 0099
 Marantz 0062, 0108
 Marta 0064
 Matsui 0375, 0379
 Matsushita 0062
 Medion 0375
 Memorex 0062, 0064, 0075, 0066, 0074,
 0267, 0027, 0131, 0334, 0375,
 1264
 Memphis 0099
 Metz 0064, 0374, 1589
 Minolta 0069
 Mitsubishi 0108, 0094, 0070, 0068, 0834
 Motorola 0062, 0075
 Multitech 0027, 0099
 Murphy 0027
 Myryad 0108

N

NAD 0131
 NEC 0062, 0064, 0075, 0131, 0094,
 0068
 National 0253
 Neckermann 0108
 Nesco 0099
 Newave 0064
 Nikko 0064
 Noblex 0267

Nokia 0267, 0131, 0068
 Nordmende 0068, 0347

O

Oceanic 0027, 0068
 Okano 0342, 0375
 Olympus 0062, 0253
 Optimus 0064, 0075, 0131, 0459
 Orion 0211, 0375, 0379, 1506
 Osaki 0064, 0027, 0099
 Otto Versand 0108

P

Palladium 0064, 0068, 0099
 Panasonic 0062, 0252, 0253, 0643, 1062,
 1589
 Pathe Marconi 0068
 Penney 0062, 0064, 0267, 0069, 1062,
 1264
 Pentax 0069
 Perdio 0027
 Philco 0062
 Philips 0062, 0108, 0645, 1108, 1208
 Phonola 0108
 Pilot 0064
 Pioneer 0108, 0069, 0094
 Polk Audio 0108
 Profitronic 0267
 Proline 0027
 Proscan 0087, 1087
 Protec 0099
 Pulsar 0066
 Pye 0108

Q

Quasar 0062, 1062
 Quelle 0108

R

RCA 0087, 0062, 0267, 0069, 0834,
 1062, 1087
 RadioShack 0027
 Radiola 0108
 Radix 0064
 Randex 0064
 Realistic 0062, 0064, 0075, 0074, 0027,
 0131
 Reoc 0375
 ReplayTV 0641, 0643
 Rex 0068
 Roadstar 0064, 0267, 0099, 0305
 Runco 0066

S

SBR 0108
 SEG 0267
 SEI 0108
 STS 0069
 Saba 0068, 0347
 Salora 0070
 Sampo 0064, 0075
 Samsung 0267, 0072, 0459

Sanky 0075, 0066
 Sansui 0027, 0094, 0068, 1506
 Sanyo 0074, 0267, 0131
 Saville 0379
 Schaub Lorenz 0027, 0131, 0068
 Schneider 0108, 0027, 0099
 Scott 0211, 0072, 0070
 Sears 0062, 0064, 0074, 0027, 0069,
 0131, 1264
 Seleco 0068
 Semp 0072
 Sharp 0075, 0834
 Shintom 0131, 0099
 Shogun 0267
 Siemens 0064, 0108, 0131
 Silva 0064
 Singer 0072, 0099
 Sinudyne 0108
 Sonic Blue 0641, 0643
 Sontec 0064
 Sony 0062, 0059, 0060, 0027, 0663,
 1259
 Sunkai 0375
 Sunstar 0027
 Suntronic 0027
 Sylvania 0062, 0108, 0027, 0070, 1808
 Symphonic 0027

T

TMK 0267
 Tandy 0027, 0131
 Tashiko 0064, 0027
 Tatung 0108, 0072, 0027, 0094, 0068
 Teac 0027, 0068, 0305, 0334, 0669
 Technics 0062, 0253
 Teco 0062, 0064, 0075, 0068
 Teknika 0062, 0064, 0027
 Teleavia 0068
 Telefunken 0068, 0347
 Tenosal 0099
 Tensai 0027
 Thomas 0027
 Thomson 0087, 0094, 0068, 0347
 Thorn 0131, 0068
 Tivo 0645, 0663
 Toshiba 0108, 0072, 0094, 0070, 0068,
 0872
 Totevision 0064, 0267

U

Uher 0267
 Unitech 0267
 Universum 0064, 0108, 0267, 0027

V

Vector 0072
 Victor 0094, 0068
 Video Concepts 0072
 Videomagic 0064
 Videosonic 0267
 Villain 0027

W

Wards 0087, 0062, 0075, 0074, 0108,
0267, 0027, 0069, 0099

White Westinghouse 0099

X

XR-1000. 0062, 0027, 0099

Y

Yamaha 0068

Yamishi 0099

Yokan. 0099

Yoko. 0267

Z

Zenith 0066, 0060, 0027, 1506

DVDプレーヤーのセットアップコード
SETUP CODES FOR DVD PLAYERS
SETUP-CODES FÜR DVD-PLAYER
CODES DE REGLAGE POUR LECTEURS DVD
REGOLAZIONE CODICI PER LETTORE DVD
AJUSTAR CÓDIGOS PARA REPRODUCTORES DE DVD
INSTELCODES VOOR DVD-SPELERS
INSTÄLLNINGSKODER FÖR DVD-SPELARE
數碼視頻碟設備代碼
数码视频碟设备代码

A

Acoustic Solutions 0757

Alba 0744

Amstrad 0740

Apex Digital 0699, 0744, 0782, 0821, 0823,
0857, 1127

B

Blaupunkt 0744

Blue Parade 0598

Bush 0740

C

Centrex 0699

Clatronic 0815

CyberHome 0741

D

DVD2000 0548

Daewoo 0811, 0797

Dansai. 0797

Decca 0797

Denon. 0000, 0517

Diamond. 0795

Digitrex 0699

E

Emerson. 0618

Enterprise. 0618

F

Fisher 0697

G

GE. 0549, 0744

Go Video. 0742

GoldStar 0768

Gradiente 0678

Greenhill 0744

Grundig. 0566

H

Hitachi 0600, 0691

Hiteker 0699

J

JVC. 0585, 0650

K
 KLH..... 0744
 Kenwood..... 0517, 0561
 Koss..... 0678

L
 LG..... 0768
 Limit..... 0795

M
 Magnavox..... 0530, 0702
 Marantz..... 0566
 Memorex..... 0858
 MiCO..... 0750
 Microsoft..... 0549
 Mintek..... 0744
 Mitsubishi..... 0548
 Mustek..... 0757

N
 Nesa..... 0744

O
 Onkyo..... 0530
 Oritron..... 0678

P
 Palsonic..... 0699
 Panasonic..... 0517, 0659, 1389
 Philips..... 0530, 0566, 0673, 0881
 Pioneer..... 0552, 0598, 0658, 0659
 Polk Audio..... 0566
 Proscan..... 0549

Q
 Qwestar..... 0678

R
 RCA..... 0549, 0598, 0744
 Rotel..... 0650

S
 SM Electronic..... 0757
 Samsung..... 0600
 Sanyo..... 0697
 Sharp..... 0657
 Sherwood..... 0797
 Shinsonic..... 0560
 Slim Art..... 0811
 Sony..... 0560, 0891
 Sylvania..... 0702

T
 Tatung..... 0797
 Teac..... 0598, 0744
 Technics..... 0517
 Theta Digital..... 0598
 Thomson..... 0549
 Toshiba..... 0530

U
 Urban Concepts..... 0530

X
 XBox..... 0549

Y
 Yamaha..... 0517, 0566, 0572

Z
 Zenith..... 0530, 0618, 0768
 Zeus..... 0811

CDレコーダーのセットアップコード
 SETUP CODES FOR CD RECORDER
 SETUP-CODES FÜR CD-REKORDER
 CODES DE REGLAGE POUR ENREGISTREUR CD
 REGOLAZIONE CODICI REGISTRATORE CD
 AJUSTAR CÓDIGOS PARA GRABADOR CD
 INSTELCODES VOOR CD-RECORDER
 INSTÄLLNINGSKODER FÖR CD-BRÄNNARE
 CD錄音機設備代碼
 CD录音机设备代码

D
 Denon..... 0000, 0653

K
 Kenwood..... 0653

M
 Marantz..... 0653

P
 Philips..... 0653

MDのセットアップコード
SETUP CODES FOR MINIDISC (MD)
SETUP-CODES FÜR MINIDISCS (MD)
CODES DE REGLAGE POUR MINIDISC (MD)
REGOLAZIONE CODICI PER MINIDISCO (MD)
AJUSTAR CÓDIGOS PARA MINIDISCOS (MD)
INSTELCODES VOOR MINIDISC (MD)
INSTÄLLNINGSKODER FÖR MD-SPELARE
迷你磁碟播放機設置代碼
迷你磁碟播放机设置代码

D

Denon 0002

K

Kenwood 0708

O

Onkyo 0895

S

Sharp 0888

Sony 0517

DVDレコーダーのセットアップコード
SETUP CODES FOR DVD RECORDER
SETUP-CODES FÜR DVD-REKORDER
CODES DE REGLAGE POUR ENREGISTREUR DVD
REGOLAZIONE CODICI REGISTRATORE DVD
AJUSTAR CÓDIGOS PARA GRABADOR DVD
INSTELCODES VOOR DVD-RECORDER
INSTÄLLNINGSKODER FÖR DVD-BRÄNNARE
數碼視頻碟錄像機設備代碼
数码视频碟录像机设备代码

D

Denon 0000

P

Panasonic 0000

T

Toshiba 0002

