

 
7 REMOTE CONTROL UNIT

The RCD-M33 comes with a system remote control unit (RC-999).


- The supplied remote control unit (RC-999) is for use with the RCD-M33 unit only.
- If the cassette deck is connected to the main unit, you may operate each of the above components using its respective remote control unit (refer to pages 9, 10).

(1) Inserting the batteries


- ① Open the battery compartment cover of the remote control unit.
Press the knob and open the cover in the direction of the arrow.

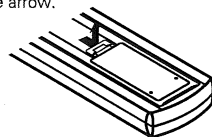

 - ② Insert the two R03 (AAA) batteries, following the + and - marks in the battery compartment.

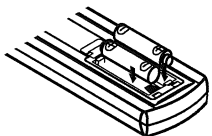

 
- ③ Close the cover of the battery compartment.

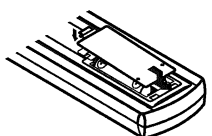

Cautions on Batteries

- Use R03 (AAA) batteries in this remote control unit.
- Replace the batteries with new ones after approximately 1 year, though this depends on the frequency with which the remote control unit is used.
- Replace the batteries with new ones if the unit does not operate when the remote control unit is operated from nearby, even if the batteries are less than a year old.
- Be sure to insert the batteries in the proper direction, following the "⊕" and "⊖" marks in the battery compartment.
- To avoid damage or leakage of battery fluid:
 - Do not use a new battery with an old one.
 - Do not use two different types of batteries.
 - Do not short-circuit, take apart, heat or dispose of batteries in flames.
- Remove the batteries when you do not plan to use the remote control unit for an extended period of time.
- If the battery fluid should leak, carefully wipe off the fluid from the inside of the battery compartment, then insert new batteries.

 (2) Using the Remote Control Unit

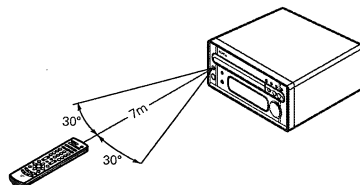


- The remote sensor is located on the CD receiver. Point the remote control unit at the remote sensor as shown on the diagram when operating it.
- The remote control unit will operate from a direct distance of approximately 7 meters, but this distance will be shortened if obstacles are present or if operated at an angle. (The remote control unit will operate at an angle of up to 30° in either direction.)

NOTES:

- The remote control unit may not operate if the remote sensor is exposed to direct sunlight or the strong light from a lighting fixture, or if there is an obstacle between the remote control unit and the remote sensor.
- Do not press buttons on the remote control unit and on the set at the same time. Doing so could result in malfunctions.
- If the remote control unit is pointed away from the re-mote sensor during continuous operations (such as when turning the volume up or down), the operation will stop. If this happens, point the remote control unit at the remote sensor and press the button again.

 (3) Remote Control Unit Part Names and Functions

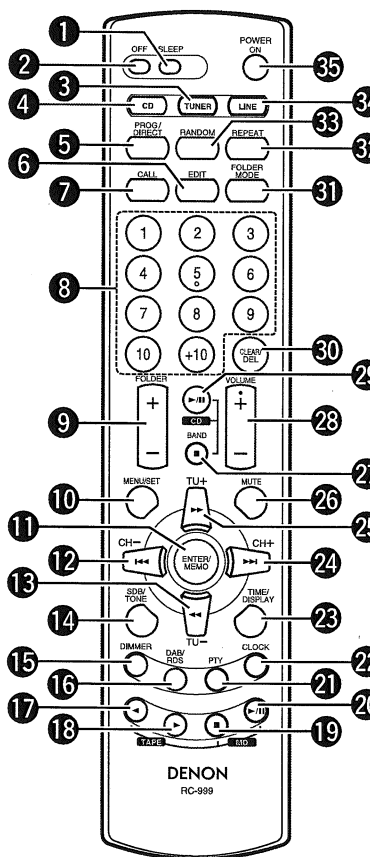

- ① **SLEEP button**
• Press this button to set the sleep timer.
- ② **OFF button**
• Use this switch to set the power to STANDBY mode.
- ③ **TUNER button**
• Press this button to set the function TUNER mode.
- ④ **CD button**
• Press this button to set the function CD mode.
- ⑤ **PROG/DIRECT button**
• Press this button to switch between PROGRAM and DIRECT play.
- ⑥ **EDIT button**
In CD function :
• Press this button for edited recording on a tape, dividing the tracks onto sides A and B according to the length of the tape.
In TUNER function :
• Press this button to input the station name.
- ⑦ **CALL button**
• Use this button to confirm the programmed song.
- ⑧ **Number buttons**
In CD function :
• Press these buttons to specify the desired track.
In TUNER function :
• Press these buttons to recall preset station.
- ⑨ **FOLDER (+ / -) button**
For MP3/WMA discs with the function set to CD:
• Select the folder.
• In the play and pause modes, the first track in the selected folder is selected.

10 MENU/ SET button

- When pressed in the standby mode, the standby mode is switched (the clock display is switched on and off).
- When pressed while the clock is displayed, the manual time setting mode is set. (This cannot be set while the clock is displayed in the standby mode.)
- Switches the display of the timer setting menu on and off.
- When the function is set to FM and the CT tuning mode is set, the mode switches to the auto time setting mode.
- When the function is set to TUNER and an FM station is being received, if pressed for more than 1 second, the display switches to the AUTO PRESET menu.

11 ENTER/ MEMO button

- Press this button to enter editing settings.
- Press this button to preset memory.

12 I◀◀ /CH- (automatic search) button

- In CD function :
- Move to the beginning of current Track or previous Track.
- In TUNER function :
- Use this button to recall preset stations on the tuner.

13 ◀◀ /TU- (manual search / rewind) button

- In CD function :
- The manual search operation is performed.
- In TUNER function :
- Use this button to selecting the station.
- In TAPE function :
- Press this button to rewind the front side of the tape. (The back side of the tape is fast-forwarded.) Also use this button to search for the beginning of the current selection when playing in the forward (▶) direction, or to search for the beginning of the following selection when playing in the reverse (◀) direction.

14 SDB /TONE button

 
- Press this button to adjust SDB (Super Dynamic Bass) and TONE.

15 DIMMER button

- Use this to adjust the brightness of the main unit's display. Can be switched in 4 steps, from OFF to always on.

16 DAB/ RDS button

- Use this button to automatically tune to stations using the radio data system.



17 ◀ (reverse play) button (TAPE)

- Not supported.

18 ▶ (forward play) button (TAPE)

- Not supported.

19 ■ (stop) button (TAPE)

- Not supported.

20 ▶/ II (play/pause) button (MD)

- Not supported.

21 PTY button

 
- Press this button after selecting "PTY" with the RDS button to select one of the 24 program types.

22 CLOCK button

- Press this to switch the clock display between on and off.


23 TIME/ DISPLAY button

- For audio CDs with the function set to CD:
- Press this button during the play or pause mode to switch the time display.




(During programmed playback, indicate the total remaining time of the programmed tracks.)

 - For MP3/WMA discs containing track information with the function set to CD:
- Press this button during the play or pause mode to switch the track information.



With the function set to TUNER, and in the FM and RDS modes:

 - Press to switch the display below.



PS: This is displayed when the radio station currently being received is one named using the procedure described in "P13 - Presetting or naming radio stations".

24 ▶▶ I /CH+ (automatic search) button

- In CD function :
- Move to the beginning of Next Track.
- In TUNER function :
- Use this button to recall preset stations on the tuner.

25 ▶▶ /TU+ (manual search / fast-forward) button

 
- In CD function :
- The manual search operation is performed.
- In TUNER function :
- Use this button to selecting the station.
- In TAPE function :
- Press this button to fast-forward the front side of the tape. (The back side of the tape is rewind.) Also use this button to search for the beginning of the following selection when playing in the forward (▶) direction, or to search for the beginning of the current selection when playing in the reverse (◀) direction.

26 MUTE button

- Mutes the speaker output. When operated while the output is muted, the mute mode is canceled.

27 ■ (stop) /BAND button

- In CD function, press this button to stop playback.
- In TUNER function, use this button to selecting the band.



28 VOLUME button

- Use these buttons to adjust the volume.
- The volume increases when the ▲ button is pressed and decreases when the ▼ button is pressed.

29 CD ▶/ II (play/pause) button

- Press this button to play or pause of the CD player.

30 CLEAR/ DEL button

- In CD function :
- Press this button to clear the track from the program.

- In TUNER function :
- Press this button to erase the station name.

31 FOLDER MODE button

- For MP3/WMA discs with the function set to CD, switches the play mode between disc and folder.

32 REPEAT button

 
- Press this button for repeat playback.

33 RANDOM button

- Press this button to set the tracks in random order.

34 LINE button

- Press this button to switch the function LINE.
- The input changes in the following order each time this button is pressed.



35 POWER ON button

- Use this switch to turn on the power of the entire system.