

Great TV viewing is in your hands!

A good way to begin learning about your DIRECTV® System is to familiarize yourself with the remote control. You'll find further details throughout the User Guide relating to specific functions.

Navigating 101

You'll find you can get around nearly all onscreen menus the same simple way.

- ▶ **Highlight...** a menu or button by using the **ARROW** keys (up, down, left and right).
- ▶ **Choose it...** by pressing **SELECT** while the item is highlighted.

Note: Don't worry about getting stuck in a menu. You can always press EXIT to return to video.

Quick Tip


To place batteries in your remote control:

1. Remove cover from the battery compartment by sliding it downward.
2. Insert 2 AA batteries (supplied), matching the positive (+) and negative (-) at each end.
3. Slide the cover back on to complete installation.

To program your remote control:

1. See "Programming Your Remote Control" on page 20.

Keys in the shaded area below can be programmed to function with your VCR, DVD player or stand-alone DVR unit.

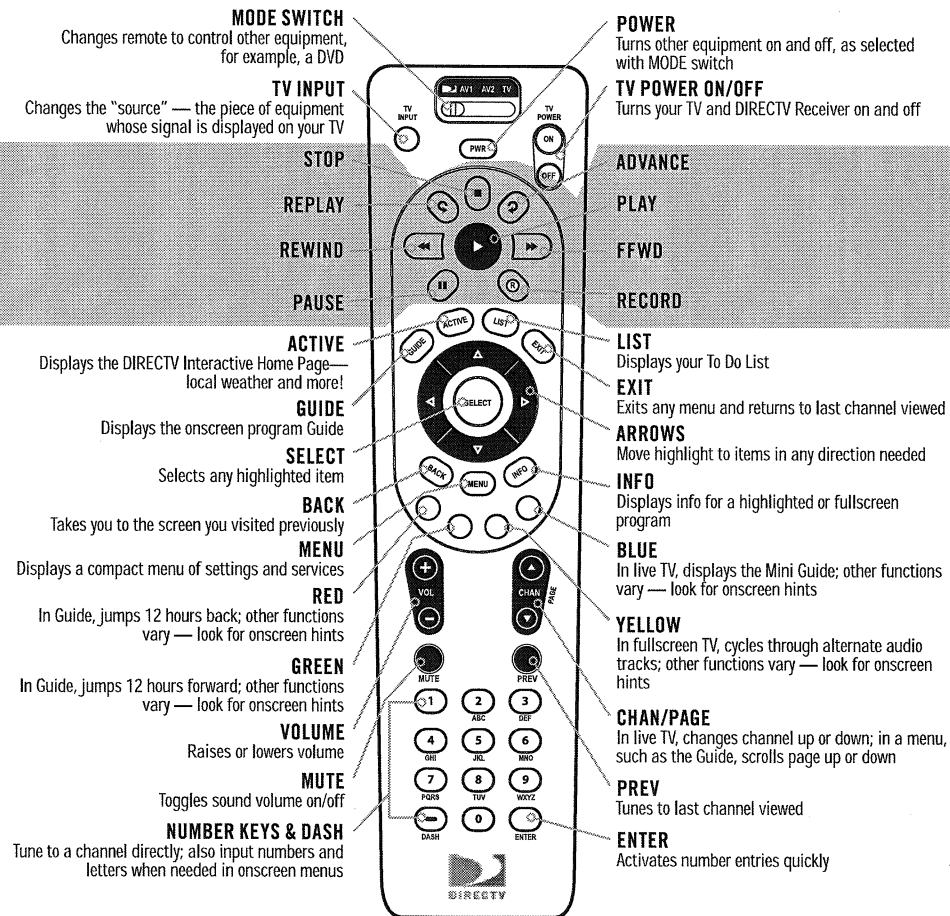

Programming Your Remote Control

You can program the DIRECTV remote control to operate your TV power, volume and mute, additional equipment such as a DVD, VCR, stereo, or second TV or DIRECTV Receiver.

- 1) Press MENU to display the Quick Menu.
- 2) Highlight *Settings* and press SELECT.
- 3) Highlight *Setup* and press SELECT.
- 4) Press SELECT on *Remote* in the left menu.
- 5) Follow the onscreen instructions to program your remote for your TV or additional equipment (AV1 and AV2).

Once your remote is programmed to work with your TV, the VOL and MUTE key control the TV regardless of the slide switch position. If you would like to change the VOL and MUTE to work with another component, you can. Simply set up your remote to work with the component, and then move the slide switch to the position you would like to lock the VOL and MUTE keys to. Point the remote away from your DIRECTV Receiver and press and hold MUTE and SELECT until the light near the slide switch blinks twice (about 5 seconds). Enter 9-9-3. The light will blink twice, indicating the VOL and MUTE are now locked to the chosen component, no matter what position the slide switch is in.

Factory Defaults

To reset all the functions of the remote control to the factory defaults, follow these steps:

- 1) Point the remote away from your DIRECTV Receiver and components. Press and hold MUTE and SELECT until the light above the slide switch on the remote flashes twice (about 5 seconds).
- 2) Enter 9-8-1. The light on the remote will flash twice, indicating you have cleared AV1, AV2 and TV modes.

Remote Control Problems

Problems with the remote control

- ▶ Check that nothing is between the remote control and the remote sensor.
- ▶ Make sure the remote control is in DIRECTV mode. Slide the mode switch to the DIRECTV position so the remote will control the DIRECTV Receiver.
- ▶ Check the batteries in the remote control. They may be weak, dead or installed incorrectly. Try replacing batteries.
- ▶ If you're entering a channel number that is less than four digits long, the receiver might wait two seconds before tuning to the channel. Press ENTER after entering a channel number to tune immediately.
- ▶ If you are trying to operate a device other than the DIRECTV Receiver that you have programmed the remote to control, make sure you first slide the input switch to the corresponding device (DVD player, VCR, etc.). The indicator light for the component you're trying to control should light up when you press a valid key for that component. If it doesn't, make sure the input switch is clicked into the correct position.

A remote control indicator light starts flashing.

The batteries in the remote control are running low and should be replaced soon. (Note that when you replace the batteries, you may have to reprogram your remote to control other devices.)