 




Remote control


Remote control

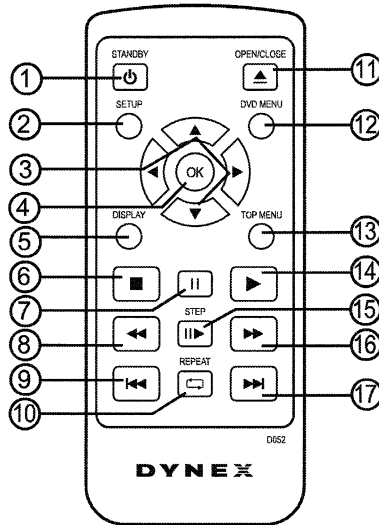

Item	Button	Function
1	STANDBY/	Press to turn your player on or off.
2	SETUP	Press to open and close the setup menu.
3	◀ (Left arrow) ▲ (Up arrow) ▶ (Right arrow) ▼ (Down arrow)	Press to select menu options or adjust settings.
4	OK	Press to make or confirm menu selections.
5	DISPLAY	Press to open the on-screen display, which provides current status information and where you can change settings and options.
6	■ (stop)	Press to stop playback. Playback begins from this point when you press PLAY . Press STOP twice to begin playback from the beginning.
7	⏸ (pause)	Press to pause playback. Press once more to resume playback.

 



Item	Button	Function
8	◀◀ (fast reverse)	Press to fast reverse the DVD or CD. Press repeatedly to step through the fast reverse speeds.
9	◀◀◀ (previous)	Press to return to the previous chapter (DVD) or track (CD).
10	REPEAT 	Press during playback to step through repeat options, including repeat current chapter, repeat current title, repeat entire disc, and off.
11	OPEN/CLOSE 	Press to open and close the disc tray.
12	DVD MENU	Press to open the DVD menu.
13	TOP MENU	Press to open the top DVD menu (available on some discs).
14	▶ (play)	Press to start playback or resume playback from pause.
15	▶▶ (step)	Press repeatedly to step forward frame by frame in a video .
16	▶▶▶ (fast forward)	Press to fast forward the DVD or CD. Press repeatedly to step through the fast forward speeds.
17	▶▶▶▶ (next)	Press to advance to the next chapter (DVD) or track (CD).

 


Installing remote control batteries

To install the remote control battery:

  - 1 Open the battery tray.

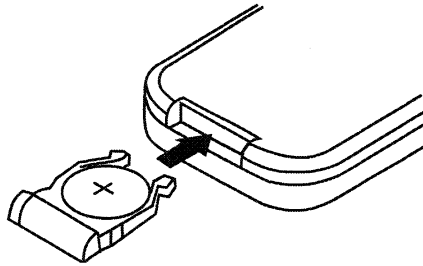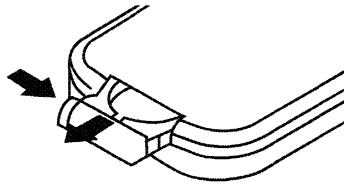

 - 2 If this is the first time you will be using the remote control, remove the plastic insulation sheet that covers the battery.



-OR-

If you are replacing the battery, remove the old battery and insert a new lithium coin cell battery (CR2025) into the battery tray. Make sure that you match the + symbol on the battery with the + symbol on the battery tray.

- 3 Replace the battery tray.

Notes:

- Do not mix batteries of different types.
- Do not mix old and new batteries.
- Remove batteries when the charge is depleted.
- Battery chemicals can cause a rash. If the batteries leak, clean the battery compartment with a cloth. If chemicals touch your skin, wash immediately.
- If the remote control is not going to be used for an extended period of time, remove the batteries.