


Remote control

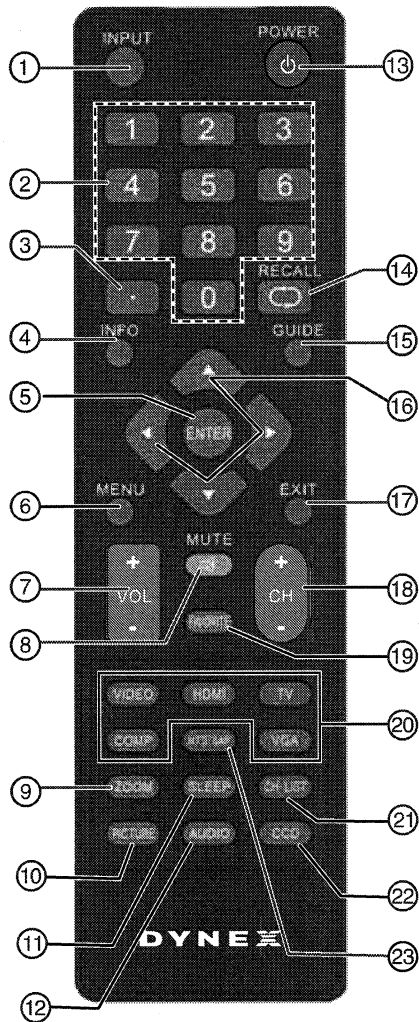

#	Button	Description
①	INPUT	Press to open the Source List, then press ▲ or ▼ to cycle through the available input sources. For more information, see "Selecting the video input source" on page 16.
②	Numbers	Press to enter channel numbers and the parental control password.
③	●	Press to enter a digital sub-channel number. For more information, see "Selecting a channel" on page 17.
④	INFO	Press to display TV status information, such as the channel number, channel name (if available), or signal source. For more information, see "Viewing channel information" on page 18.
⑤	ENTER	Press to confirm selections or changes.
⑥	MENU	Press to open the on-screen menu.
⑦	VOL +/VOL -	Press to increase or decrease the volume.
⑧	MUTE	Press to mute the sound. Press again to restore the sound.

#	Button	Description
⑨	ZOOM	Press to select the aspect ratio. For more information, see "Adjusting the TV picture" on page 18.
⑩	PICTURE	Press to select the video modes. You can select Vivid , Standard , Energy Savings , Theater , Sports , or Custom . For more information, see "Adjusting the TV picture" on page 18.
⑪	SLEEP	Press to set the sleep timer. You can select Off, 5, 10, 15, 30, 60, 90, 120, 180, or 240 minutes. For more information, see "Setting the sleep timer" on page 28.
⑫	AUDIO	Press to select the sound mode. For more information, see "Adjusting sound settings" on page 19.
⑬	⏻ (power)	Press to turn your TV on or off (Standby mode). When your TV is off, power still flows into it. To disconnect power, unplug the power cord.
⑭	RECALL	In TV mode, press to return to the previous channel.
⑮	GUIDE	Press to display the program guide. For more information, see "Viewing channel information" on page 18.
⑯	▲▼◀▶	Press to move left, right, up, or down in on-screen menus.
⑰	EXIT	Press to close the on-screen menu.
⑱	CH +/CH-	Press to change TV channels to the next higher or next lower channel. For more information, see "Selecting a channel" on page 17.
⑲	FAVORITE	Press to open the Favorite Channel list. For more information, see "Setting up a favorite channel list" on page 20 and "Viewing a favorite channel" on page 21.
⑳	Video input	TV —Press to control your TV. COMP —Press to select the device connected to the COMPONENT video jacks. VIDEO —Press to select the device connected to the AV IN video jack. HDMI —Press one or more times to select the device connected to the HDMI 1 or HDMI 2 jack. VGA —Press to select the device connected to the PC IN VGA jack.
㉑	CH-LIST	Press to open the channel list.
㉒	CCD	Press to turn closed captioning on or off. You can select CC Off , CC On , or CC On when Mute . For more information, see "Using closed captioning" on page 25.
㉓	MTS/SAP	Press to select the audio mode for an analog program. You can select: • MONO —Select this option if there is noise or static on weak stereo broadcasts. • STEREO —Select this option for programs broadcast in stereo.

Programming universal remote controls

Programming a universal remote control

You can operate your Dynex TV with a new or existing universal remote control.

To program a different universal remote control:

- 1 See the table below for common codes. If you have problems programming your remote or need a different remote control code, visit www.dynexproducts.com/remotecodes for the latest remote control code information.
- 2 Follow your universal remote control's instructions to enter the TV code you found in Step 1.

Tips

- If your universal remote control has a code search feature, run a code search to identify a code that matches your TV. See your universal remote control's instructions for details.
- If your universal remote control has a "Learn" feature, you can manually program it using the Dynex TV remote to "teach" the commands one at a time. See your universal remote control's instructions for details.

For additional help and information...

1. Visit <http://www.dynexproducts.com/remotecodes>
2. Call technical support for the universal remote control or cable/satellite company of the remote/set-top box you are trying to program.
3. Call the Dynex Customer Care Center 1-800-305-2204

Common universal remote control codes

The following is a list of the most common remote control codes. Codes for other remote controls are available online at: www.dynexproducts.com or check with your cable or satellite TV provider for the remote control code.

Dynex TV codes for universal remote controls (for all Dynex TVs manufactured after Jan. 1, 2007)

Universal remote control makes and models	
One for All	0054
Phillips	0198, 0490
RCA	135
Sony	068, 069, 078, 096, 100, 164, 168, 229, 026

Set-top box makes and models

Cablevision	068, 069, 078, 096, 100, 164, 168, 229, 026
Charter	2002, 1204, 1423, 1517, 0171, 1963, 0463, 1463, 0842, 1326, 167, 415, 424, 450, 456, 461, 507, 523, 567, 577, 586
Comcast	10171, 11204, 11326, 11463, 11517, 11641, 11780, 11785, 11892, 11963, 12002
Cox	1326, 1463
DirectTV	10171, 11204, 11326, 11517, 11564, 11641, 11963, 12002
Dish Network	720
Time Warner	400, 450, 461, 456, 10463, 1463, 0463
TiVo	0091
Verizon	0198, 0490

Tips

- The brand name is often visible on the front of the universal remote control, and the model number is often visible on the back.
- If your universal remote control isn't listed on the chart, refer to your universal remote control's instructions and try codes for the brands Orion, Emerson, Memorex, Sansui, Sylvania, or Zenith. You may need to try several codes before finding a match.