 


#	Jack	Description
1	PC-IN AUDIO	Connect the computer audio jack to this jack.
2	AUDIO (for VIDEO1)	Connect the audio for an analog device to these jacks.
3	VIDEO1	Connect an analog video device to this jack. The analog video cable does not carry audio. You need to connect an audio cable to the AUDIO jacks when using an analog video device.
4	S-VIDEO (VIDEO1)	Connect an S-Video device to this jack. The S-Video cable does not carry audio. You need to connect an audio cable to the AUDIO jacks when using an S-Video device.
5	COMPONENT1/ COMPONENT2	Connect a component video device to the COMPONENT1 or COMPONENT2 jacks and the AUDIO jacks. You can connect two component devices. The component video cable does not carry audio. You need to connect an audio cable to the AUDIO jacks when using a component video device.
6	AUDIO (for VIDEO2)	Connect the audio for an analog device to these jacks.
7	VIDEO2	Connect an analog video device to this jack. The analog video cable does not carry audio. You need to connect an audio cable to the AUDIO jacks when using an analog video device.
8	S-VIDEO (VIDEO2)	Connect an S-Video device to this jack. The S-Video cable does not carry audio. You need to connect an audio cable to the AUDIO jacks when using an S-Video device.

Remote control

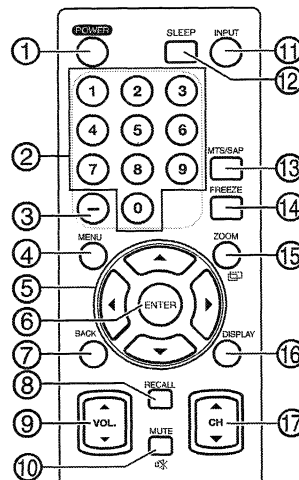

#	Button	Description
1	POWER	Press to turn your TV on or off.
2	Numbers	Press to enter a channel number. If you want to select a digital sub-channel, press — to select the sub-channel.
3	—	Press the number buttons to select a main digital channel, then press this button to select a digital sub-channel.
4	MENU	Press to open the on-screen menu.
5	▲ ▼ ◀ ▶	Press to navigate in the on-screen menu.
6	ENTER	Press to confirm option settings in the on-screen menu.
7	BACK	Press to return to a previous menu in the on-screen menu.
8	RECALL	Press to go to the previous channel.
9	VOL.▲ / VOL.▼	Press to increase or decrease the volume.
10	MUTE	Press to mute the sound. Press again to restore the sound.
11	INPUT	Press to select the video input source.
12	SLEEP	Press to set the sleep timer.
13	MTS/SAP	In digital TV mode, press to select the audio language, if more than one language is available. In analog TV mode, press to select the audio mode.
14	FREEZE	Press to still (freeze) the picture. Press any button except POWER to return to normal viewing.
15	ZOOM	Press to select the aspect ratio.
16	DISPLAY	For digital or analog TV channels, press to display the channel information, signal type, and TV setting (such as the audio setting, aspect ratio, program rating, and closed caption setting). For an external device, press to display the input mode, signal type, and TV setting.

 
#	Button	Description
17	CH ▲ / CH ▼	<p>Press to go to the next or previous channel in the channel list, or to select the external input mode. When you press one of these buttons repeatedly, you cycle between:</p> <ul style="list-style-type: none"> • Analog TV channels in the channel list • Digital TV channels in the channel list • Video1 • Video2 • Component1 • Component2 • HDMI1 • HDMI2 • PC

Setting up your TV


Installing remote control batteries

To install remote control batteries:


- 1 Open the battery compartment.

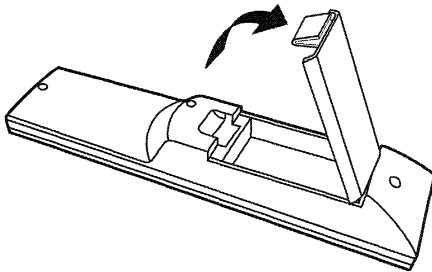

 - 2 Insert two AA batteries into the battery compartment. Make sure that the + and – symbols on the batteries match the + and – symbols in the battery compartment.

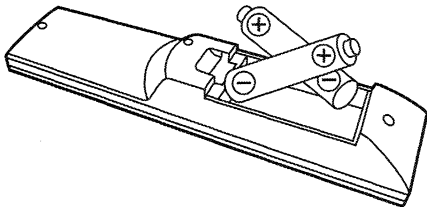

- 3 Close the battery compartment.

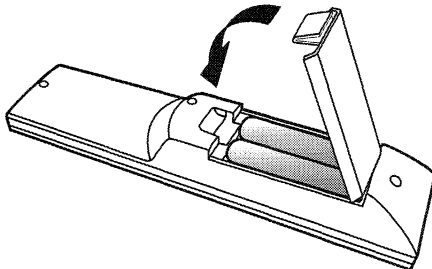 

Notes:

Make sure that you match the + and – symbols on the batteries with the symbols in the battery compartment.

Do not mix different types of batteries or old and new batteries.

 
If you do not intend to use the remote control for an extended period of time, remove the batteries to prevent leakage.

Do not try to recharge batteries non-rechargeable batteries. They may overheat and rupture.

Connecting an antenna or basic cable

To connect an antenna or basic cable (no cable box):

- Connect one end of a 75 ohm coaxial cable to the antenna or basic cable wall jack, then connect the other end of the cable to the **ANT. IN** jack on the back of your TV.

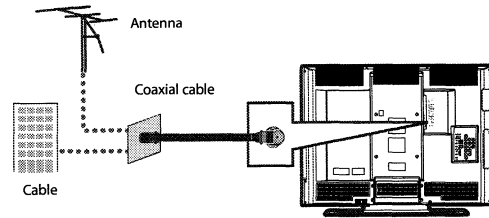

Notes:

Always unplug the coaxial cable when you move your TV.

If you use an antenna to receive analog TV, the antenna should also work for digital TV (DTV).

If you want to switch between antenna and cable, install an antenna selector.

 
If you need help connecting cable TV, contact your cable TV provider.

Connecting a cable or satellite box

Note: Installation methods may vary depending on the type of cable or satellite box. Contact your cable or satellite provider for more information.

To connect a cable or satellite box:

- 1 Connect a 75 ohm cable to cable or satellite TV wall jack, then connect the other end to the **Antenna IN** jack on the cable or satellite TV box.

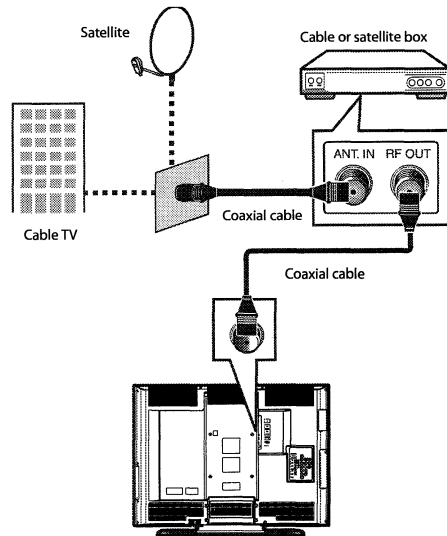

- 2 Connect a 75 ohm coaxial cable to the **RF OUT** jack on the cable or satellite TV box, then connect the other end to the **ANT. IN** jack on the back of your TV.