

u **How to use an optional Card remote control**

n **Turning the power on/off**

When the power is turned on, the state used when the power was turned off such as CD and tuner playing is restored.

1 . Press the [PWR] button.

The power turns on or off each time the button is pressed.

n **Adjusting the audio volume**

1 . Press the [+] or [-] button.

[+] button: Increases the volume.

[-] button: Decreases the volume.

 
t **Cutting the volume instantly (muting):**

Press the [MUTE] button to cut the volume or restore it instantly.



Press the [MUTE] button for more than two seconds if E-COM is connected and less than two seconds if E-COM is not connected to cut the volume or restore it instantly.


How to use an optional Card remote control

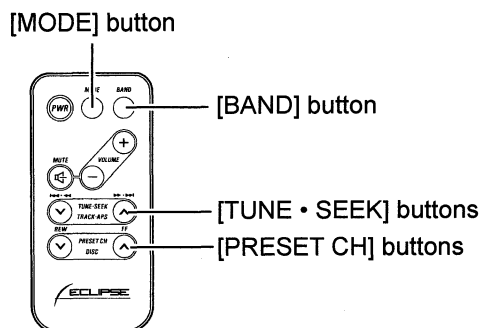

n Switching play back modes

1. Press the [MODE] button.

 Tap the button to switch modes in the following sequence:



n How to play the tuner

Select the tuner mode first.

t Selecting the FM/AM band

1. Press the [BAND] button.

Each tap will switch tuner modes from FM1 FM2 FM3 AM.

t Selecting a station (manually or automatically)

A short tap of the button will allow manual station tuning. Pressing for more than one second will start automatic tuning.

1. Press the [TUNE • SEEK] button.

[^] button: Tunes to higher frequency stations.

[v] button: Tunes to lower frequency stations.

t Selecting preset stations

 
A total of six stations may be selected (preset tuning) out of those already set in memory through the main unit. (Refer to "Manually setting stations into memory," page 72.)

1. Press the [PRESET CH] button.

[^] button: Tunes the next higher preset number.

How to use an optional Card remote control

[v] button: Tunes the next lower preset number.

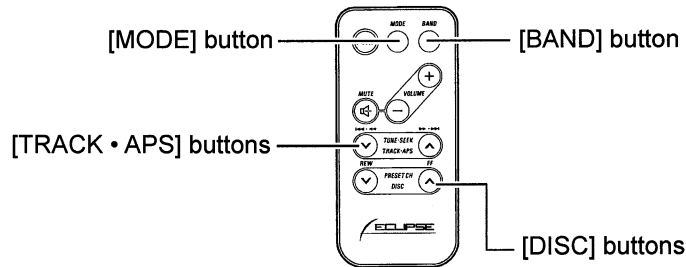

n How to play back CDs

Select the disc mode first.

t Switching disc modes

1. Press the [MODE] button to switch DVD(CD) player or CD changer.
2. When two CD changers are connected, press the [BAND] button to change between CD changer 1 and CD changer 2.

The indicator will skip a changer or player that has no discs loaded.

t Advancing to the next track or returning to the beginning of the track being played

1. Press the [TRACK• APS] button.

[^] button: Skips to the next track.

[v] button: Returns to the beginning of the track being played. (Press repeatedly to move to previous tracks.)



Hold the [^] button down to fast-forward, or the [v] button to fast-reverse through the track being played.

t Skipping to the next or previous disc

1. Press the [DISC] button.

[^] button: Selects the next higher number disc.

[v] button: Selects the next lower number disc.

 
n Replacing the battery

Warning


To prevent accidents, store batteries out of the reach of children.
If a child has swallowed one, consult a doctor immediately.

Use one CR2025 battery.


- 1** . On the back of the remote control, while pressing the locking knob on the battery slot cover toward your right, pull out the battery carrier with your fingernail.

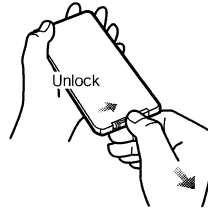

 - 2** . Remove the old battery, then place the new one in the carrier with the (+) mark facing up.

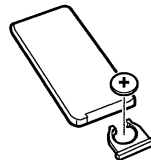

 - 3** . Push in the carrier until it snaps into place.

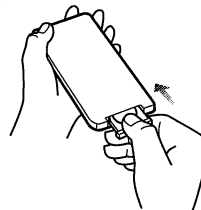

● **Caution** ●

Be extremely careful not to swallow the battery.