 


## How to use an optional NOB remote control

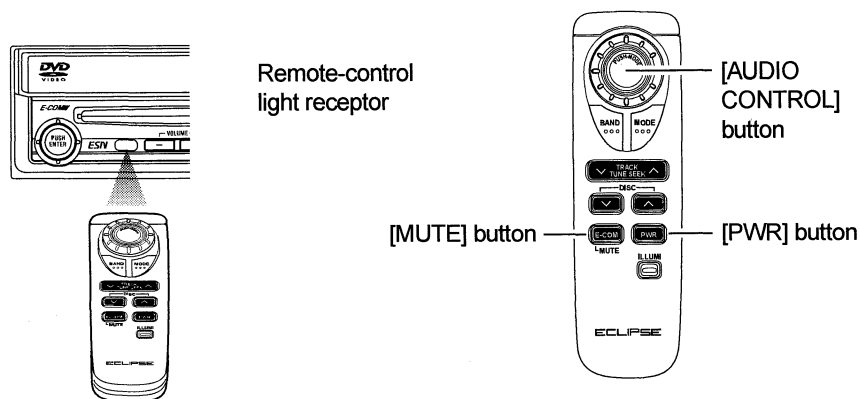

## u **How to use an optional NOB remote control**

### n **Turning the power on/off**

When the power is turned on, the state used when the power was turned off such as CD and tuner playing is restored.

#### 1. Press the [PWR] button.

The power turns on or off each time the button is pressed.

### n **Adjusting the audio volume**

#### 1. Press the [AUDIO CONTROL] button, and turn it to the left or right.

Turn to the right: Increases the volume.

 
Turn to the left : Decreases the volume.

### t **Cutting the volume instantly (muting):**

Press the [MUTE] button for more than two seconds to cut the volume or restore it instantly.




- Press the [MUTE] button for more than two seconds if E-COM is connected and less than two seconds if E-COM is not connected to cut the volume or restore it instantly.

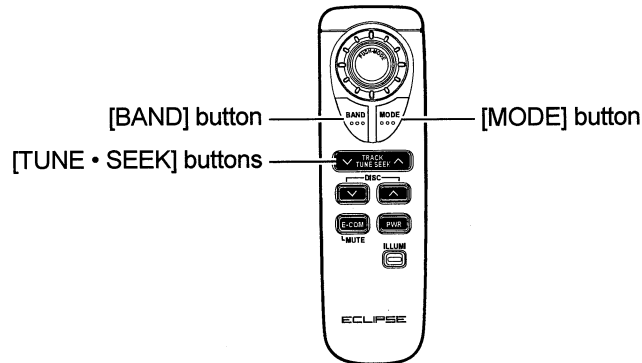

## n Switching playback modes

1. Press the [MODE] button.

 Tap the button to switch modes in the following sequence:



## n How to play the tuner

Select the tuner mode first.

### t Selecting the FM/AM band

1. Press the [BAND] button.

Each tap will switch tuner modes from FM1 FM2  
FM3 AM.

### t Selecting a station (manually or automatically)

 
A short tap of the button will allow manual station tuning. Pressing for more than one second will start automatic tuning.

1. Press the [TUNE • SEEK] button.

[^] button: Tunes to higher frequency stations.

[v] button: Tunes to lower frequency stations.

## How to use an optional NOB remote control

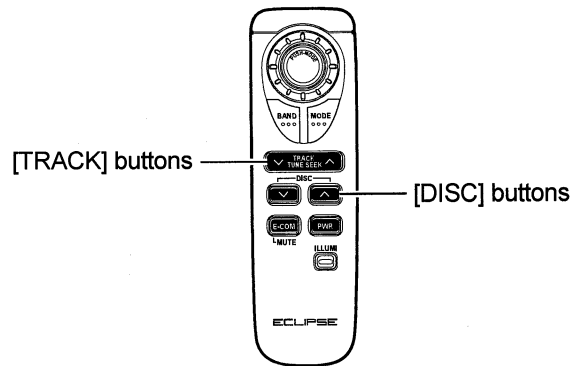

### t **Selecting preset stations**

A total of six stations may be selected (preset tuning) out of those already set in memory through the main unit. (Refer to "Manually setting stations into memory," page 72.)

#### 1. Press the [DISC] button.

[^] button: Selects the next higher number preset button.

[v] button: Selects the next lower number preset button.

## n **How to play back CDs**

Select the disc mode first.

### t **Advancing to the next track or returning to the beginning of the track being played**

#### 1. Press the [TRACK] button.

[^] button: Skips to the next track.

[v] button: Returns to the beginning of the track being played. (Press repeatedly to move to previous tracks.)



- Hold the [^] button down to fast-forward, or the [v] button to fast-reverse through the track being played.

 
### t **Skipping to the next or previous disc**

#### 1. Press the [DISC] button.

[^] button: Selects the next higher number disc.

[v] button: Selects the next lower number disc.

## How to use an optional NOB remote control

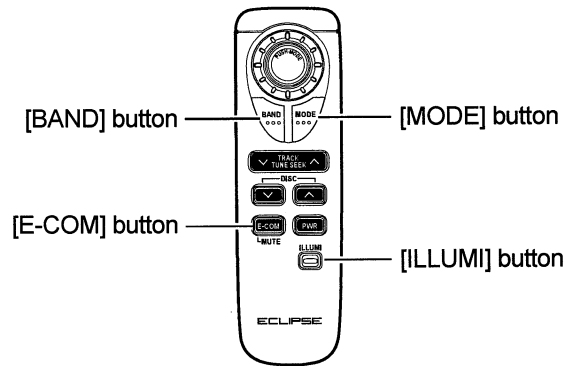

### t **Switching disc modes**

1. Press the [MODE] button to switch DVD(CD) player or CD changer.
2. When two CD changers are connected, press the [BAND] button to change between CD changer 1 and CD changer 2.

### n **Illuminating the NOB remote control**

The buttons of the NOB remote control will be illuminated by pressing the [ILLUMI] button.

### n **Enabling the optional E-COM feature**

Pressing the [E-COM] button for one second will switch the E-COM feature on or off.

 
## n Replacing the battery

### **Warning**


To prevent accidents, store batteries out of the reach of children.  
If a child has swallowed one, consult a doctor immediately.

Use two AA-size batteries.


- 1** . Remove the back cover of the remote control unit by gently pressing and sliding it in the direction indicated by the arrow.

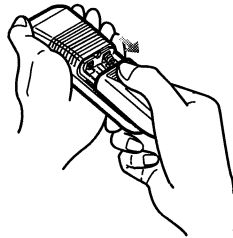

 - 2** . Install the two batteries provided into the compartment as illustrated inside the compartment.

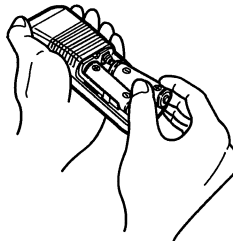

 - 3** . Return the back cover into place by sliding it in the direction indicated by the arrow.

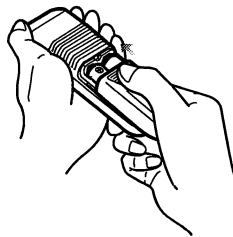

### 1 Caution 1

- Be extremely careful not to swallow the battery.