


Using the remote control

➤ Identifying the remote control buttons

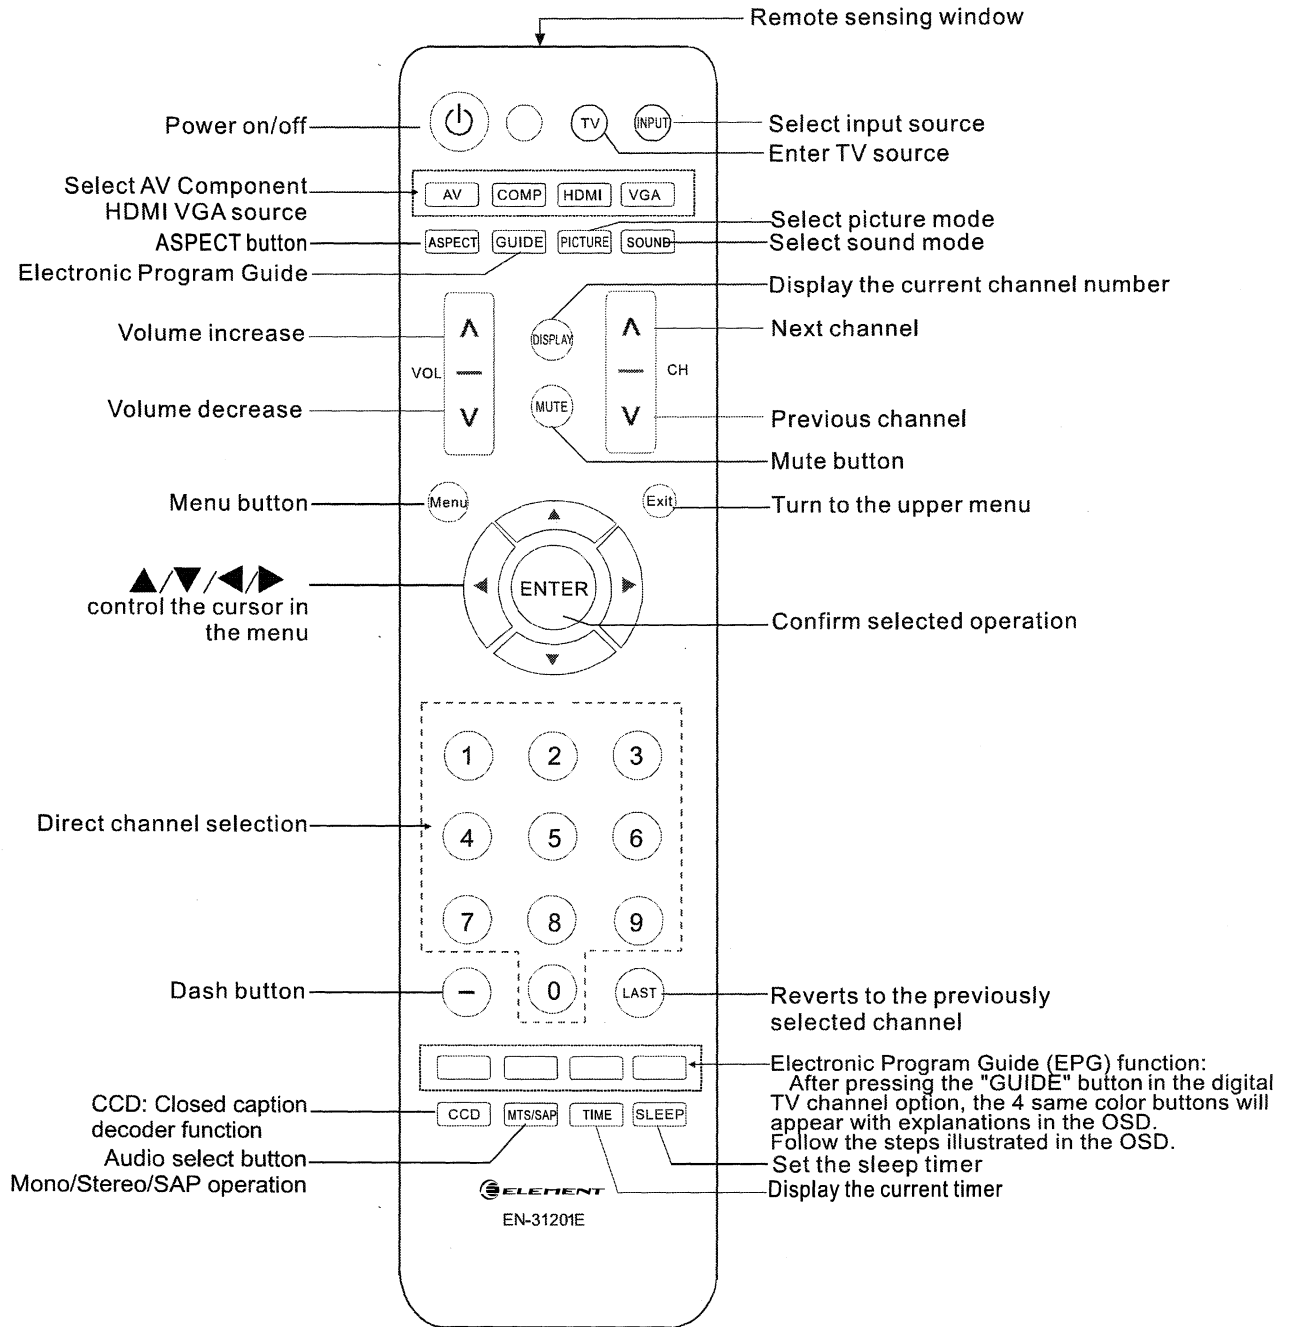

Note: please refer to the practicality.

Using the remote control

➤ Brief operations of remote control

Change the batteries

1. Open the battery cover on the back of the remote control.
2. Install two AAA size (1.5V) batteries. Match the "+" and "-" signs on the batteries to the signs on the battery compartment.
3. Close the battery cover.

Note:

1. Dispose of your batteries in a designated disposal area. Do not throw batteries into a fire.
2. Do not mix battery types or combine used batteries with new ones.
3. Remove dead batteries immediately to prevent batter acid from leaking into the battery compartment.
4. If you do not use the remote control for a long time, remove the batteries.

The effective range of remote control

1. The remote control distance: 315inches in front of the TV set.
2. The remote control angle: taking the television infrared light receiver window as an apex, 236inches away, its controlled angle (left to right) is within 30 degrees, while the vertical angle (up to down)is within 30 degrees.

Basic operations

➤ Power on/off

1. Connect the Power Cord to the connector on the back of the TV, if the Power cord in accessories. When connecting the power cord to the connector of the TV, make sure the power cord is fully inserted in the place. Bad contact may cause high temperature of the connector and the risk of fire or other damages
2. Connect the TV power line to AC outlet.
3. Press the Power button on the remote control, you can watch TV normally.

Note:

In order to save power consumption, set the TV in Standby state if you do not watch TV for a short time. If the TV is turned off, to turn it on again, please wait at least 5 seconds in case the abnormal phenomena occurred.

➤ Changing Channels/ Volume

1. Press [CH \wedge / \vee] button on the remote control, you can change the channels.
(Press [VOL \wedge / \vee] button to raise or lower the volume).
2. Press [CH \blacktriangle / \blacktriangledown] button on the side of TV set, you can also change the channels.
(Press [VOL \blacktriangle / \blacktriangledown] button to raise or lower the volume).
3. Press the numeric buttons on the remote control to display the corresponding channels.

Note:

Changing the channels can also be achieved by directly pressing the programme No. If you want to choose the programme No. from 1 to 9, press the numeric buttons directly. If you want to select a programme No. that double-digit or three-figure, the time between twice pressing the numbers should not be more than 3 seconds.

➤ Select input source

Choose the current input signal of the main picture. You can press the TV AV COMP HDMI VGA button to choose the source you want or press [INPUT] button to display the signal inputs. Press [\blacktriangle / \blacktriangledown] button to select the source you wanted to enter, then press [ENTER] button to confirm. You can also press the [INPUT] button continuously to choose the source you want.

➤ Change picture mode

It can be set as Standard, Cinema, User and Vivid. This mode achieves a certain image display effect by setting the brightness, contrast and color etc.

Basic operations

➤ **Change sound mode**

It can be set as Standard, Speech, User and Music.

➤ **Mute sound**

Press [Mute] button to turn the sound off, press this button again to turn the sound back on. This function is used to switch off sound temporarily.

➤ **Set sleep timer**

It can set the TV to let it enter into the Standby state automatically, Press this button repeatedly to select the proper sleeping clock mode, and the clock tells you the remaining time before the TV enters Standby state.

➤ **Change view ratio**

Press the [ASPECT] button to select from five zoom modes: Wide, Normal, Zoom, Cinema, Dot-to-Dot.

Note: The option of zoom mode is different in different sources

➤ **GUIDE**

GUIDE: Electronic program Guide, you can see the program information.