 


 
## Remote Control

**Note:** The remote control buttons can glow in the dark. Expose the remote control to light for several minutes before using it in the dark.

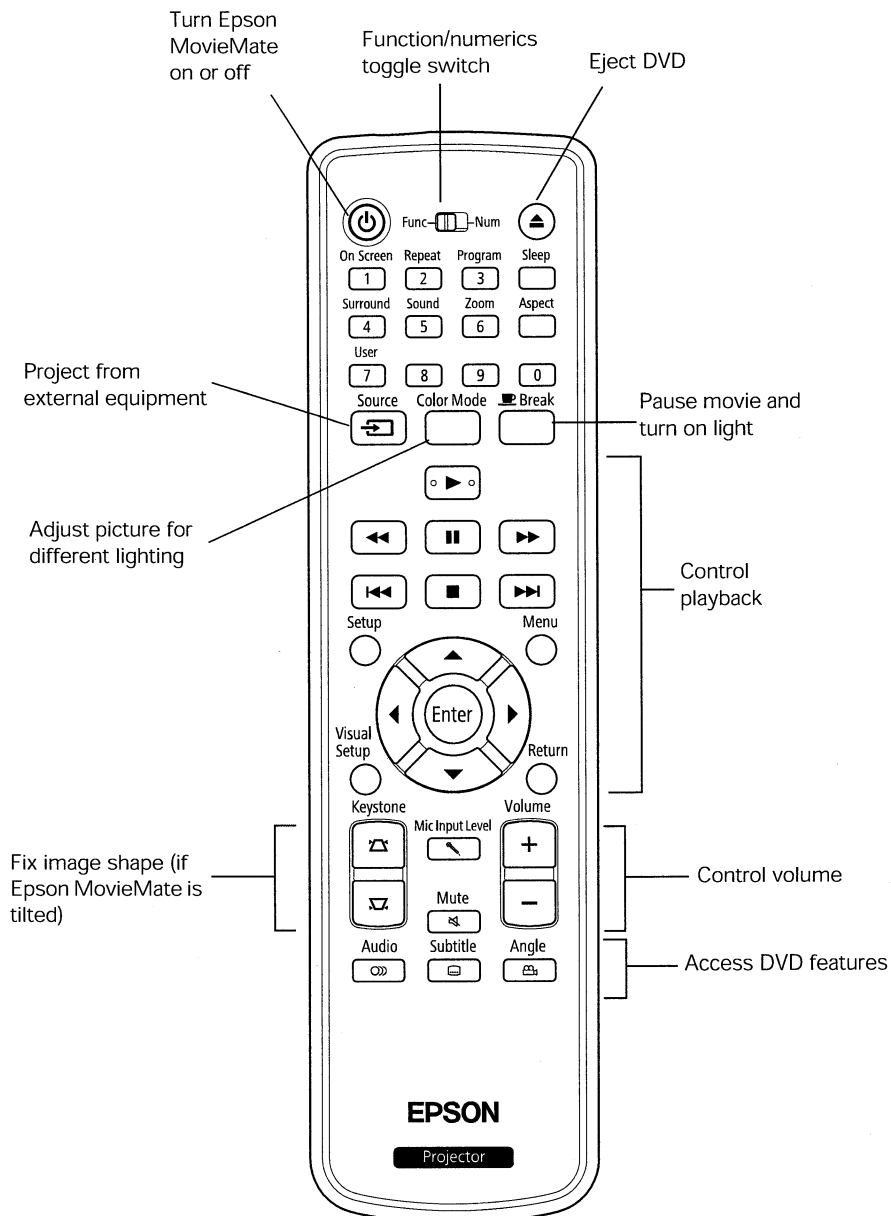

 
## Setting Up Epson MovieMate

1. If you have a screen, set it up following the instructions included with the screen. Make sure you read all the instructions to avoid damaging the screen.
2. Put the batteries in the remote control.

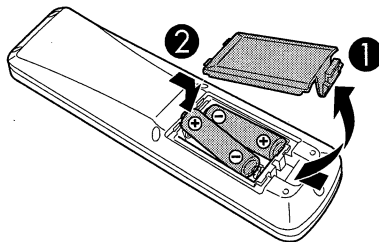


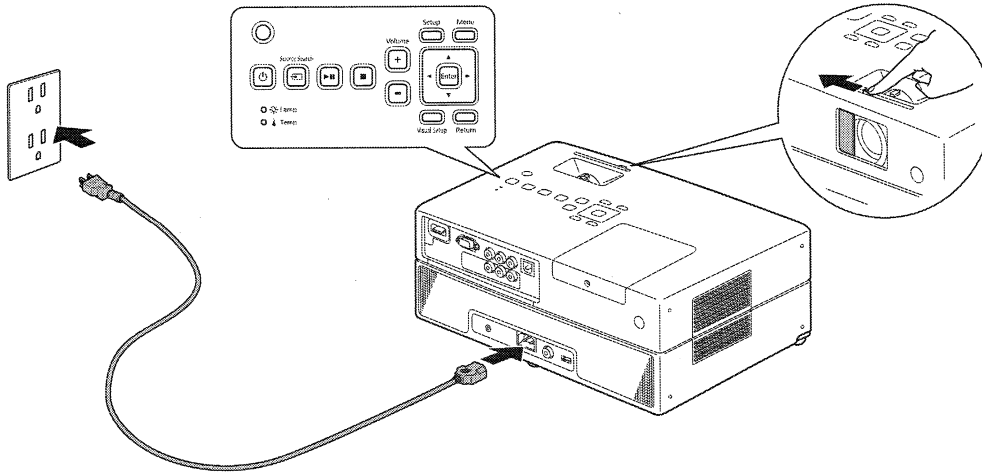 
**Note:** Use only AA-size alkaline or manganese dry batteries.

3. Reattach the battery cover.

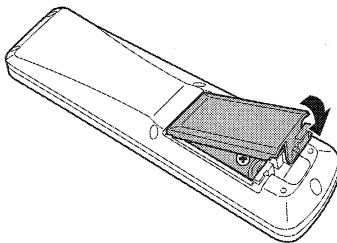

4. Expose the remote control to bright light for several minutes before using it in the dark. The buttons will glow in the dark briefly.



5. Open the lens cover, then connect the power cord and plug in the projector. The  light turns orange.



Once you've finished setting up Epson MovieMate, do one of the following:

- If you would like to play a DVD, see "Playing Movies" on page 23.
- If you would like to connect other equipment to the projector, see "Using Epson MovieMate with Other Equipment" on page 34.

### ***Turning the Projector Off***

1. If there is a disc inside the projector, eject it.
2. Press the  button on the projector or the  on the remote control. The projector will beep twice when it is finished powering off.

**Warning:** Do not disconnect the power cable before the projector beeps, or you may damage the projector.

3. Close the lens cover.