


Remote Control Function

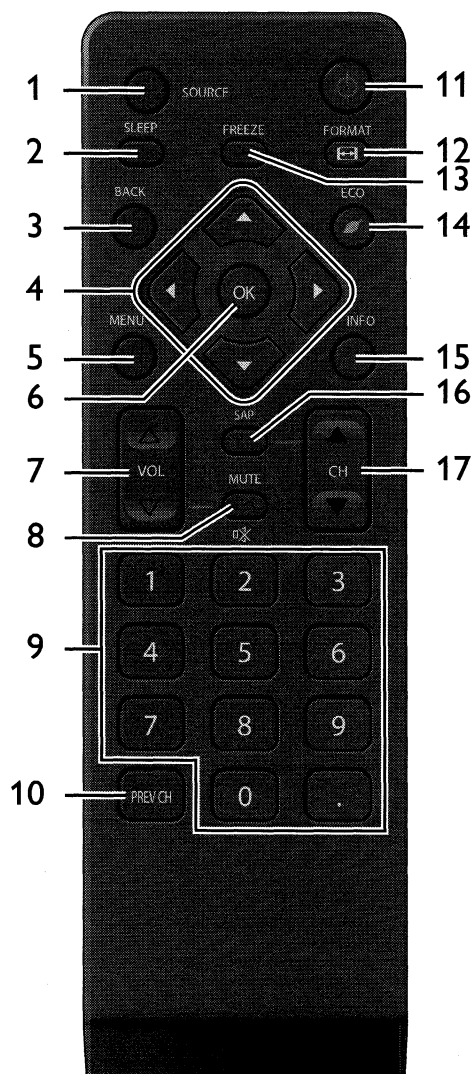

- | | | |
|----|---------------------------|---|
| 1 | SOURCE | ➡ p.16 |
| 2 | SLEEP | ➡ p.16 |
| 3 | BACK | ➡ p.18
Press to return to the previous menu operation. |
| 4 | ▲/▼/◀/▶ (cursor) | ➡ p.15 |
| 5 | MENU | ➡ p.19 |
| 6 | OK | ➡ p.15 |
| 7 | VOL ▲/▼ | ➡ p.16 |
| 8 | MUTE | ➡ p.16 |
| 9 | Number buttons
• (dot) | ➡ p.17
Press to shift the subchannel from the main channel. |
| 10 | PREV CH | ➡ p.17
Press to return to previously viewed channel. |
| 11 | ⏻ (power) | ➡ p.15 |
| 12 | FORMAT | ➡ p.17
Press to select aspect ratio available for the TV screen. |
| 13 | FREEZE | ➡ p.17
Press to freeze screen image. |
| 14 | ECO | ➡ p.18
Press to reduce the brightness. |
| 15 | INFO | ➡ p.18 |
| 16 | SAP | ➡ p.16 |
| 17 | CH ▲/▼ | ➡ p.17 |

When using a universal remote control to operate this unit.

- Make sure the component code on your universal remote control is set to our brand. Refer to the manual accompanying your remote control for more details.
- We do not guarantee 100% interoperability with all universal remote controls.

Battery Precautions:

- Be sure to follow the correct polarity as indicated in the battery compartment.
- Do not mix different types of batteries together (e.g. Alkaline and Carbon-Zinc, or rechargeable batteries like ni-cad, ni-mh, etc) or old batteries with fresh ones.
- If the device is not to be used for a long period of time, remove the batteries to prevent damage or injury from possible battery leakage.
- Do not try to recharge batteries; they can overheat and rupture.

Installing the Batteries

Install the batteries (AAA, 1.5V x 2) matching the polarity indicated inside battery compartment of the remote control.

