

## 3 - The Dual-Deck System

### Remote Control Overview

**\*Power** — Turns the VCR on and off. Note: Power will come on automatically when you insert a videotape (Auto Power On).

**Slow +/-** — In Play mode, increases or decreases the speed of slow motion playback.

**\*0-9** — Selects channels directly. In the Menu system, selects menu items.

**Trk ▲▼, Auto** — In Play mode, allows you to manually adjust tracking. Press Auto to resume Auto Tracking.

**Shuttle** — In Play mode, Shuttle → gradually increases the playback speed from double-speed playback to picture search to jet search. Shuttle ← gradually slows down the tape, pauses, then goes into reverse picture search and reverse jet search.

**\*100+** — Selects cable channels 100 and up.

**\*LCV (Last Channel Viewed)** — Displays the previously selected channel.

**Copy Tape** — Copies the tape in Deck 1 to the tape in Deck 2.

**VCR** — Sets the remote to operate your VCR.

**TV** — Sets the remote control to operate your television. Note: When selected, the remote will not operate the VCR. To program the remote, see Appendix A.

 
**TV/VCR** — Switches between your TV's tuner and your VCR's tuner; e.g., press when you are taping a show with the VCR and you want to watch another station on your television.

**F.Adv/Skip** — In Pause mode, advances the tape one frame for every press. In Play mode, jumps ahead one minute for every press (up to 5 minutes). In Copy mode, skip edits one minute for every press (up to 5 minutes).

**\*Channel ▲▼** — Changes channels up and down.

**\*Volume +/-** — Adjusts the sound level.

**\*Mute** — Turns audio on and off.

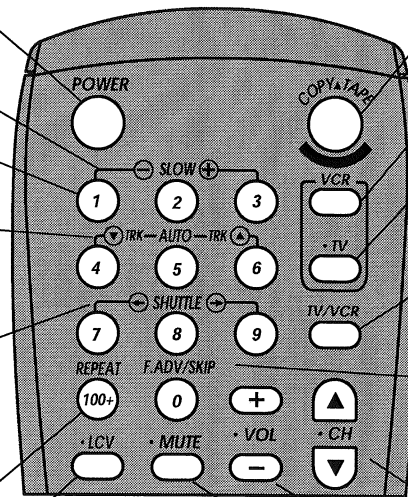

\* Keys marked with an asterisk can be used to operate your TV or VCR; see Appendix A to program your remote control.

**TV View** — Changes your view on the television between the Tuner, Deck 1, Deck 2 and Aux. This allows you to quickly jump between a TV show, videotape, DVD, etc.—at the touch of a button.

**Scene/Title** — Marks the beginning and ending points of scenes in the 8-Scene Editor. Also press to record On-Screen Titles.

**Rec** — Starts recording in the active deck. Press twice to activate One-Touch Recording.

**Set Timer** — Opens the Timer Recording Setup Menu.

**SP/SLP** — Sets the record speed to SP (Standard Play) or SLP (Super Long Play). SLP is three times longer than SP.

**Rew** — When the tape is stopped, rewinds the tape. When the tape is playing, visually searches the tape in reverse (Review).

**Deck1** — Sets Deck 1 as the active deck. All deck control buttons (Play, Rewind, etc.) will only affect Deck 1.

**Search/Index** — From Stop, Play, F.Forward, or Rewind, opens the Search/Index Menu. While recording, places an Index mark on the tape.

**Clear** — Resets the Tape Counter to 0:00:00. Also clears certain entries in the menu system.

**Display** — Turns the On-Screen Display (Clock, Tuner, Audio, and Deck status) on and off.

**CLK/CTR** — Changes the Front Panel Display between clock, tape counter, and time remaining.


**Play/Still** — Plays the tape. In Play or Record mode, pauses the tape in the source deck.

**F.F.** — When the tape is stopped, fast-forwards the tape. When the tape is playing, visually searches the tape forward (Cue).

**Menu** — Opens the Main Menu. Press and hold for three seconds to open the Setup Menu

**Stop/Eject** — Stops the tape in the active deck. Press twice to eject the tape.

 **Deck2** — Sets Deck 2 as the active deck. All deck control buttons (Play, Rewind, etc.) will only affect Deck 2.

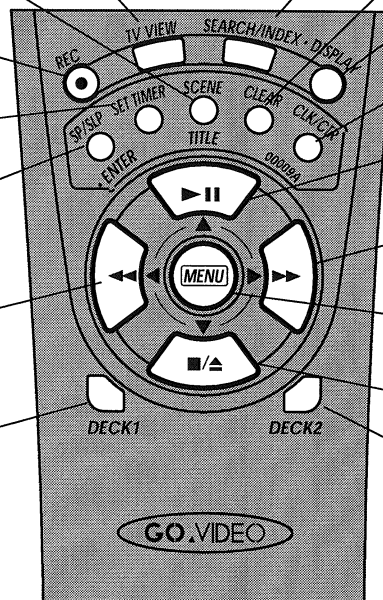


*Deck Control Section*

## Multi-Brand Remote Setup

 You can program your remote control to operate many popular brands of televisions. Find your TV on the list at right and follow the instructions for setup. To determine which remote control buttons are available to control your TV, see the table on the following page.


### 1 Turn On TV

Press the power button on your TV.

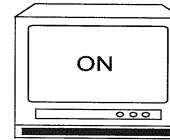

### 2 Program Code

 Press and hold down the TV button while entering the 2-digit code for your brand of television with the 0-9 keys (see table). Note: If there is more than one code for your brand of TV, try them all until one works.

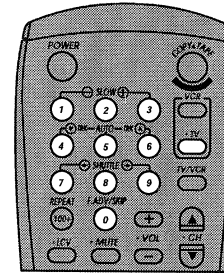


### 3 Check Your Results

If the TV advances to the next active channel, programming is complete! If the TV does not respond, try another 2-digit code. Some TV's are not listed but can be programmed.

### 4 Operate Your TV

 Press TV to set the remote control to operate your TV. Note: When the remote control is in TV mode, it will NOT operate your VCR. To return to VCR mode, press VCR on the remote control.

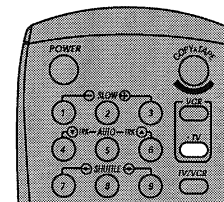


#### TV CODES

Daewoo	TV + 19
Emerson	TV + 21
Hitachi	TV + 10
JVC	TV + 11
LG	TV + 08
	TV + 18
LG (Goldstar)	TV + 06
Loewe	TV + 28
Magnavox	TV + 04
Mitsubishi	TV + 13
Newsan (S. America)	TV + 27
Noblex (S.America)	TV + 25
Panasonic	TV + 12
	TV + 24
RCA	TV + 07
	TV + 29
Samsung	TV + 01
	TV + 14
	TV + 15
	TV + 23
Sanyo	TV + 05
	TV + 20
Sharp	TV + 02
	TV + 16
	TV + 22
Sony	TV + 03
Telefunken (S. America)	TV + 26
Toshiba	TV + 09
Zenith	TV + 17

# Multi-Brand Remote Operation

 This table shows which remote control buttons are available for various brands of television.

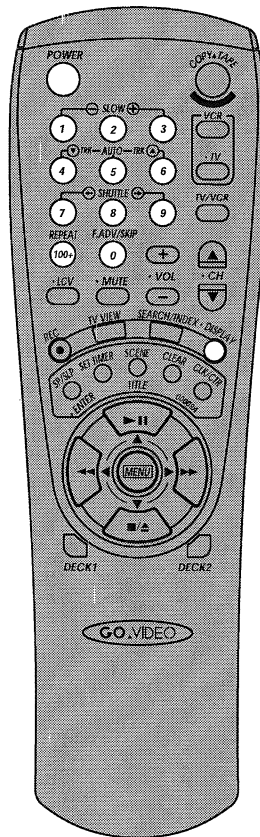

Multi-brand Remote Control

	Power	0-9	100+	Ch+/-	Vol+/-	Display
Daewoo	•	•	•	•	•	•
Emerson	•	•	•	•	•	•
Goldstar	•	•	•	•	•	•
Hitachi	•	•		•	•	
JVC	•	•		•	•	•
Magnavox	•	•		•	•	
Mitsubishi	•	•		•	•	•
Panasonic	•	•		•	•	•
RCA/GE	Off	•		•	•	•
Samsung	•	•		•	•	
Sanyo	•	•	•	•	•	•
Sharp	•	•	•	•	•	•
Sony	•	•		•	•	•
Toshiba	•	•	•	•	•	
Zenith	•	•	•	•	•	