

 
BRAND	TV CODE
Daewoo	19
Emerson	21
Hitachi	10
JVC	11
LG	08, 06, 18
Loewe	28
Magnavox	04
Matsushita	24
Mitsubishi	13
Newsan	27
Noblex	25
Panasonic	12
RCA	07, 29
Samsung	01, 14, 15, 23
Sanyo	05, 20
Sharp	02, 22
Sony	03
Telefunken	26
Toshiba	09
Zenith	17

Locate the TV Code(s) for your brand of television.


STEP 7 - PROGRAM REMOTE TO OPERATE TV

You can program the DHT7100 remote control to operate many brands of television.

- Find the TV code(s) for your brand of television.
 - If your brand is not listed, you will not be able to program the remote.
- Point the remote at your television.
- While holding down the TV POWER ⏻ button, press the 2-digit number listed for your brand of television.

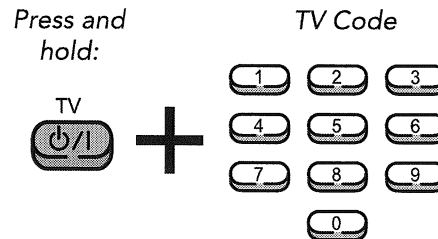

- If your TV powers on or off, programming is complete.
 - If the TV did not power on or off, try the other codes for your brand until you find one that works.
 - Not all TV models can be programmed.

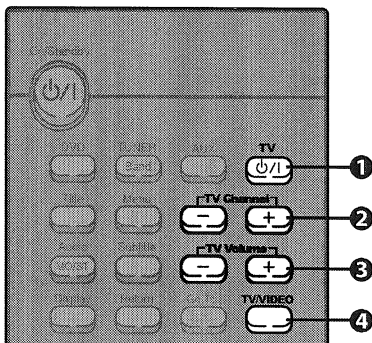


Use these keys to control your television.

TV Control Keys

Once the remote is programmed, use the following keys to control your television:

- Press the TV POWER ⏻ button to power your TV on or off.
- Press the TV CHANNEL +/- buttons to select the next or previous channel on your television.
- Press the TV VOLUME +/- buttons to adjust the volume level on your television.
- Press the TV/VIDEO button to select the TV's video input(s).

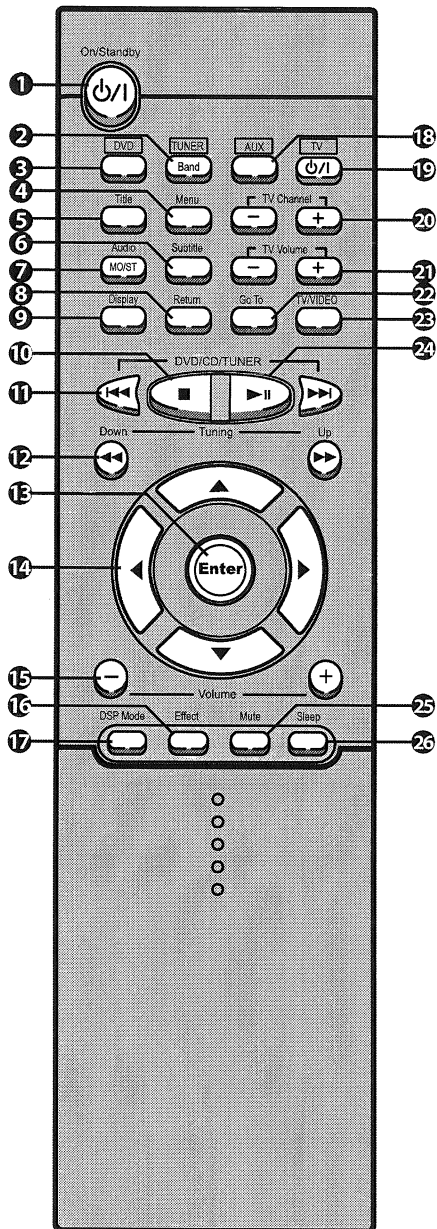

REMOTE CONTROL (TOP SECTION)

- 1 Power On/Standby ϕ /I button, p. 4
- 2 TUNER (Band) button, p. 7
- 3 DVD button, p. 7
- 4 Menu button, p. 8
- 5 Title button, p. 14
- 6 Subtitle button, p. 15
- 7 Audio (Mono/Stereo) button, p. 15
- 8 Return button, p. 8
- 9 Display button, p. 13
- 10 Stop \blacksquare button, p. 9
- 11 Skip Back \lll button, Skip Forward \ggg buttons, p. 9
- 12 Tuning Down (Scan Back) \lll button, Tuning Up (Scan Forward) \ggg buttons, p. 9, 10
- 13 Enter button, p. 8
- 14 Arrow \blacktriangle / \blacktriangledown / \blacktriangleleft / \blacktriangleright buttons, p. 8
- 15 Volume +/- buttons, p. 10
- 16 Effect button, p. 19
- 17 DSP button, p. 19
- 18 AUX button, p. 7
- 19 TV Power ϕ /I button, p. 5
- 20 TV Channel +/- buttons, p. 5
- 21 TV Volume +/- buttons, p. 5
- 22 Go To button, p. 14
- 23 TV/VIDEO button, p. 5
- 24 Play/Pause \blacktriangleright || button, p. 8
- 25 Mute button, p. 10
- 26 Sleep button, p. 18