 


Quick Reference Remote Control Buttons and Functions

 
In addition to controlling all of the functions on your Hitachi LCD TV, the new remote control is designed to operate different types of compatible HDMI CEC DVD Players. For HDMI CEC details please see page 31.

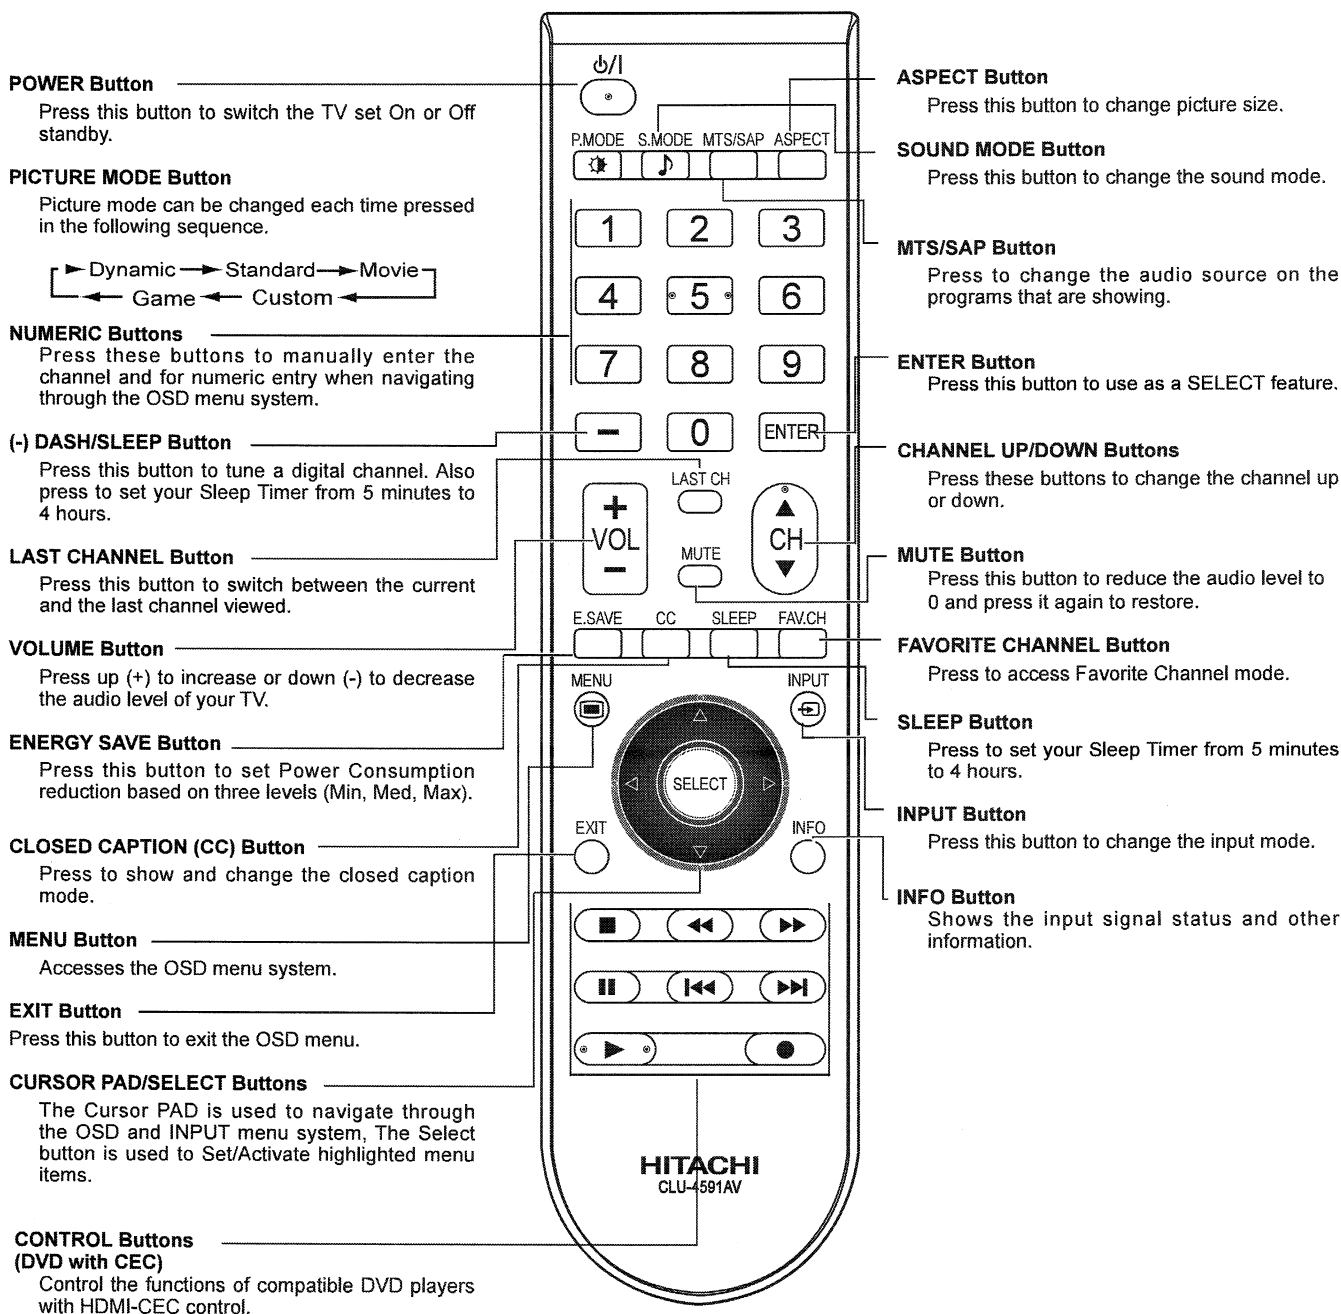

NOTES

- The TV's remote control sensor is located on the left bottom corner of the TV frame. To control TV functions, please point the remote control directly at the sensor for best results.
- The pause button "II" on the remote control can be used to Freeze the picture on the screen, in case that this button is pressed by accident, please press it one more time to restore the moving picture.

The Remote Control

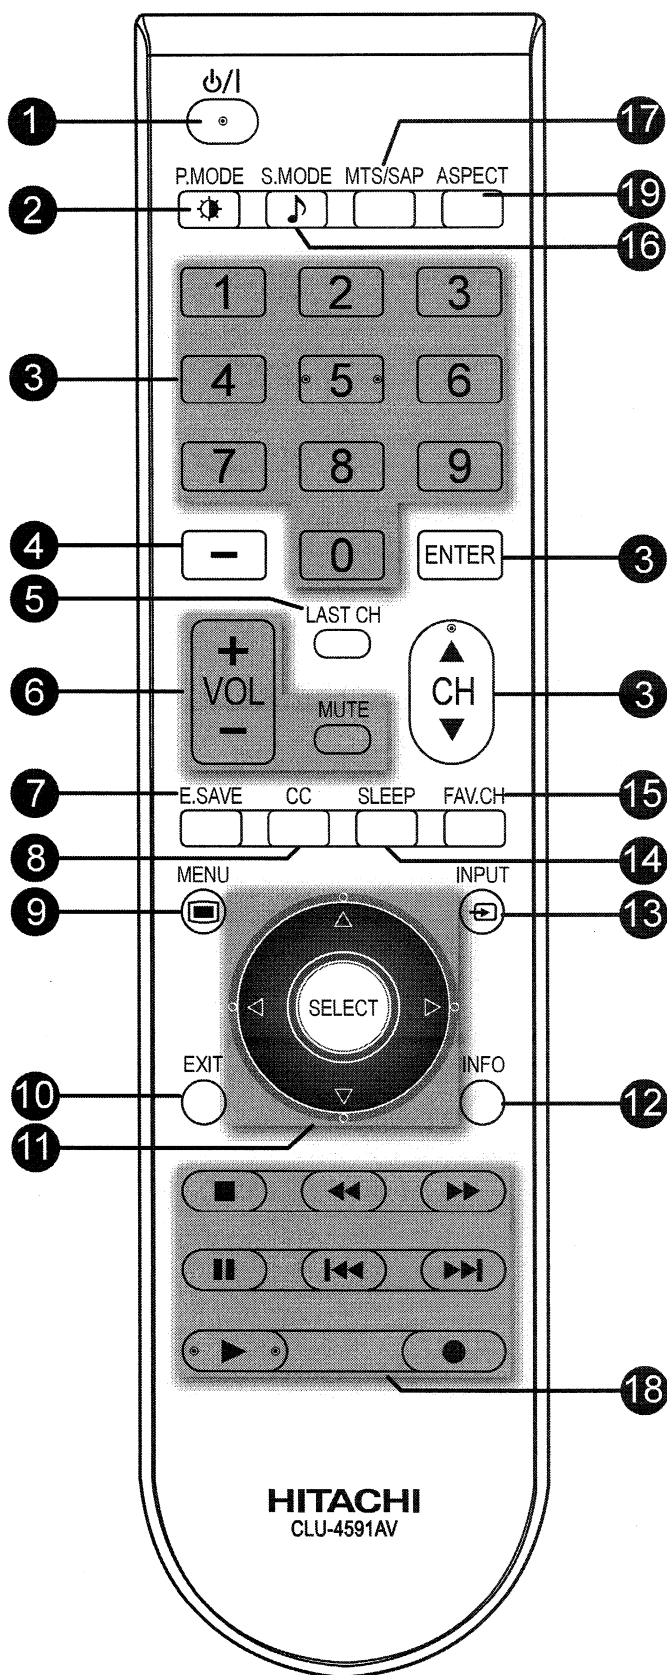

1 POWER Button

Press this button to turn the TV set on or off.

2 PICTURE MODE (P.MODE) Button

Press this button to toggle between Dynamic, Standard, Movie, Custom and Game picture mode settings. Select Dynamic mode for automatic brightness and contrast adjustment. Select Standard mode for day time viewing with more brightness and contrast to compete with room light. Select Movie mode for viewing with less brightness and contrast for a more detailed picture. Select Custom mode for viewing with your own brightness and contrast picture settings. Game mode for automatic brightness and contrast adjustment when playing video games. (see page 24 for settings changes).

3 CHANNEL SELECTOR / ENTER Buttons

The CHANNEL SELECTOR buttons are used to select channels, lock access code, etc. Use the CHANNEL SELECTOR buttons to enter one, two, or three numbers to select channels. Enter 0 first for channels 1 to 9, or simply press the single digit channel you wish to tune, then press the ENTER button for the TV to tune. Channel selection may also be performed by CHANNEL (CH) UP (▲) or CHANNEL (CH) DOWN (▼).

4 (-) DASH /SLEEP Button

 
 
Use the (-) DASH button with the CHANNEL SELECTOR buttons to enter Digital Channels that have subchannel numbers indicated by (-) DASH (example 15-1). Also press to Set the Sleep Timer from 5 minutes to 4 hours.

5 LAST CHANNEL Button

Press this button to toggle between the current and last channel viewed.

6 VOLUME (VOL), MUTE Button

Press the VOLUME button (+ or -) until you obtain the desired sound level.
Press the MUTE button to turn the sound off completely (MUTE). To restore the sound, press the MUTE button one more time, or VOL UP (+).

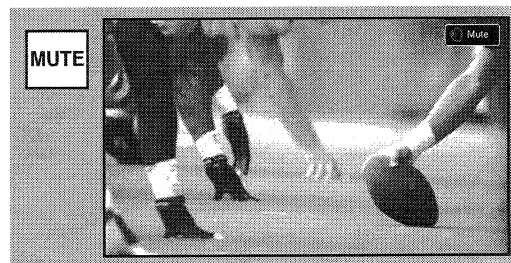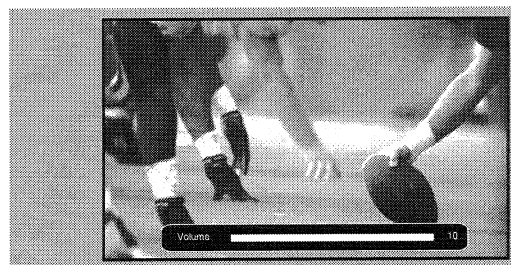

How To Use The Remote Control To Control Your TV

Closed Captioning will display automatically when MUTE is on and Closed Caption is set to With Mute (see page 30). When the TV power is turned off at a volume level 16 or greater, the volume level will default to 15 when the TV is turned on. However, if it is set to a level 15 or less, the volume level will be at the level it was set when the TV was turned off

7 ENERGY SAVE (E.SAVE) Button

Use this button to choose power consumption reduction settings based on 3 levels (MIN., MEDIUM, MAX).

8 CLOSED CAPTIONS (CC) Button

Use this button to display the dialogue, narration, and/ or sound effects of a television program or home video which are displayed on the TV screen when available. Your local TV program guide denotes these programs as  or .

9 MENU Button

The MENU button will start the On-Screen Display.

10 EXIT Button

This button will exit all On-Screen Displays.

11 CURSOR PAD /SELECT Button

All the On-Screen Display features can be set or adjusted by using the CURSOR PAD and the SELECT button, except for numeric entries. Press the CURSOR PAD toward desired direction and press the SELECT button to select.

12 INFO Button

 
 
Press this button when you want to check the channel being received, the picture source, if the channel has stereo (ST) or second audio program (SAP), the time, and CHANNEL ID.

NOTES


- Press the INFO button again or the EXIT button to return to normal viewing.
- The Aspect INFO will not be shown when the INFO button is pressed

13 INPUT Button


Press this button to access the INPUTS menu. Use the CURSOR PAD and SELECT buttons to scroll and select the inputs that are being used. Pressing the INPUT button repeatedly will also cycle through the Inputs menu items. Then press the SELECT button or wait 4 seconds to automatically select the highlighted input.

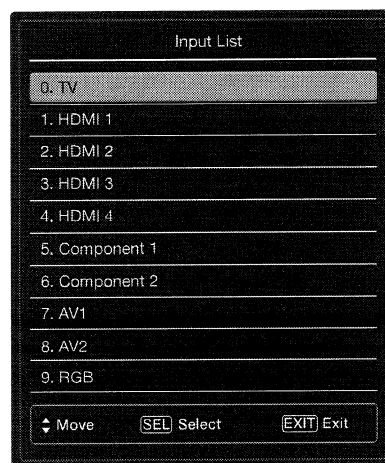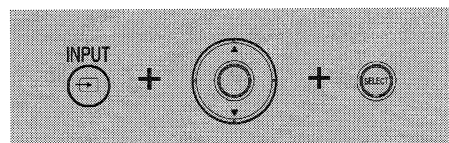


ANALOG CHANNELS

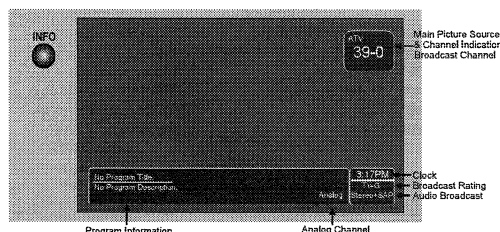 

DIGITAL CHANNELS

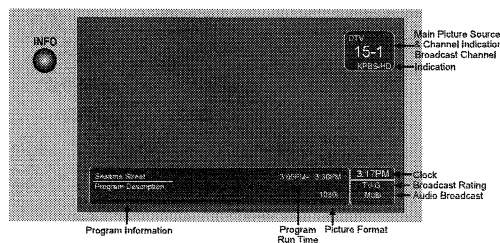 

VIDEO INPUTS

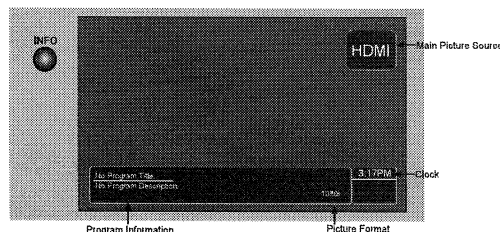 

- | | |
|----------------|---------------------------------------|
| 0. TV | Watch TV from an Air or Cable signal. |
| 1. HDMI 1 | Select to choose HDMI 1 Input. |
| 2. HDMI 2 | Select to choose HDMI 2 Input. |
| 3. HDMI 3 | Select to choose HDMI 3 Input. |
| 4. HDMI 4 | Select to choose HDMI 4 Input. |
| 5. Component 1 | Select to choose Component Input 1. |
| 6. Component 2 | Select to choose Component Input 2. |
| 7. AV 1 | Select to choose AV1 Input. |
| 8. AV 2 | Select to choose AV2 Input. |
| 9. RGB | Select to choose PC input. |

 
14 SLEEP Button

Press this button to set the Sleep Timer from 5 minutes to 4 hours.

How To Use The Remote Control To Control Your TV

15 FAVORITE CHANNEL (FAV.CH) Button

Press the FAV.CH button to display the Favorite CH List. You have to first setup the Favorite Channels in the Channels Menu in order display the list. Press the FAV.CH button on the remote control to display the list and select the desired channel using the CURSOR PAD and then press SELECT button to view.

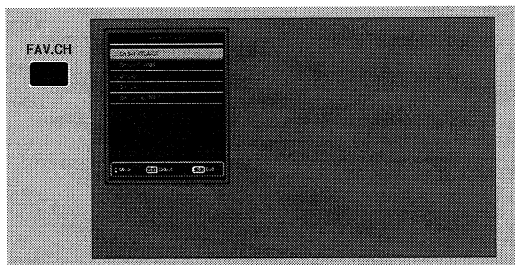

16 SOUND MODE (S. MODE) Button

Press this button to change the sound mode. There are 4 modes available, Custom, Standard, Movie and News. Selecting the Custom Mode allows you to set the audio options to your preference..

17 MTS/SAP Button

Press to change the audio source on the programs that are showing. For analog channels the signal choices(if available) are Stereo, SAP, and Mono. For digital channels this button will change the language(when available). (English, Spanish, etc.).

18 CEC DEVICE Buttons

These buttons can control external devices (i.e. PVR/VCR, DVD, etc.) directly depending on the device mode set on the remote control. Also, these buttons are for controlling devices with Consumer Electronics Control (CEC) through the HDMI connection like Blu-Ray or DVD players, PRV, set top box while in TV mode.

NOTE

For some devices, these buttons are not available to control through the TV and HDMI connection; please refer to the device's owners guide for more information.

How To Use The Remote Control To Control Your TV

19 ASPECT Button

Press this button to quickly change the picture format ASPECT ratio. Depending on the input picture format, ASPECT allows you to adjust the image through the following options.

Auto

Use this aspect mode to have the aspect mode change automatically by signal detector.

4:3

Use this aspect mode to display conventional (4:3) images. Side panels (black areas) are placed to the left and right of the image to preserve the original aspect ratio of the source.

16:9

Use this aspect mode to display 16:9 sources like HDTV and DVD's preserving the original 16:9 aspect ratio showing 95% of the size.

 
Full

Use this aspect mode to display 16:9 sources like HDTV and DVD's preserving the original 16:9 aspect ratio showing 100% of the size.


Zoom1/Zoom2

Use these aspect modes to zoom in and to reduce the black bars.


- AIR/CABLE - Analog Signal
- AIR/CABLE - Digital Signal
- COMPONENT

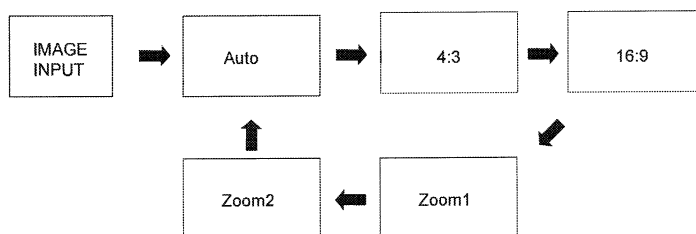


- AV

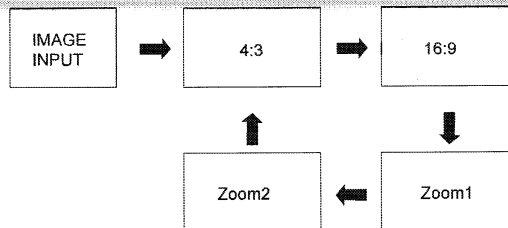 

- HDMI - VGA
- DVI - VGA
- RGB

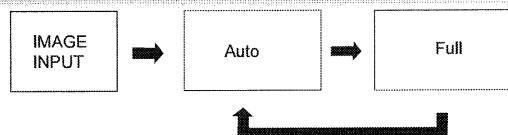 

 - HDMI - 1080p/1080i/720p/480p/480i
- DVI - 1080p/1080i/720p/480p/480i

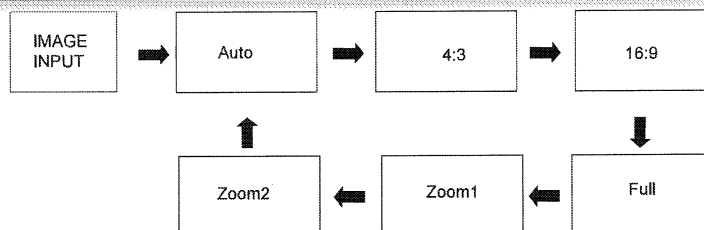

NOTES

- Each input has memory for the Aspect setting. Changing the aspect on one input will not affect the aspect settings on other inputs.
- When displaying "Full" you may notice noise at the top of the picture. Select the "16:9" aspect mode to remove the noise. The noise is normal for some signals.
- See page 49 for Aspect availability according to signal format in use.