


Quick Reference Remote Control Buttons And Functions

In addition to controlling all of the functions on your Hitachi LCD TV, the new remote control is designed to operate different types of devices, such as, DVD Players, cable boxes (CBL), set top boxes, satellite receivers (SAT), VCRs and compatible HDMI CEC DVD Players. The remote control must be programmed to control the chosen device. Please see pages 22~27 for a complete description of all features and programming of the remote control.

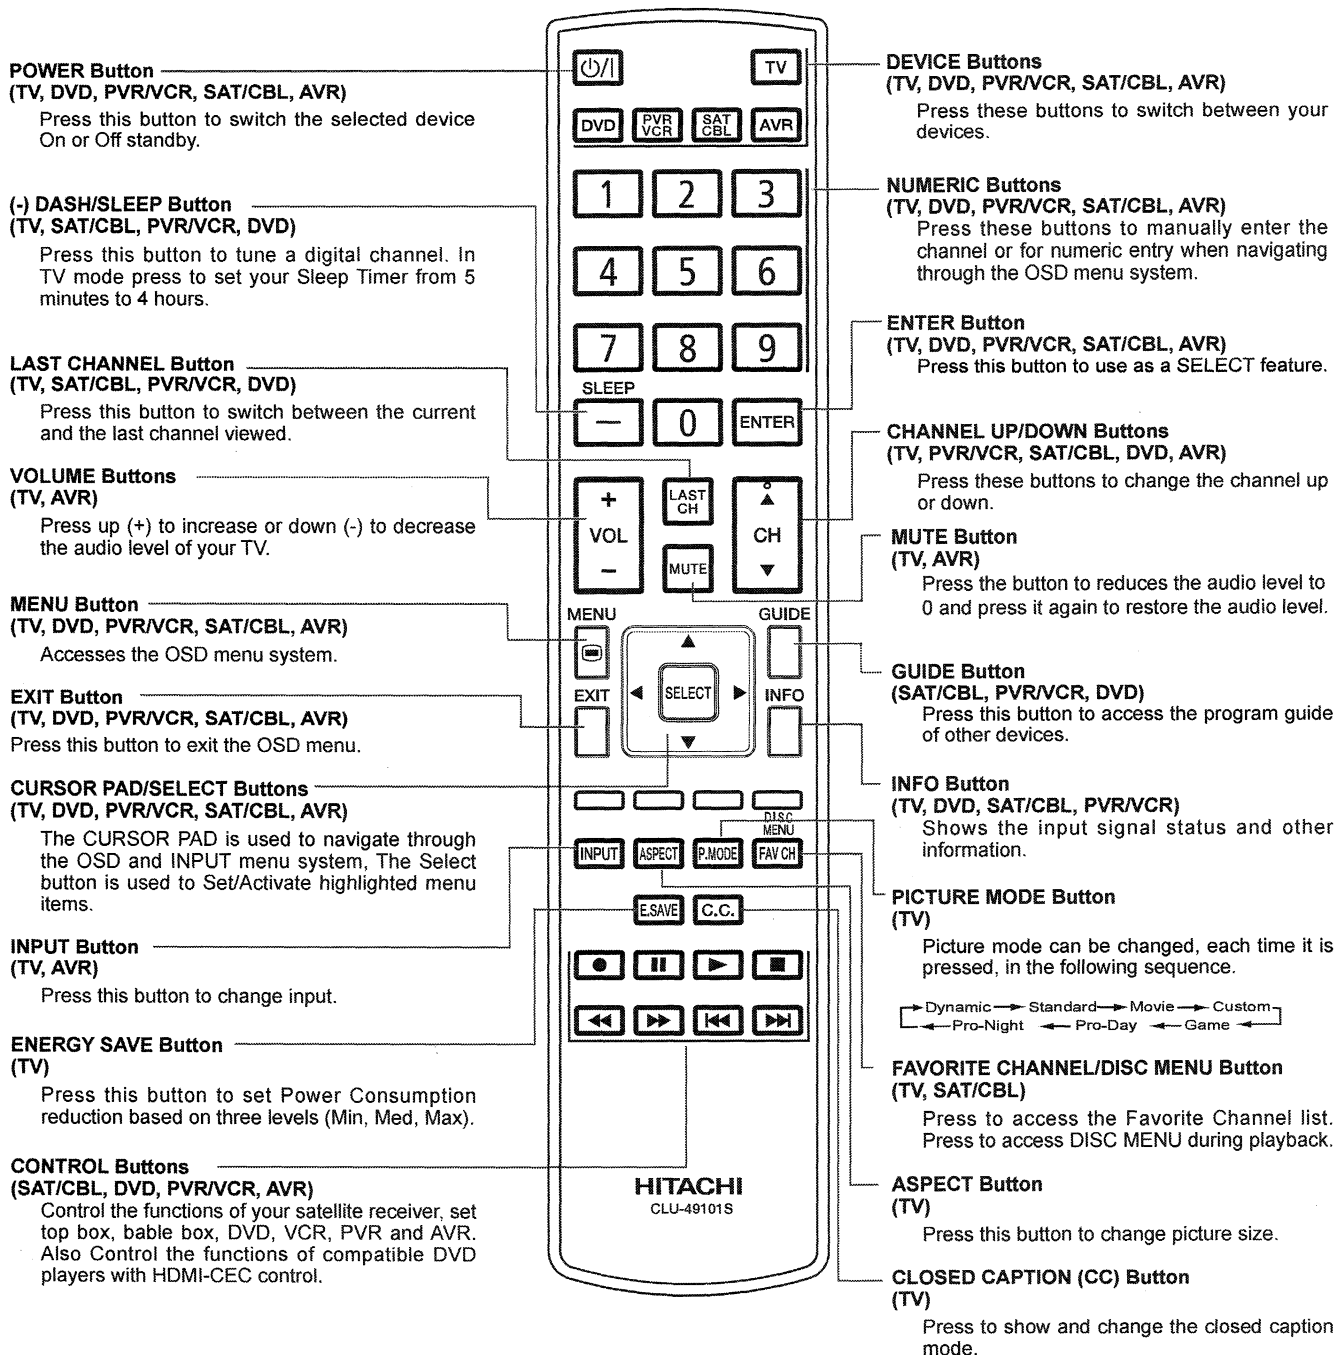


LEGENDS

- TV - Television
- DVD- Digital Video Disc Player
- AVR - Audio/Video Receiver
- VCR - Video Cassette Recorder
- SAT - Satellite Receiver
- PVR - Personal Video Recorder
- CBL - Cable Box

NOTES

- The TV's remote control sensor is located on the right bottom corner of the TV frame. To control TV functions, please point the remote control directly at the sensor for best results.
- The pause button "II" on the remote control can be used to freeze the picture on the screen, in case this button is pressed by accident, please press it one more time to restore the moving picture.
- For HDMI CEC details, please see page 38.

The Remote Control

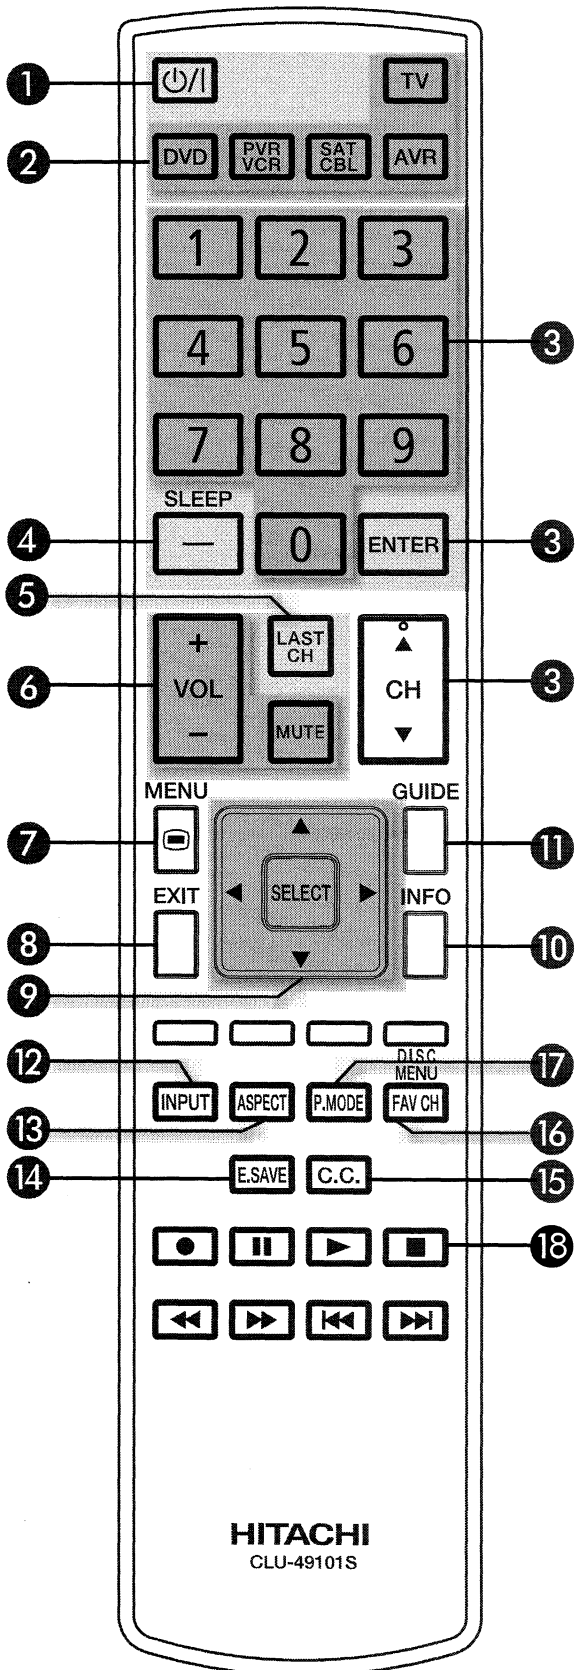

1 POWER Button

Press this button to turn the TV set on or off.

2 DEVICE Buttons

In addition to controlling all the functions on your Hitachi LCD TV, the new remote control is designed to operate different types of VCRs, cable boxes, set top boxes, satellite receivers, DVD players, and other audio/video device with one touch. Basic operation buttons are grouped together in one area.

To operate your LCD TV, select TV by pressing the TV button on the remote control. The TV mode indicator will blink, indicating that the remote control will now control your television.

Repeat the same procedure for other devices. Press the DVD button for DVD players, press the PVR/VCR button for personal video recorders, press the SAT/CBL button for satellite/cable boxes, and press the AVR button for audio video receivers.

See pages 22~27 for instructions on how to program the remote control to control your device.

3 CHANNEL SELECTOR/ENTER Buttons

The CHANNEL SELECTOR buttons are used to select channels, lock access code, etc. Use the CHANNEL SELECTOR buttons to enter one, two, or three numbers to select channels. Enter 0 first for channels 1 to 9, or simply press the single digit channel you wish to tune, then press the ENTER button for the TV to tune. Channel selection may also be performed by CHANNEL (CH) UP (▲) or CHANNEL (CH) DOWN (▼).

4 (-) DASH/SLEEP Button

Use the (-) DASH button with the CHANNEL SELECTOR buttons to enter Digital Channels that have subchannel numbers indicated by (-) DASH (example 15-1). Also press to Set the Sleep Timer from 5 minutes to 4 hours.

5 LAST CHANNEL (LAST CH) Button

Press this button to toggle between the current and last channel viewed.

6 VOLUME (VOL), MUTE Button

Press the VOLUME button (+ or -) until you obtain the desired sound level.

Press the MUTE button to turn the sound off completely (MUTE). To restore the sound, press the MUTE button one more time, or VOL UP (+).

